

UC902 Usermanual



Notices Information

Copyright

Copyright © 2005 - 2017 Nanjing Hanlong Technology CO., LTD. All rights reserved.

Nanjing Hanlong Technology CO., LTD. owns all the right to revise and change this document at any time. And all the illustrations and instructions in this paper are subject to the copyright protection of legal law. No parts of this document may be used or reproduced, transmitted by the third parties for any purposes without the express written permission of Nanjing Hanlong Technology CO., LTD.

When this document is made available on www.htek.com , Nanjing Hanlong Technology Co., LTD. gives its right to download and print copies of this content only for private use as a user manual. No parts shall have the right to alter, modify or use as commercial means without the express written permission of Nanjing Hanlong Technology CO., LTD.

Safety cautions

- To use the Phone follow the instructions in this manual.
- To use the power adapter that delivered with the phone. Other power adapters may damage the phone.
- The phone is only for indoor use. And also avoid in high humidity, water and some other liquids.
- Do not use the phone during thunderstorms.
- CE
- FCC

WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Cleaning

To clean the device, use an anti-static cloth. Please avoid cleaning liquids as they might damage the surface or internal electronics of the phone.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Summary of changes

This section describes the changes to this user manual for each release and user manual version.

Change for Release x.0.4.2, Manual version x.0.4.2

Major updates have occurred to the following sections:

- [IPv6](#)
- [IPv4&IPv6](#)

Change for Release x.0.4.0.10, Manual version x.0.4.0.10

Major updates have occurred to the following sections:

- [Label Scroll](#)

Change for Release x.0.3.98.O, Manual version x.0.3.98.O

Major updates have occurred to the following sections:

- [Reboot in Talking](#)

Change for Release x.0.3.98.A, Manual version x.0.3.98.A

Major updates have occurred to the following sections:

- [Auto Logout Time](#)

Change for Release x.0.3.98, Manual version x.0.3.98

Major updates have occurred to the following sections:

- [Daylight Saving Time](#)

Change for Release x.0.3.93, Manual version x.0.3.93

Major updates have occurred to the following sections:

- [Check-Syn With Authenticate](#)
- [Call Back](#)

Change for Release x.0.3.88,Manual version x.0.3.88

Major updates have occurred to the following sections:

- [Detect IP Conflict](#)

Change for Release x.0.3.72,Manual version x.0.3.72

Major updates have occurred to the following sections:

- [Voice Mail Tone](#)
- [Backup NTP Server](#)
- [Intercom Barge](#)

Change for Release x.0.3.65,Manual version x.0.3.65

Major updates have occurred to the following sections:

- [Redial Mode](#)

Change for Release x.0.3.63,Manual version x.0.3.63

Major updates have occurred to the following sections:

- [Suppress DTMF Display](#)
- [Suppress DTMF Display Delay](#)

Change for Release x.0.3.62,Manual version x.0.3.62

Major updates have occurred to the following sections:

- [Auto Redial](#)

Table of Content

Notices Information.....	2
Copyright.....	2
Safety cautions.....	2
WEEE Warning.....	2
Cleaning.....	3
FCC Statement.....	3
Summary of changes.....	4
Change for Release x.0.4.2,Manual version x.0.4.2.....	4
Change for Release x.0.4.0.10,Manual version x.0.4.0.10.....	4
Change for Release x.0.3.98.O,Manual version x.0.3.98.O.....	4
Change for Release x.0.3.98.A,Manual version x.0.3.98.A.....	4
Change for Release x.0.3.98,Manual version x.0.3.98.....	4
Change for Release x.0.3.93,Manual version x.0.3.93.....	4
Change for Release x.0.3.88,Manual version x.0.3.88.....	5
Change for Release x.0.3.72,Manual version x.0.3.72.....	5
Change for Release x.0.3.65,Manual version x.0.3.65.....	5
Change for Release x.0.3.63,Manual version x.0.3.63.....	5
Change for Release x.0.3.62,Manual version x.0.3.62.....	5
Table of Content.....	6
Getting Started.....	10
Packing List.....	10
Phone Installation.....	12
1. Attach the Foot stand.....	12
2. Connect the Handset and optional Headset.....	12
3. Connect the Network and Power.....	13
Initialization.....	13
Status.....	14
Registration.....	15
Idle Screen.....	17
Getting Familiar with Your Phone.....	18
Hardware Components Preview.....	18
Icon Preview.....	20
LED Instruction.....	21
Power Indicator LED.....	21
Line LED:(Line or Line Key set as Line).....	22
BLF or BLF List Key LED :(Line/Line Key set as BLF).....	22
Shared Line Key LED:.....	22
Other Key Led.....	23
User Interface.....	23
Line Key Function Overview.....	25

Basic Features Configuration.....	27
General Settings.....	27
Web Login.....	27
Administrator Password.....	28
Language.....	29
Screen Saver.....	30
Gray Level.....	32
Time and Date.....	32
LED Status Setting.....	36
Key as Send.....	37
Network Setting.....	37
IPv4.....	38
IPv6.....	40
IPv4&IPv6.....	42
PC Port.....	43
Contact Settings.....	44
Local Directory.....	44
Remote Phonebook.....	47
LDAP Phonebook.....	48
Search Contact.....	50
Call History Settings.....	52
Call History.....	52
Audio settings.....	54
Ring Tone.....	54
Volume.....	55
Voice Mail Tone.....	56
Play Hold Tone.....	57
Play Hold Tone Delay.....	57
System Settings.....	57
Dial Plan.....	57
Dial-Now Timeout.....	59
No Key Entry Timeout.....	59
Emergency Call.....	60
Label Scroll.....	61
Show Missed Calls.....	61
Auto Logout Time.....	62
Reboot in Talking.....	62
Detect IP Conflict.....	62
Redial Mode.....	63
Keypad Lock.....	63
Suppress DTMF Display.....	64
Suppress DTMF Display Delay.....	65
Check-Syn With Authenticate.....	65
Other features settings.....	65

Action URL.....	65
Softkey Layout.....	66
Programmable Key.....	67
Basic Call Features.....	68
Place a Call.....	68
End a Call.....	70
Receive a Call.....	70
Incoming Call Show Mode.....	71
Auto Answer.....	72
Call Hold.....	73
Call Transfer.....	73
Call Conference.....	76
Call Forward.....	77
Call Return.....	80
Call Back.....	81
Call Waiting Tone.....	82
Hide Caller ID.....	83
Reject Anonymous.....	84
Call Mute.....	84
DND.....	85
Keypad Lock.....	85
Hot Line.....	87
Auto Redial.....	88
Function Key Features Settings.....	89
Line.....	89
Speed Dial.....	90
BLF.....	91
BLF List.....	92
Voice Message.....	94
Direct Pickup.....	94
Group Pickup.....	95
Call Park.....	96
Intercom.....	97
Intercom Barge.....	98
DTMF.....	99
Prefix.....	100
Local Group.....	101
XML Group.....	102
LDAP.....	103
Broadsoft Group.....	104
Conference.....	104
Forward.....	105
Transfer.....	106
Hold.....	107


Group Listening.....	107
DND.....	108
Redial.....	109
SMS.....	109
Send SMS.....	109
Set SMS Line Key.....	110
Record.....	111
URL Record.....	111
Paging.....	112
Shared Line.....	113
Public Hold.....	114
Private Hold.....	115
Share line.....	115
Hot Desking.....	117
ACD.....	118
Zero Touch.....	119
Multicast Paging.....	120
Sending RTP Stream.....	121
Receiving RTP Stream.....	121
Upgrade.....	123
Factory Reset.....	123
Pcap Feature.....	124
System Log.....	125
Upgrade.....	125
Configuration File.....	127
Troubleshooting.....	128
Why is the phone LCD screen blank?.....	128
Why does the phone display "Network Unavailable"?.....	128
Why can't I get a dial tone?.....	128
Where to set the tone?.....	129
How to download XML Configuration?.....	129
How to Import Trusted CA certificate?.....	129
How to Import Server CA certificate?.....	130
How to use Vlan?.....	130
How to use LLDP?.....	131
How to Set LCD and Web GUI?.....	131
How to Upgrade via FTP?.....	131
How to make Ringtone?.....	131
How to use Open VPN?.....	131
Provisioning Guide on Free PBX.....	131
Redundancy Server.....	131
How to Use Auto Provision Phonebook?.....	132
All Documents.....	132

Getting Started


Packing List

The package contains the following parts, please check if all the items are not missed:


1. The phone device

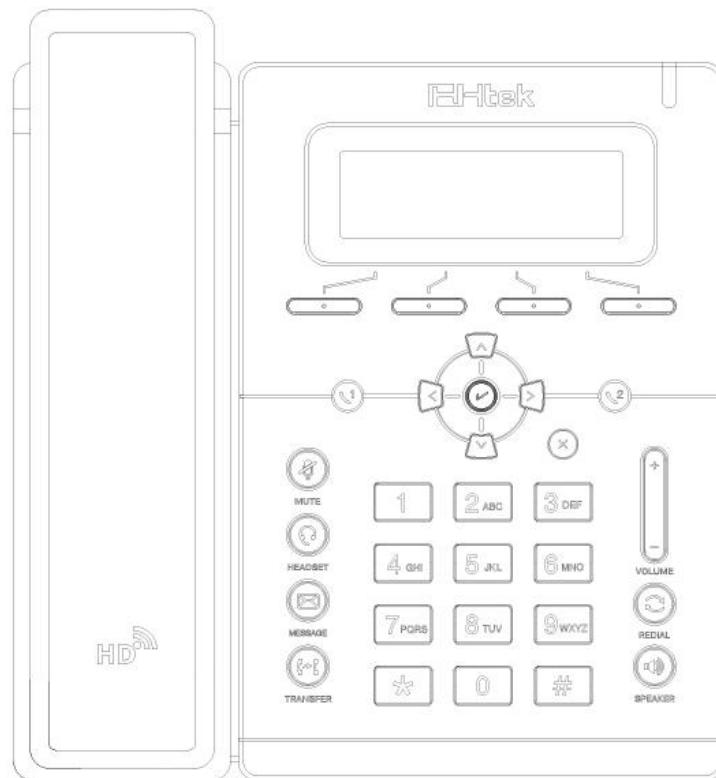


2. The footstand

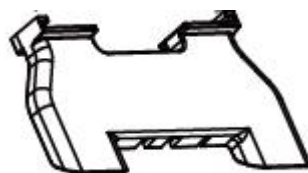


3. Handset




4. Headset cord

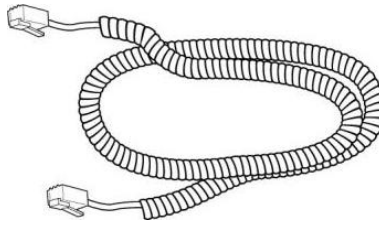

5. Power adapter

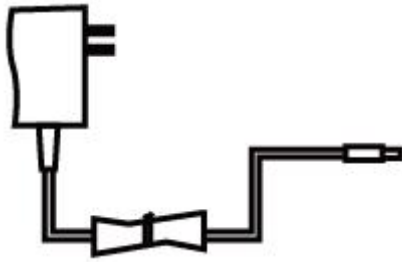

6. Ethernet cable

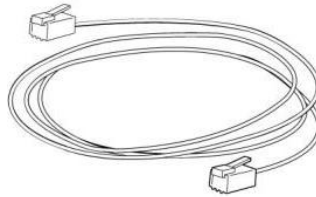


7. Quick installation reference




Phone Installation


1. Attach the Foot stand

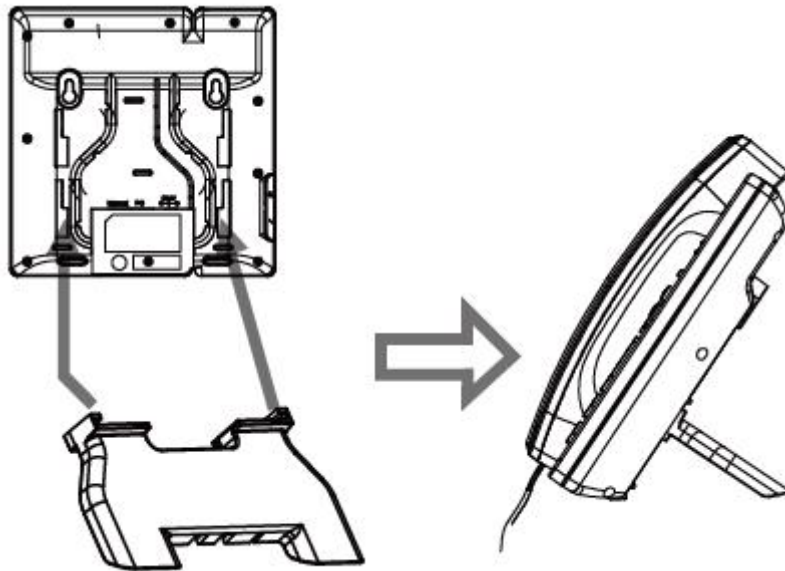

2. Connect the Handset and optional Headset

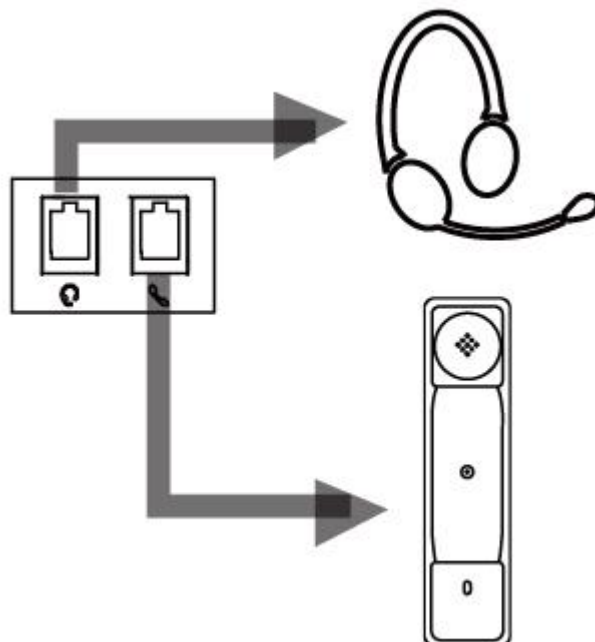

3. Connect the Network and Power

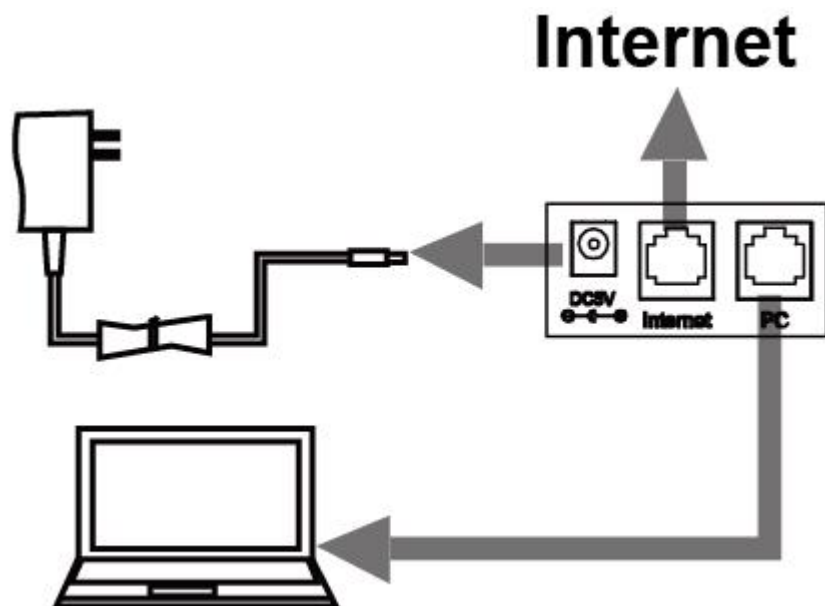


Initialization

After your phone has been powered up, the system boots up and performs the following steps:

Automatic Phone Initialization

The phone finishes the initialization process by loading the saved configuration. The phone LCD screen will display "Booting"

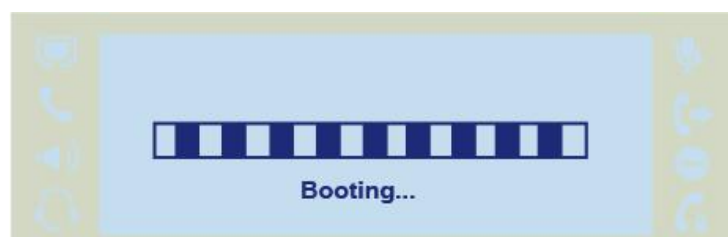

And then show "Initializing" during the initialization.



The IP Phone will upgrade the firmware if there is a new firmware on your server. And the IP Phone will show “Check firmware, please waiting...” after initialization.

**Check firmware
Please wait**

Then IP Phone will show Reboot information:

**Device Reboot
Please wait...**

By default the phone attempts to contact a DHCP server in your network in order to obtain its valid network settings, e.g. IP address, subnet mask, default gateway, DNS server.

Status

You can view the system status of your phone via phone user interface or web user interface. The information of phone status includes: Information(e.g., Model, IP, MAC, Firmware, Hardware), Network(e.g., WAN Type, IP, Mask, LAN Type, Gateway, DNS...)Account (e.g., register status of accounts)

To view the phone status via phone interface:

1. Press Menu → Status → Information

```
1.Model:UC902
2.IPV4:192.168.1.114
Back
```

2. Press Menu → Status → Network


```
1.WAN:DHCP mode
2.IP:192.168.1.114
Back
```

- Press Menu → Status → Accounts

```
1.311:Not Registered
2.Empty:Not Registered
Back
```

To view the phone status via Web interface:

- Login webpage (For How to login, please refer to [Web Login](#))
- View the information of Version, Account and Network.

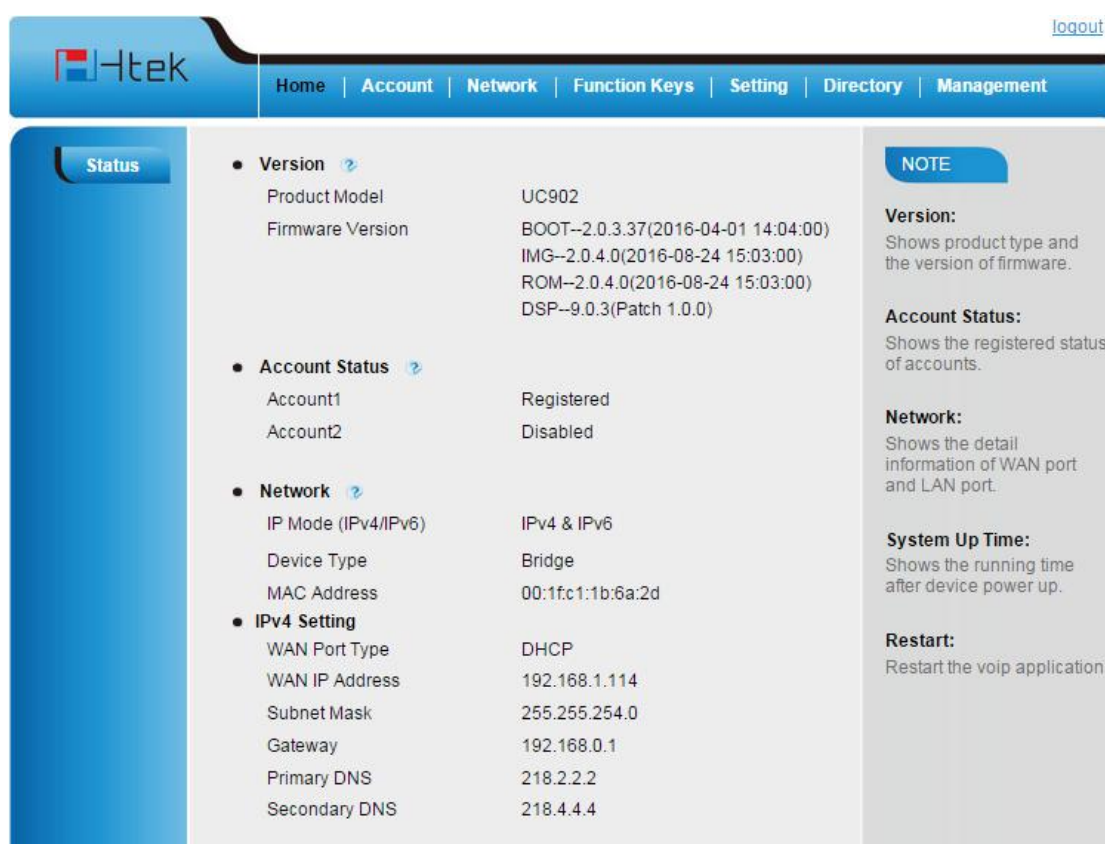

Section	Parameter	Value
Version	Product Model	UC902
	Firmware Version	BOOT--2.0.3.37(2016-04-01 14:04:00) IMG--2.0.4.0(2016-08-24 15:03:00) ROM--2.0.4.0(2016-08-24 15:03:00) DSP--9.0.3(Patch 1.0.0)
	Account Status	
	Account1	Registered
	Account2	Disabled
Network	IP Mode (IPv4/IPv6)	IPv4 & IPv6
	Device Type	Bridge
	MAC Address	00:1f:c1:1b:6a:2d
	IPv4 Setting	
IPv4 Setting	WAN Port Type	DHCP
	WAN IP Address	192.168.1.114
	Subnet Mask	255.255.254.0
	Gateway	192.168.0.1
	Primary DNS	218.2.2.2
	Secondary DNS	218.4.4.4

NOTE

Version:
Shows product type and the version of firmware.

Account Status:
Shows the registered status of accounts.

Network:
Shows the detail information of WAN port and LAN port.

System Up Time:
Shows the running time after device power up.

Restart:
Restart the voip application

Registration

To register via phone interface:

- Press Menu → Setting → Advanced settings (default password: admin) → Accounts
- Select the desired account
- Select Enable for Account active

4. Filled the SIP Server
5. Filled the Failover SIP server if need (Optional)
6. Filled the Outbound Proxy (Optional)
7. Filled the SIP User ID, Authenticate ID
8. Filled the password, Name (shown on LCD) and Ringtone.
9. Press Save to save the configuration.



Note:

If there is a port of sip server, you need to press “1” on the keypad, then you will find the “:”.

Additional Information:

When the current input method is ABC/abc/2ab,


Pressing “1”, you will find “, . ?;”

Pressing “0”, you will find “< >(){}[]”


Pressing “*”, you will find “*/’!@\$”

Pressing “#”, you will find “#’%&*|”

To register via web interface:

1. Login webpage and Click Account→Basic
2. Select the desired Account
3. Select Yes for Account Active
4. Filled the Primary SIP SERVER and other account information
5. Click  to save the configuration.

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Basic

Codec

Advanced

Account Account 1 ▾

Account Status: Registered

* Account Active ☐ No ☒ Yes

* Primary SIP Server 192.168.0.251 ?

Failover SIP Server ?

Second Failover SipServer ?

Prefer Primary SIP Server ☒ No ☐ Yes ?

Outbound Proxy ?

Backup Outbound Proxy ?

* SIP Transport ☒ UDP ☐ TCP ☐ TLS ?

NAT Traversal ☐ No ☒ No, but send keep alive ☐ STUN

Label 40000 ?

* SIP User ID 40000 ?

* Authenticate ID 40000 ?

* Authenticate Password ●●●●●●●● ?

Name 40000 ?

NOTE

* fields must be filled and require a phone restart.

Basic:
 The Basic Parameters set for administrator

Codecs:
 Choose the codecs you want to use.

Advanced:
 The Advanced parameters for administrator.



Note:

1. All fields with * must be filled. If changed, it requires a phone restart.
2. Account Status says the account registered successfully or not.
3. When change the account information via phone, it will shown Restart note when back to idle page.

Idle Screen




Name	Description
1. Date&Time	It shows the phone's time & date. For Date&time setting, see Time&Date





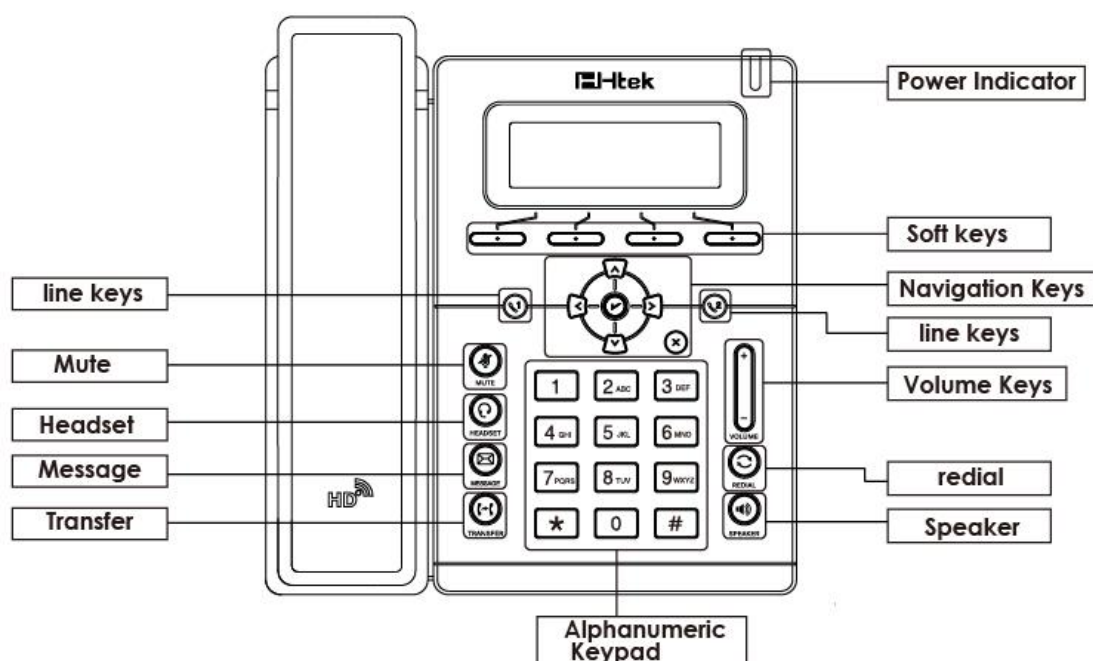


2. Notice	It shows the phone features status, More see Icon Preview
3. Line Keys	This area shows the four line key labels. Line keys are also can be used as other function keys. For more information you can refer to Line Keys
4. Soft Key	This area shows the soft key labels. The default soft key labels are “History”, “Directory”, “DND” and “Menu”. More to see Programmable Key
5. Default Account	This shows the current use account. User can use   to change the default use account.






Getting Familiar with Your Phone

Hardware Components Preview

















Item	Description
LCD screen	To Presentation all information about the date& time, accounts, soft keys, messages, calls and other some information.
Power Indicator LED	To indicate the power status
Line keys	The phone supported up to 4 accounts 1. Steady green: idle interface, during a call.. 2. Blink red: a call incoming
Soft keys	Labels automatically to identity their context-sensitive features.

<p>Navigation keys</p>	<div>  1. OK. </div> <div>  Up arrow key: To move up of the selection shows on the screen. </div> <div>  Right arrow key: To move right of the selection shows on the screen. </div> <div>  Left arrow key: To move left of the selection shows on the screen. </div> <div>  Down arrow key: To move down of the selection shows on the screen. </div> <div>  <ol style="list-style-type: none"> 1. To return to idle screen. 2. To cancel the information or call on the screen. </div>
<p>Mute key</p>	<div>  <ol style="list-style-type: none"> 1. To mute the voice during the call (green light). 2. To un-mute the call. </div>
<p>Line Keys</p>	<p>To be configured as different function as:</p> <ol style="list-style-type: none"> 1. Line 2. Speed Dial 3. BLF 4. BLF List 5. Voice mail 6. Direct Pickup 7. Group Pickup 8. Call Park 9. Intercom 10. DTMF 11. Prefix 12. Hold 13. Conference 14. DND 15. Redial 16. Transfer 17. SMS 18. Hot -desking 19. Call Return 20. Paging 21. Record 22. Shared Line <p>The LED lights status when set as Shared line: Stay green: Idle</p>

	<p>Stay red: Busy</p> <p>Blinked green: Ring Back</p> <p>Blinked red: A call incoming</p> <p>Steady orange: During a call</p> <p>Blinked orange: Public Hold</p> <p>Blinked green: Private Hold</p> <p>Light Drown: Unregistered</p>
Speaker	 Press this button to place a call in hands-free mode.
Volume	<p> To decrease the volume.</p> <p> To increase the volume.</p>
Alphanumeric keypad	To enter the phone numbers, letters and so on.
Headset	 To indicate that the phone is or not in Headset mode.
Transfer	 <p>To transfer a call to a third party.</p> <p>To enable or disable Forward feature during the idle page.</p>

Icon Preview

Icon	Description
	Network
	Registered succeed
	Unregistered
	Speakerphone mode
	Handset mode

	Headset mode
	Mute
	Forward
	Do Not Disturb
	SRTP
	Received calls
	Dialed Calls
	Missed calls
	Forward calls

LED Instruction

This part mainly instructs the LED status. The Power LED Status describe on the premise that the LED setting all set as Yes. For LED status setting, please refer to: [LED Status Setting](#)

Power Indicator LED

LED Status	Description
Blinked green	Ringing or have missed call
Steady Green	Idle status(Power on)
Off	Powered off.

Line LED:(Line or Line Key set as Line)

LED Status	Description
Steady Green	Hold
Steady Green	Off hook or during a conversation.
Blinked red	Ringing.
Off	Idle status

BLF or BLF List Key LED :(Line/Line Key set as BLF)

LED Status	Description
Steady Green	Idle status for the monitored line
Steady Red	The monitored line is calling or during a call
Blinked red	The monitored line is ringing.
Off	All other unknown status

Shared Line Key LED:

LED Status	Description
off	Idle status
Stay green	a member of the SCA group in off-hook status
Stay red	Other member of the SCA group's led status when a member of the SCA group in off-hook status
Blinked green every 500ms	a member of the SCA group in Private hold status
Stay red	Other member of the SCA group's led status when a member of the SCA group in Private hold status
Blinked green every 500ms	a member of the SCA group in public hold

	status
Blinked red every 500ms	Other member of the SCA group's led status when a member of the SCA group in public hold status
Blinked green every 500ms	a member of the SCA group in progressing status
Stay red	Other member of the SCA group's led status when a member of the SCA group in progressing status
Blinked red every 100ms	Alerting
Stay green	a member of the SCA group in active status when there is an incoming call designated for the SCA group
Stay red	Other member of the SCA group's led status when a member of the SCA group in active status

Other Key Led

Key	Description
Headset Key	When use in headset mode, the led is steady green or the LED is off.
Message Key	Blinked green when there is new messages or the LED is off.
Mute Key	Red when the mute the call, or the LED is off.

User Interface

There are two ways to customize specific configurations on your IP phone:

- The user interface on the IP phone
- The user interface in a web browser on your PC

The hardware components keypad and LCD screen constitute the phone user interface, which allows the user to execute all call operation tasks and basic configuration changes directly on the phone. In addition, you can use the web user interface to access all configuration settings. In many instances, it is possible to use both the phone user interface and the web user interface to operate

the phone and change settings. However, in some instances, it is only possible to use the phone or the web user interface.

Phone Interface Overview


Option	
Status	Model
	IP
	MAC
	Firmware
	Hardware
	Network
	Account
	Device Cert
	Language
Features	Call Forward
	Function Key(Line and Line Key setting)
	More Key see Line Key Overview
	Key as Send
	Hot Line
	Anonymous Call
	DND
	History Setting
Basic Settings	Language
	Time & Date
	Time & Date Format
	DHCP Time
	Ring tone
	Screensaver...
Advanced Settings	Account Registration
	Network
	Factory Reset
	Auto provision
Directory	All Contacts
	Local Contacts
	Remote Contacts
	Broadsoft Contacts
	Blacklist Contacts
	AP Contacts
History	Local History

	Network CallLog
Message	Voice Mail set and View. Text Message view and set.
Others	Factory Function
	System Restart
	Device Reboot
	Pcap Feature

Line Key Function Overview

Line
Speed Dial
BLF
BLF List
Voice Mail
Direct Pick Up
Group Pick Up
Call Park
Intercom
DTMF
Prefix
Local Group
XML group
LDAP

<u>XML Browser</u>
<u>Broadsoft group</u>
<u>Conference</u>
<u>Forward</u>
<u>Transfer</u>
<u>Hold</u>
<u>Group Listening</u>
<u>DND</u>
<u>Redial</u>
<u>Call Return</u>
<u>SMS</u>
<u>Record</u>
<u>URL Record</u>
<u>Paging</u>
<u>Shared Line</u>
<u>Public Hold</u>
<u>Private Hold</u>
Hot Desking

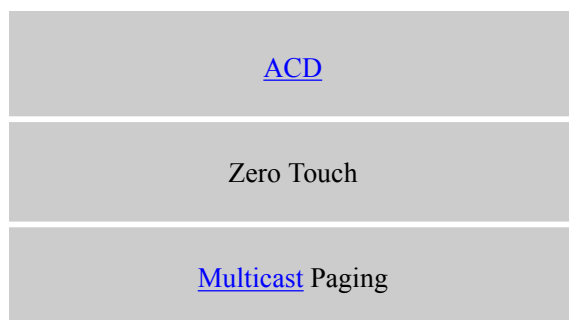

Basic Features Configuration


This part will mainly introduce the basic configuration as the Time, Language, and Volume...




General Settings

Web Login

1. Get the IP address: Press Menu → Status → Information



2. Input the IP Address in the web browser.
3. Input the user name (default is admin), password (default is admin).
4. Login successfully.



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

[logout](#)

Status

- **Version** ?
- Product Model UC902
- Firmware Version BOOT--2.0.3.37(2016-04-01 14:04:00)
IMG--2.0.4.0(2016-08-24 15:03:00)
ROM--2.0.4.0(2016-08-24 15:03:00)
DSP--9.0.3(Patch 1.0.0)
- **Account Status** ?
- Account1 Registered
- Account2 Disabled
- **Network** ?
- IP Mode (IPv4/IPv6) IPv4 & IPv6
- Device Type Bridge
- MAC Address 00:1f:c1:1b:6a:2d
- **IPv4 Setting**
- WAN Port Type DHCP
- WAN IP Address 192.168.1.114
- Subnet Mask 255.255.254.0
- Gateway 192.168.0.1
- Primary DNS 218.2.2.2
- Secondary DNS 218.4.4.4

NOTE

Version:
Shows product type and the version of firmware.

Account Status:
Shows the registered status of accounts.

Network:
Shows the detail information of WAN port and LAN port.

System Up Time:
Shows the running time after device power up.

Restart:
Restart the voip application

Note:


The PC and phone should be in the same segment.

When register the accounts in web and the server port is not “5060”, then “SIP Server” should be set as “SIP Server’s IP address: server port.”, for example, “192.168.0.122: 5090”.

Administrator Password

The password is mainly used for login the web interface or set the advanced settings through phone interface. And the default password of the administrator is: **admin**

To change to password via Phone Interface


1. Press Menu → setting → Advanced settings → password (default admin) → Phone Setting → Set Password
2. Enter the current PWD (password), new password and confirm the new password.
3. Press save soft key or  to save the new password.


1.Current PWD:

2.New PWD:

Cancel
2aB
Delete
Save

To change to password via Web Interface

1. Management → Password
2. Fill the value
3. Click  to save the configuration.

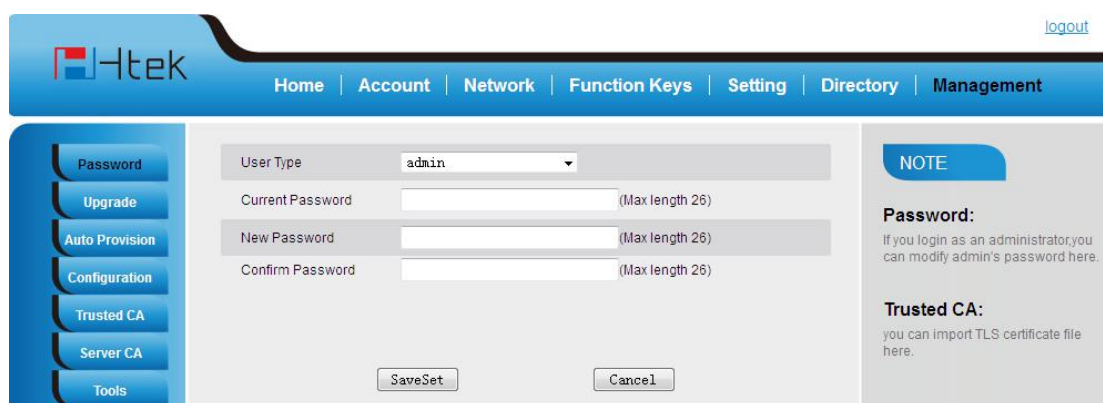


Note:

When you use the web interface: user name: admin password: admin(default)

Language

The default Phone interface language is English.


To change the language via Phone interface

1. Press Menu → Setting → Basic Settings → Language.
2. Press  or Save soft key to save the configuration.



To change the language via Web Interface

1. Setting → Preference → Web Language

2. Select the necessary one.
3. Press  to save the configuration.




**Note:**

All languages may not be available for selection. The available languages depend on the language packs currently loaded to the IP phone.




Screen Saver

There are two types of screen saver: Backlight off, Time & Logo .

To enable screen saver via Phone

1. To press Menu → Setting → Basic Setting → Screensaver...
2. Press  and  or press Switch soft key to Choose the Time-out as 1 min or 2/5/10/30 minute, then press the Save button.
3. Enter the Screensaver Type to choose one of the type: Logo only, Time & Logo.
4. Press  or Save soft key to save the selected configuration.

To disable screen saver via Phone

1. To press Menu → Setting → Basic Setting → Screensaver...
2. Press  and  or press Switch soft key to Choose the Time-out as off.
3. Press  or Save soft key to save the selected configuration.


To Enable screen saver via Webpage

1. To Click Setting → Preference
2. To choose the Time-out as 1 min or 2/5/10/30 minute.

3. To select the screen Type as Backlight off or time & logo.
4. Click Saveset to save the configuration.

To Disable screen saver via Webpage

1. To Click Setting → Preference
2. To choose the Time-out as Off
3. Click Saveset to save the configuration.

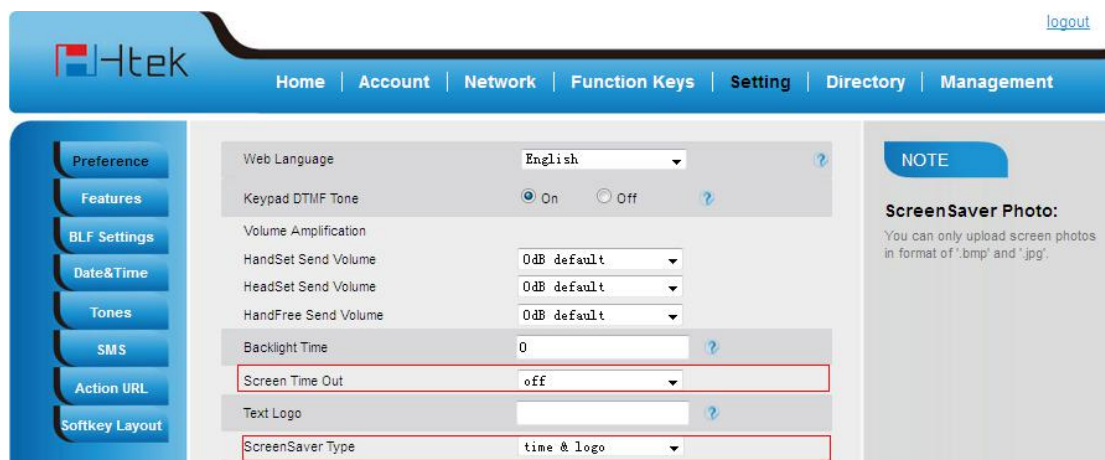

The screenshot shows the Htek web interface with the 'Preference' tab selected. The 'Screen Time Out' is set to 'off' and 'ScreenSaver Type' is set to 'time & logo'. A note on the right states: 'ScreenSaver Photo: You can only upload screen photos in format of '.bmp' and '.jpg'.'

To custom text logo via web interface:

1. Click Setting→Preference.
2. choose the Time-out as 1 min or 2/5/10/30 minute.
3. Enter the desired value in the Text Logo field.
4. Click Saveset to save the configuration.



The screenshot shows the 'Screen Time Out' set to '1 min' and 'Text Logo' set to 'welcome'. A yellow box contains the text: 'it will work when screensaver type is time & logo or logo only, and '\n' represents the newline'.

To wake up screen saver via Web interface:

1. Click Setting → Preference
2. Choose Dial First Digit: Screensaver Wakes up or Screensaver Wakes up and Dial






The screenshot shows the 'Dial First Digit' settings with two options: 'Screensaver Wakes up' (selected) and 'Screensaver Wakes up and Dial'.

Gray Level

There are 12 levels. you can change the LCD's brightness according to your visual perception




To change the gray level via Phone


5. To press Menu → Setting → Basic Setting → Gray level
6. Press  and  or press Switch soft key to Choose the level from 1 to 20
7. Press  or Save soft key to save the selected configuration

Time and Date




The time and date show on the idle page, and it can be set and change by SNTP server automatically or manual setting.

To configure the time and Date by SNTP setting



1. To press Menu → Setting → Basic setting → Time & Date → SNTP Settings
2. Press  or , or info soft key to change the Time zone.
3. Fill the NTP server1, NTP Server2, and Daylight Saving.
4. Press  or Save soft key to save the configuration.






To configure time and date manually




1. To press Menu → Setting → Basic setting → Time & Date → Manual Settings
2. Press  and  or change the right time, or you can input the right time.
3. Press  or Save soft key to save the configuration.

To configure the Time & Date Format

1. To press Menu → Setting → Basic setting → Time & Date Format
2. Press  and  or press Info to change between 12 Hour or 24 Hour.


- Press  and  or press Info to change among Y-M-D(year-month-day), M-D-Y(month-day-year), D-M-Y(day-month-year).
- Press  or Save soft key to save the configuration.

To configure the DHCP time

- To press Menu → Setting → Basic setting → DHCP time
- Press  and  or press Info to change between Disable and Enable.
- Press  or Save soft key to save the configuration.

To configure the NTP Server by web interface


- Login
 - Login name: admin, password: admin (default)
- Setting → Date &Time →NTP Server
- Fill the value in the blank.

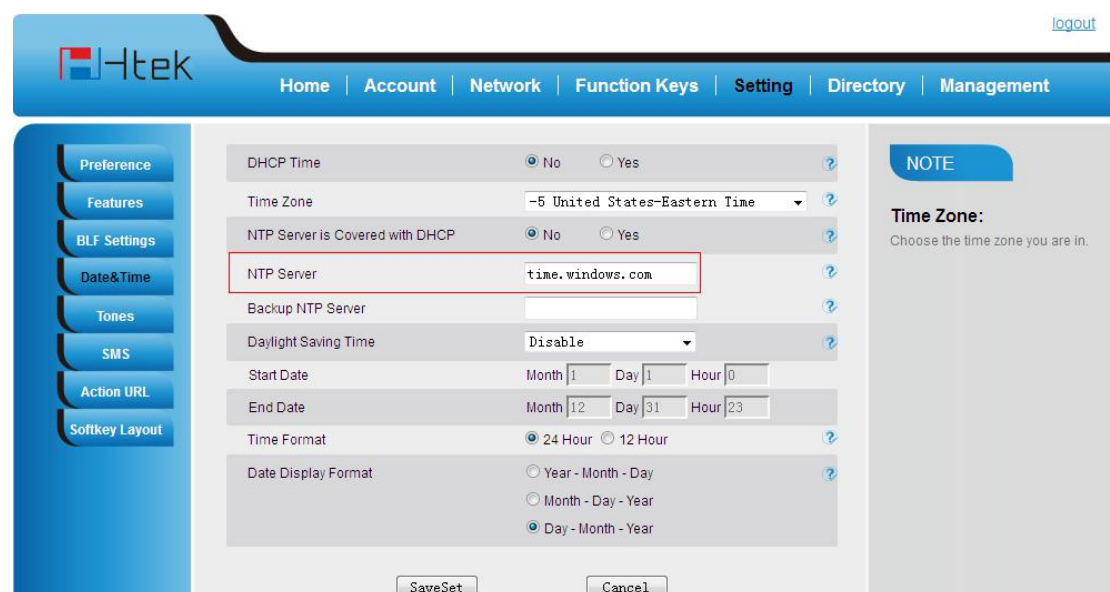

To change the Time Zone and Date Display Format via web interface

- Setting → Date &Time
- Select the necessary one.

- Press **SaveSet** to save the configuration.

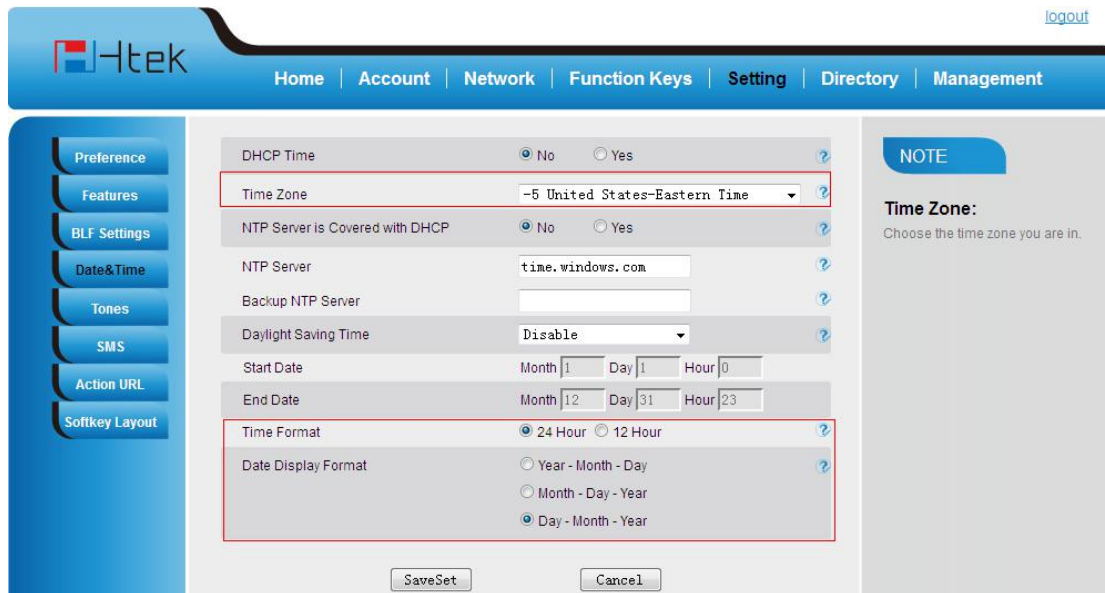

logout

Home | Account | Network | Function Keys | **Setting** | Directory | Management

Preference
Features
BLF Settings
Date & Time
Tones
SMS
Action URL
Softkey Layout

DHCP Time ☒ No ☐ Yes

Time Zone **-5 United States-Eastern Time**

NTP Server is Covered with DHCP ☒ No ☐ Yes

NTP Server **time.windows.com**

Backup NTP Server

Daylight Saving Time **Disable**

Start Date Month **1** Day **1** Hour **0**

End Date Month **12** Day **31** Hour **23**

Time Format ☒ 24 Hour ☐ 12 Hour

Date Display Format ☐ Year - Month - Day
☐ Month - Day - Year
☒ Day - Month - Year


SaveSet Cancel

NOTE

Time Zone:
Choose the time zone you are in.

To change the SIP Date Override Time via web interface

- Setting → Date & Time → Account
- Select On or Off for SIP Date Override Time .
- Click **SaveSet** to save the configuration.

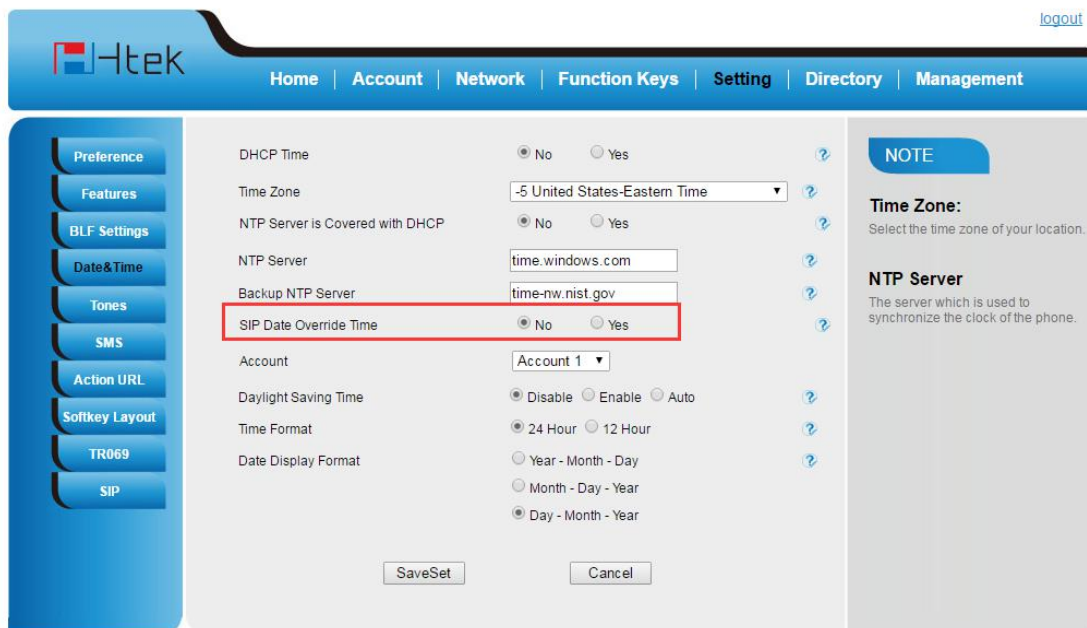

logout

Home | Account | Network | Function Keys | **Setting** | Directory | Management

Preference
Features
BLF Settings
Date & Time
Tones
SMS
Action URL
Softkey Layout
TR069
SIP

DHCP Time ☒ No ☐ Yes

Time Zone **-5 United States-Eastern Time**

NTP Server is Covered with DHCP ☒ No ☐ Yes

NTP Server **time.windows.com**

Backup NTP Server **time-nw.nist.gov**

SIP Date Override Time ☒ No ☐ Yes

Account **Account 1**

Daylight Saving Time ☒ Disable ☐ Enable ☐ Auto

Time Format ☒ 24 Hour ☐ 12 Hour

Date Display Format ☐ Year - Month - Day
☐ Month - Day - Year
☒ Day - Month - Year


SaveSet Cancel


NOTE

Time Zone:
Select the time zone of your location.

NTP Server
The server which is used to synchronize the clock of the phone.


To change the Account via web interface


1. Setting → Date & Time → Account.
2. Select desired Account.
3. Click  to save the configuration.

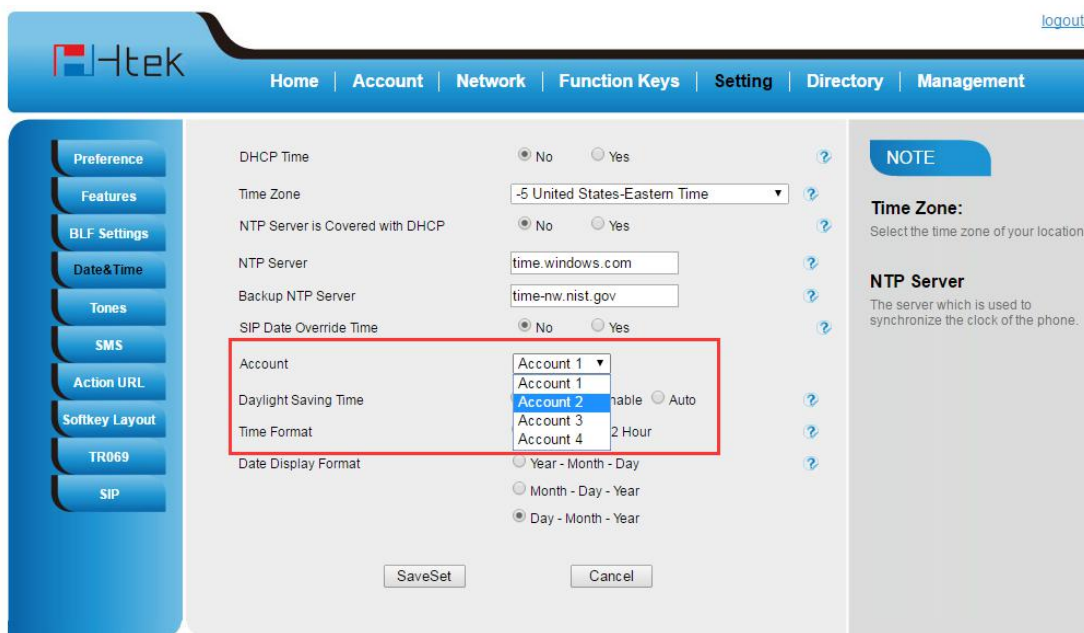

The screenshot shows the Htek web interface with the 'Date & Time' configuration page. The 'Account' dropdown menu is open, showing options: Account 1, Account 1, Account 2 (highlighted), Account 3, and Account 4. The 'Daylight Saving Time' is set to 'Auto'. The 'Time Format' is set to '2 Hour'. The 'Date Display Format' is set to 'Day - Month - Year'. The 'SaveSet' button is visible at the bottom.

To change the Daylight Saving Time via web interface

1. Setting → Date & Time → Daylight Saving Time
2. Select Disable or Enable or Auto for Daylight Saving Time.
3. Click  to save the configuration.

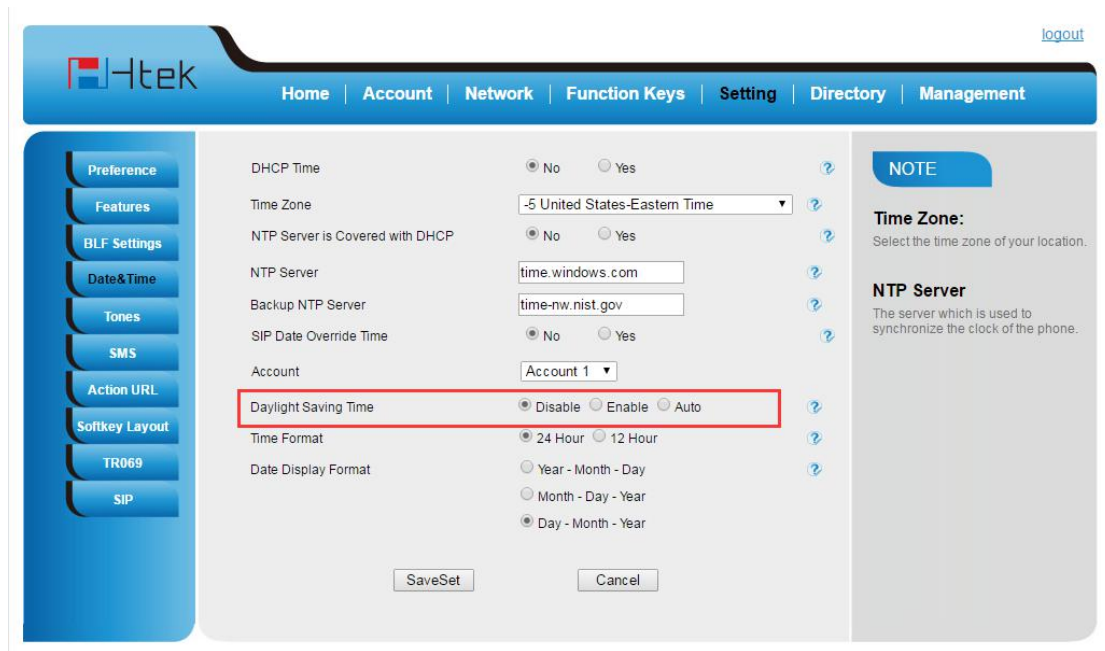

The screenshot shows the Htek web interface for Basic Features Configuration. The 'Date & Time' section is active in the sidebar. The main configuration area includes settings for DHCP Time, Time Zone, NTP Server, Backup NTP Server, SIP Date Override Time, Account, Daylight Saving Time (highlighted with a red box), Time Format, and Date Display Format. The 'Daylight Saving Time' section has three radio buttons: Disable, Enable, and Auto. The 'NOTE' section on the right provides additional information about the Time Zone and NTP Server settings.


Note:

If the IP Phone cannot obtain the time and date from the Simple Network Time Protocol (SNTP) server, please contact your system administrator for more information.

LED Status Setting

The LED Status setting mainly defines the power indicator LED.

To configure LED Status via web interface:




1. Click Setting→Preference
2. Select Yes or No for Power Status, Ringing Status, Miss Calls Status and Voice Message Status.
3. Click  for the setting.

For the LED status description, see: LED Instruction [Power Indicator LED](#)




LED Status Setting:		
Power Status	<input checked="" type="radio"/> Yes	<input type="radio"/> No
Ringing Status	<input checked="" type="radio"/> Yes	<input type="radio"/> No
MissCalls Status	<input type="radio"/> Yes	<input checked="" type="radio"/> No
Voice Message Status	<input type="radio"/> Yes	<input checked="" type="radio"/> No

Key as Send

To configure Key as Send

1. Press Menu → Features → Key as Send
2. Press  and  or press info/switch soft key to select the enable choice.
3. Press  or Save soft key to save the configuration

To cancel # Key as Send


1. Press Menu → Features → Key as Send
2. Press  and  or press info/switch soft key to select the disable choice.
3. Press  or Save soft key to save the configuration.

Network Setting

Htek IP Phone supports IPv4、IPv6、IPv4&IPv6.They have three mode of Network: DHCP, Static, and PPPoE. The default mode is DHCP, it will obtain IP address and other information automatically.

If your phone cannot contact a DHCP server for any reason, you need to configure a static IP address manually.

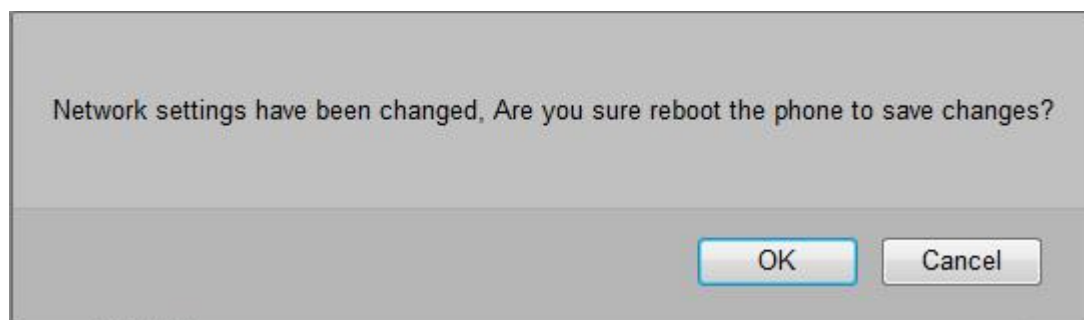


When switch DHCP, Static IP and PPPoE to each other, or change the Static IP on webpage, it will show the warning of restart as following.



IPv4


If you set IP Mode to IPv4, IP phone will use IPv4 address. IPv4 has three network modes: DHCP, Static, and PPPoE


To configure IPv4 via phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →IP Port Mode.
2. Press  or  to change the IP Port Mode..
3. Press  or Save soft key to save the configuration.



To configure IPv4 via Web interface:

1. Click Network→Basic→ Internet Port
2. Select IPv4 for Internet Port
3. Click  for the setting.

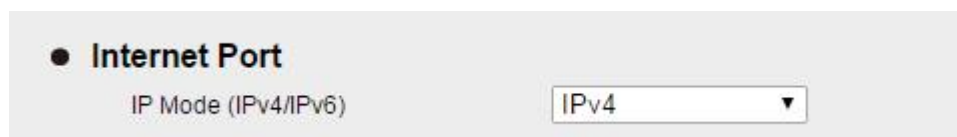

To configure DHCP via phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WAN Port IPv4→DHCP mode.
2. Click Save and restart the phone.

To configure a static IP address via phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →IPv4 →Static mode.
2. Enter the parameters: IP, Netmask, Gateway, Pri. DNS(primary dns), sec. DNS(second DNS) in the corresponding fields.

1.IP:192.168.1.70
2.Netmask:255.255.254.0
Cancel 123 Delete Save

3. Click Save and restart the phone.

System will restart Are you sure ?			
Cancel			OK

Press the Save soft key to accept the change or the Cancel soft key to cancel. If you are using an xDSL modem, you can connect your phone to the Internet via PPPoE mode. You can set a WAN port to be a PPPoE port. The PPPoE port will perform a PPP negotiation to obtain the IP address. Contact your system administrator for the PPPoE user name and password.

To configure PPPoE via phone interface:


1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →PPPoE mode.
2. Enter the User ID and password
3. Click Save and restart the phone.

1.User ID:02584685230
2.Password:xxxxxx
Cancel 2aB Delete Save

To configure Network via web interface:

1. Click Network→Basic→IPv4 setting
2. Select the desired Type: DHCP, Static or PPPoE
3. Filled the necessary information.

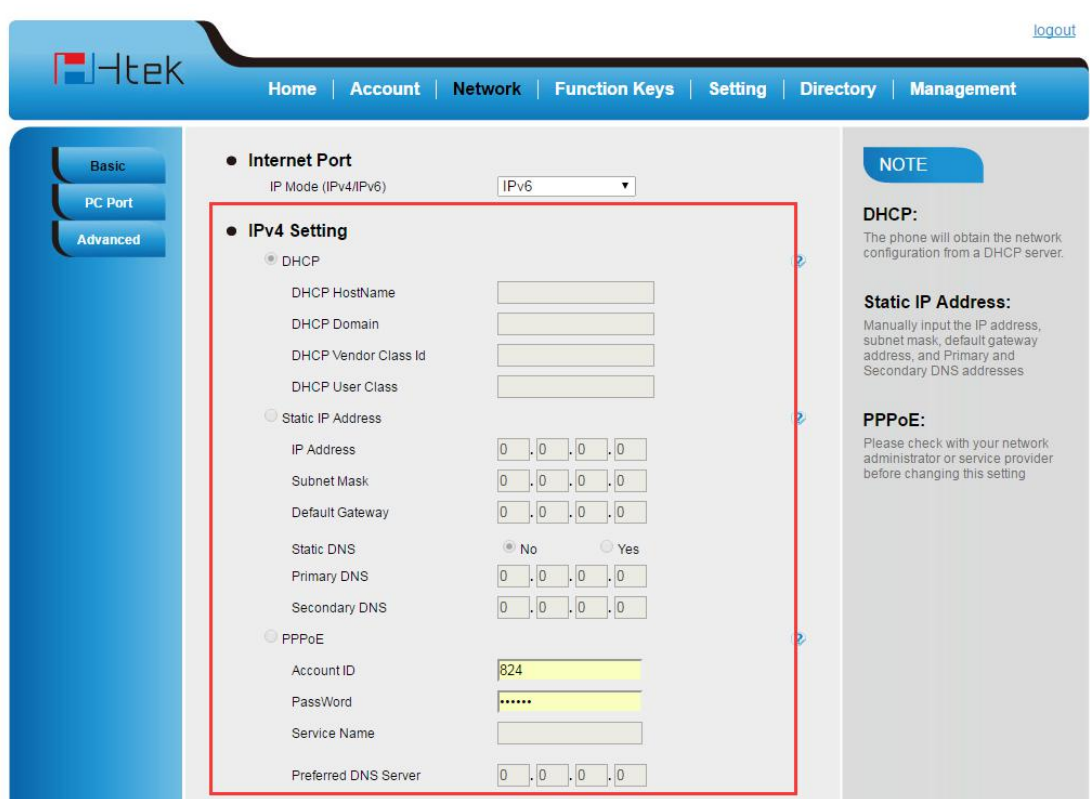


- Click the SaveSet and restart the phone.



IPv6

If you set IP Mode to IPv6, IP phone will use IPv6 address. IPv4 has two network modes: DHCP, Static

To configure IPv6 via phone interface:

- Press Menu → Setting → Advanced Settings (password: admin) → Network → WANPort → IP Port Mode.
- Press  or  to change the IP Port Mode..
- Press  or Save soft key to save the configuration.



To configure IPv6 via Web interface:

- Click Network → Basic → Internet Port

2. Select IPv6 for Internet Port

3. Click  for the setting.



To configure DHCP via phone interface:


1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WAN Port IPv6→DHCP mode.
2. Click Save and restart the phone.

To configure a static IP address via phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →IPv6 →Static mode.
2. Enter the parameters: IP, IPV6 Prefix, Gateway, Pri. DNS(primary dns), sec. DNS(second DNS) in the corresponding fields.




3. Click Save and restart the phone.

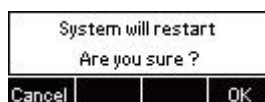

To configure Network via web interface:

1. Click Network→Basic→IPv6 setting
2. Select the desired Type: DHCP, Static
3. Fill required fields.

- Click the SaveSet and restart the phone.

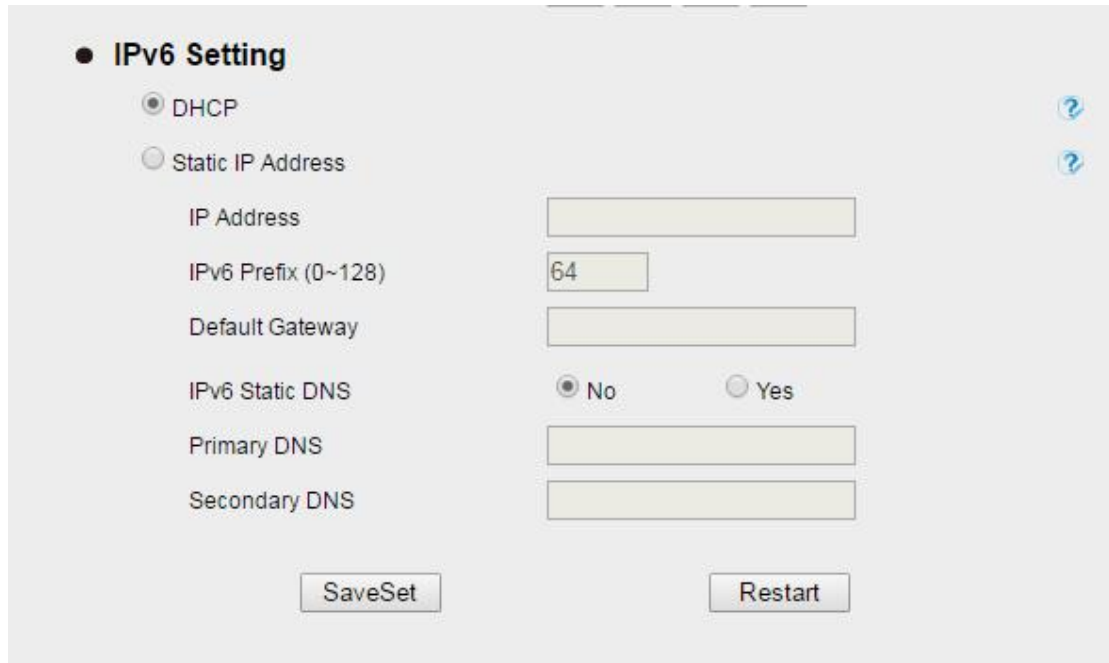

IPv6 Setting

☒ DHCP ?

☐ Static IP Address ?

IP Address

IPv6 Prefix (0~128)

Default Gateway

IPv6 Static DNS ☒ No ☐ Yes




Primary DNS

Secondary DNS

IPv4&IPv6


If you set IP Mode to IPv4&IPv6, IP phone will support both IPv4 and IPv6 address. The settings of DHCP, Static, and PPPoE are same as above.

To configure IPv4&IPv6 via phone interface:

- Press Menu → Setting → Advanced Settings (password: admin) → Network → WANPort → IP Port Mode.
- Press  or  to change the IP Port Mode..
- Press  or Save soft key to save the configuration.



To configure IPv4&IPv6 via Web interface:

- Click Network → Basic → Internet Port
- Select IPv4&IPv6 for Internet Port
- Click  for the setting.

**Note:**

Wrong network parameters may result in inaccessibility of your phone and may also have an impact on your network performance. For more information about these parameters, contact your system administrator.

PC Port

Two modes for PC port: bridge and router.



To configure PC Bridge via Phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→PC Port →Bridge mode.
2. Click Save and restart the phone.

To configure PC router via Phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→PC Port →Router mode.
2. Enter the IP, Netmask and DHCP server
3. Click Save and restart the phone.

To configure Bridge via web interface:


1. Click Network→Basic
2. Select 
3. Click  and restart the phone




● PC Port

☒ As Bridge

To configure Router via web interface:

1. Click Network→Basic
2. Select As Router
3. Fill the IP address and other necessary information.
4. Click  and restart the phone

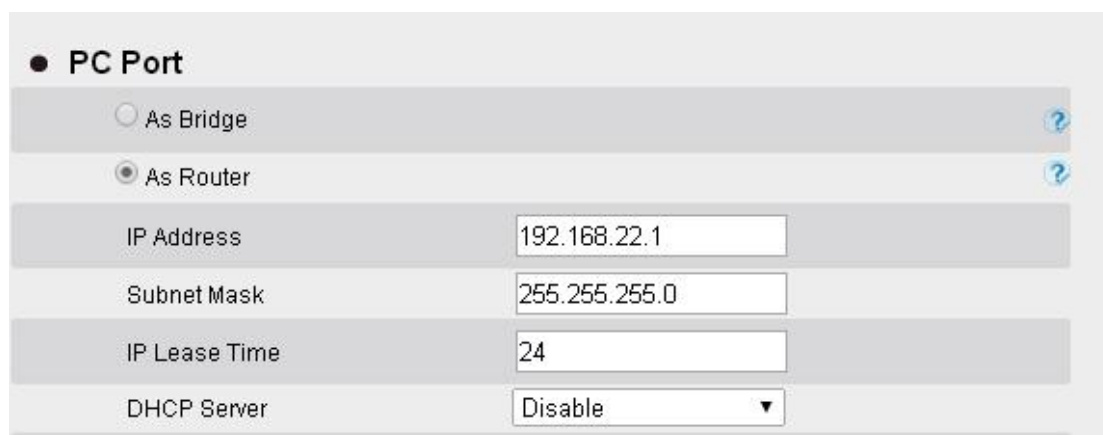

● PC Port

☐ As Bridge

☒ As Router

IP Address: 192.168.22.1

Subnet Mask: 255.255.255.0

IP Lease Time: 24

DHCP Server: Disable

Contact Settings

This section provides the operating instructions for managing contacts. The topics include:

- Local Directory
- Remote Phonebook
- LDAP
- Search Contact

Local Directory


In the directory, you can add or delete your friends, business partner or anyone others' phone No. so you will not forget their number. Or put some anonymous phone No. in the blacklist to prevent from being disturbed. The local Directory can add up to 1000 contacts.

A. To add contacts list into local directory






To add contacts manually

1. Press Menu → DIR → Local Contacts
2. Press Add soft key





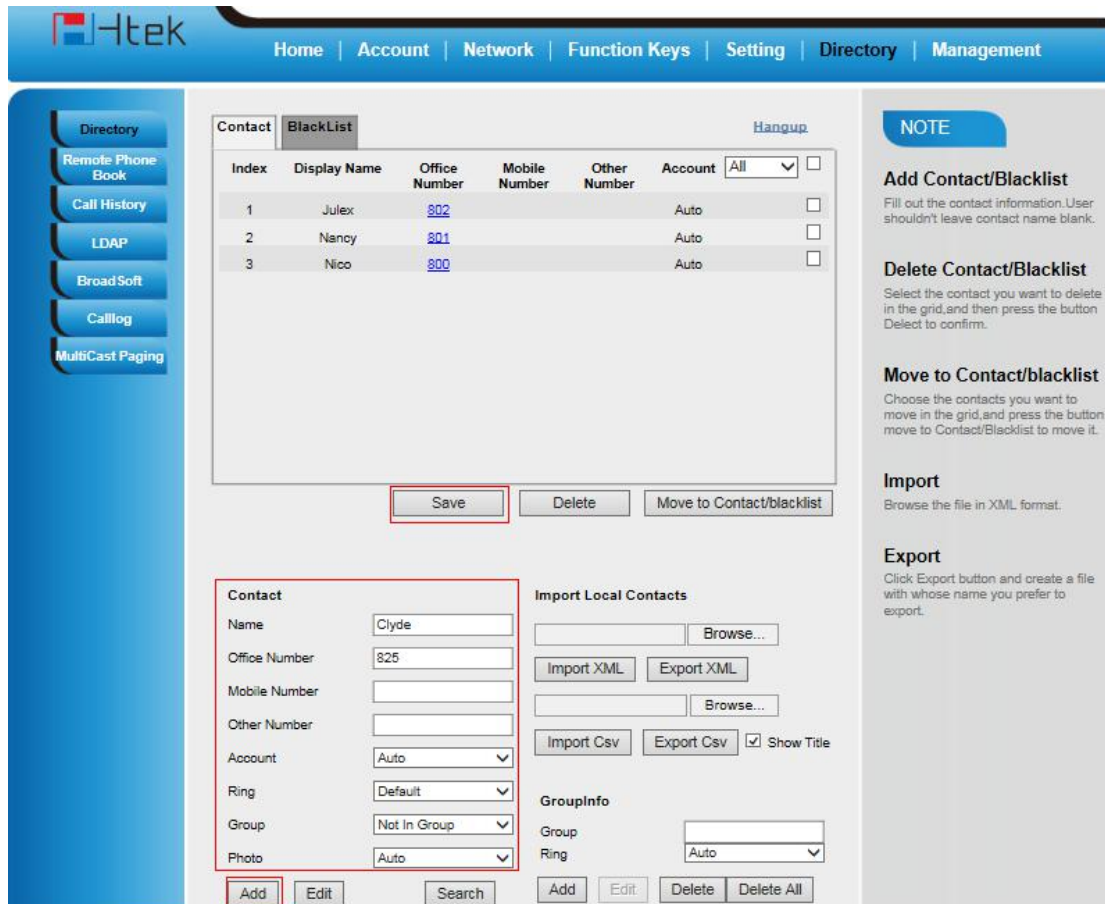
3. Enter the necessary information as Name, Phone number...
4. Press save soft key or  to add the contacts successfully.

To add contacts from History

1. Press History soft key or press Menu → History
2. Press  and  to select the targeted one. (Press  and  switched among the All calls, Dialed calls, Received calls, Missed Calls and Forward Calls).
3. Press Option soft key → Add to Contacts
4. Edit the necessary information as Name, Phone number...
5. Press save soft key or  to add the contacts successfully.




To add contacts via web interface

1. Click Directory → Directory
2. Enter the name, number and some other information.
3. Press  and then press  button.






B: To add contacts into blacklist

To add blacklist manually

1. Press Menu → DIR
2. Press  and  or press Switch soft key to Choose the Local Contact.
3. Press More soft key.
4. Press More soft key.
5. Press Option soft key. Add to blacklist.
6. Press save soft key or  to add the contacts successfully.

To add blacklist from history

1. Press History soft key or press Menu → History → Local history
2. Press  and  to select the targeted one.
3. Press Option soft key → Add to Blacklist

4. Edit the necessary information as Name, Phone number...
5. Press save soft key or  to add successfully.

To import or export the contact list

You can manage your phone's local directory via phone or web user interface. But you can only import or export the contact list via web interface.

To import an XML file of contact list via web interface:

1. Click on Directory
2. Click Browse to select a contact list file (file format must be .xml) from your local system.
3. Click Import XML to import the contact list.

To export an XML file of contact list via web interface:

1. Click on Directory
2. Click Export XML to export the contact list.

To import a CSV file of contact list via web interface:

1. Click on Directory
2. Click Browse to select a contact list file (file format must be .csv) from your local system.
3. Click Import Csv to import the contact list.

To export a CSV file of contact list via web user interface:

1. Click on Directory
2. Click Export Csv to export the contact list.


Note:

If the xml file and CSV file more than 1000 contacts, the phone will only upload 1000 contacts.

Remote Phonebook

To set Remote Phonebook via web interface:

1. Login the webpage and click Directory→Remote Phone Book
2. Fill the path of the remote file in the Phone Book URL field.
For example,
<http://192.168.0.240/Phonebook/Phonebook.xml>
3. Fill the Name and then click to save the configuration.

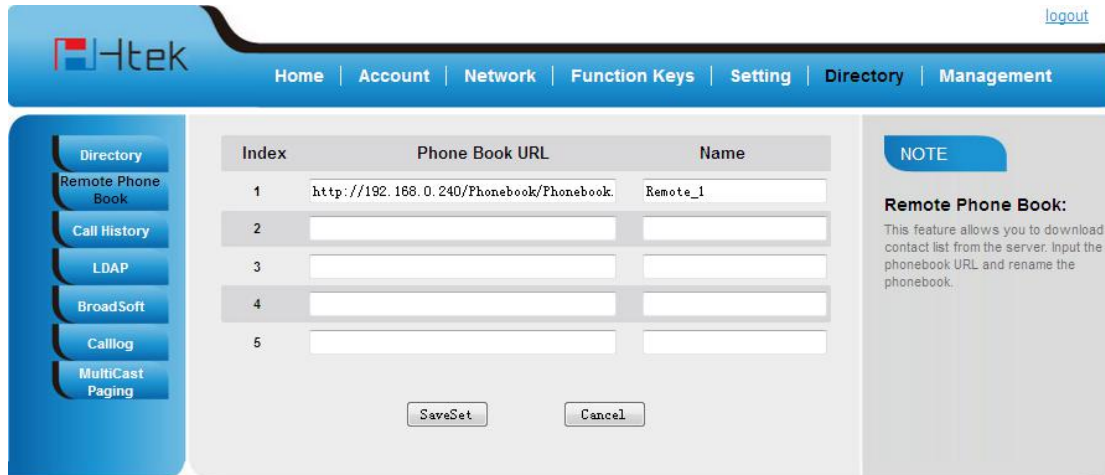

Index	Phone Book URL	Name
1	http://192.168.0.240/Phonebook/Phonebook	Remote_1
2		
3		
4		
5		

NOTE

Remote Phone Book:
This feature allows you to download contact list from the server. Input the phonebook URL and rename the phonebook.

To check the contacts via phone interface:

Press Directory→Left Button→Left Button, and then you can see the item you set, press enter you will find the detail.

For More detail, please refer to: [Remote Phonebook](#) on www.htek.com .

Note:

Every remote contact only support 1000 contacts.

LDAP Phonebook


When use the LDAP feature, you can get the LDAP Phonebook directly.

To configure LDAP via web interface:

1. Login webpage and click Directory→LDAP
2. Filled the LDAP Name Filter:
 - a) This parameter specifies the name attributes for LDAP searching. The “%” symbol in the filter stands for the entering string used as the prefix of the filter condition.
 - b) For example (cn=%), when the name prefix of the cn of the contact record matches the search criteria, the record will be displayed on the IP PHONE LCD.

3. Filled LDAP Number Filter:
This parameter specifies the number attributes for LDAP searching.
4. Filled Server Address: Fill the domain name or IP address of the LDAP Server.
For example: 192.168.0.124
5. Port(the port of the LDAP Serve) Base, User Name, Password
6. Max.Hits(1-32000): the maximum number of the search results to be returned by the LDAP server.
7. LDAP Display Name: the display name of the contact record displayed on the LCD screen.
8. Filled the relative value and then click save button the save the settings.

Following is the example screenshot for the configuration.

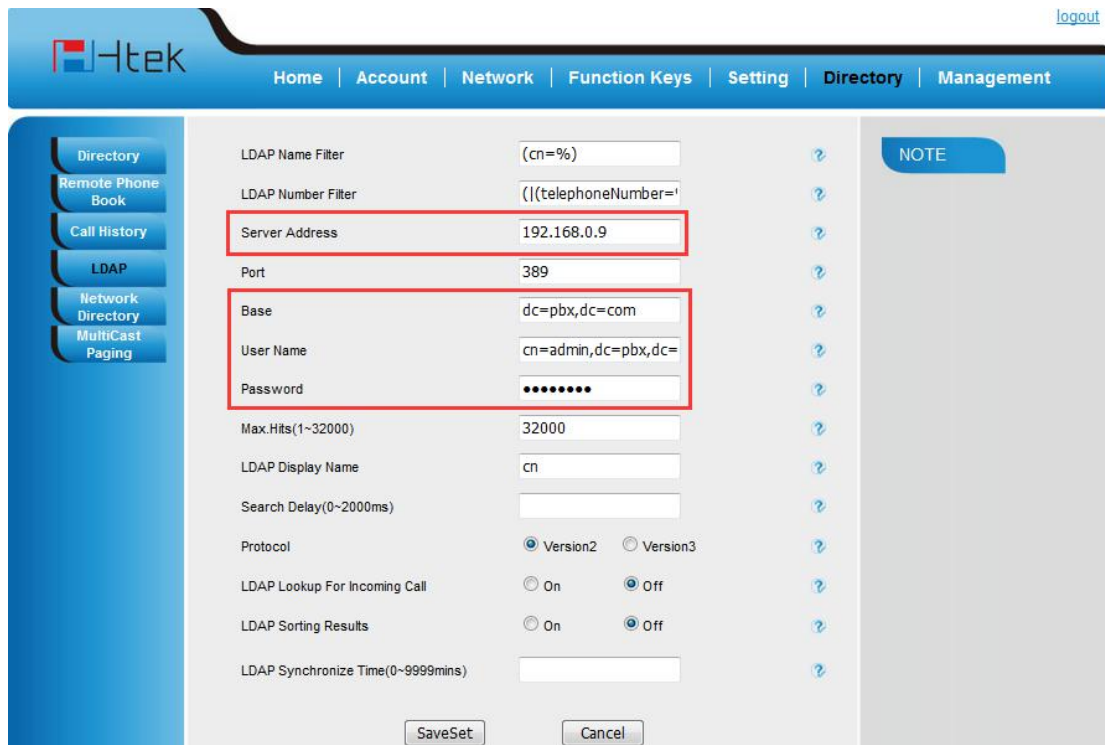

The screenshot shows the Htek web interface for LDAP configuration. The sidebar on the left contains navigation links: Directory, Remote Phone Book, Call History, LDAP, Network Directory, and MultiCast Paging. The main configuration area includes the following fields:


- LDAP Name Filter: (cn=%)
- LDAP Number Filter: (|(telephoneNumber=)
- Server Address: 192.168.0.9
- Port: 389
- Base: dc=pbx,dc=com
- User Name: cn=admin,dc=pbx,dc=
- Password: (masked with dots)
- Max.Hits(1-32000): 32000
- LDAP Display Name: cn
- Search Delay(0-2000ms):
- Protocol: ☒ Version2 ☐ Version3
- LDAP Lookup For Incoming Call: ☐ On ☒ Off
- LDAP Sorting Results: ☐ On ☒ Off
- LDAP Synchronize Time(0-9999mins):


At the bottom of the configuration area are 'SaveSet' and 'Cancel' buttons. A 'NOTE' section is located on the right side of the configuration area.

To Configure LDAP Key

To configure LDAP Key via web interface:

1. Click Function Key→Line Key→ choose Line Key 1(for example)

2. Select LDAP in the Type field.
3. Click  to save the configuration.

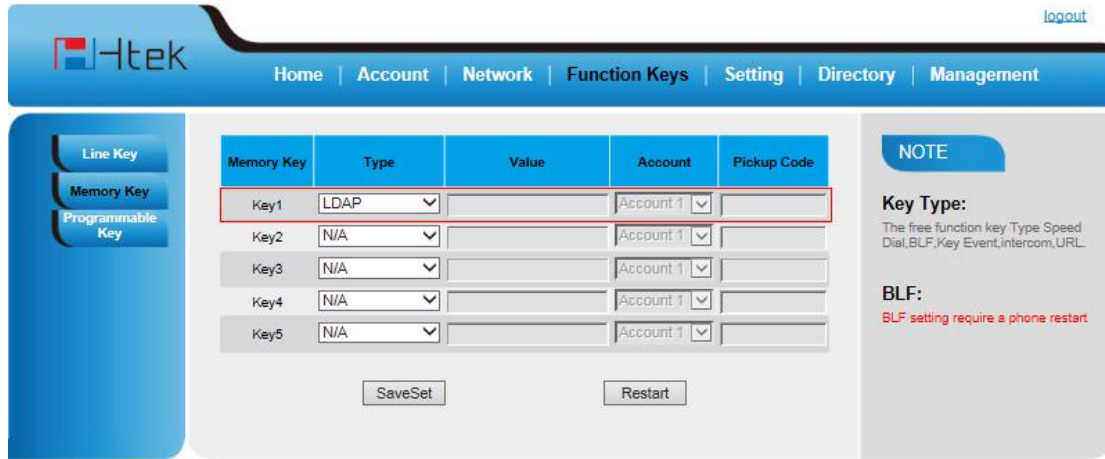

Memory Key	Type	Value	Account	Pickup Code
Key1	LDAP		Account 1	
Key2	N/A		Account 1	
Key3	N/A		Account 1	
Key4	N/A		Account 1	
Key5	N/A		Account 1	

NOTE

Key Type:
The free function key Type Speed Dial, BLF, Key Event, intercom, URL.

BLF:
BLF setting require a phone restart.

To Configure LDAP Key via phone interface:

1. Press Menu→Feature→Function Keys→Line Keys as Function Keys→Line Key 1
2. Select LDAP in the Type field
3. Press save or OK key to save the configuration.

When press the LDAP Key the LCD will display as following:



1.Type:LDAP

2.Label:

Cancel Switch Save

For More detail, please refer to [LDAP Notes](#) on www.htek.com

Search Contact

You can search contact in all contacts, local contacts, remote contacts and LDAP contact.

To search contact in all contacts:

1. Click the Directory softkey on Idle interface.
2. Click the More Softkey, then you can see the Search softkey
3. Click the Search softkey, you can enter the desired part of name or part of number.

4. Click Ok softkey, then with the search content to match the contact will be displayed on the LCD.

Search:12|

Cancel 2aB Delete OK


123 1/1

Back Detail Delete Dial

Note:

If you don't click the OK softkey, then IP Phone will display the relevant contacts automatically within 5 seconds


To search contact in Local contacts:

1. Click the Directory softkey on Idle interface.
2. Click the  button and select the Local contacts list.
3. Click the More Softkey, then you can see the Search softkey
4. Click the Search softkey, you can enter the desired part of name or part of number.
5. Click Ok softkey, then with the search content to match the contact will be displayed on the LCD.

Note:

If you don't click the OK softkey, then IP Phone will display the relevant contacts automatically within 5 seconds

To search contact in Remote contacts:

1. Click the Directory softkey on Idle interface.
2. Click the  button and select the remote contacts list.
3. Select the desired the remote contact and click Enter softkey.
4. Click the Search softkey, you can enter the desired part of name or part of number.
5. Click Ok softkey, then with the search content to match the contact will be displayed on the LCD.

Note:

If you don't click the OK softkey, then IP Phone will display the relevant contacts automatically within 5 seconds

To search contact in LDAP contacts:

1. Click the LDAP function key.
2. Enter the first character or more of contact's name.
3. Select the desired the remote contact and click Enter softkey.



- Then IP Phone will display the relevant contacts automatically within Search Delay.

Call History Settings

Call History

This phone maintains call history lists of Dialed Calls, Received Calls, Missed Calls and Forwarded Calls. The call history list supports up to 100 entries in all on phone interface and more than 1500 items. You can check the call history, dial a call, add a contact or delete an entry from the call history list. You should enable the history record feature in advance.

To enable the history record feature via phone interface:

- Press Menu→Feature→History Setting
- Press  and  or Switch soft key to enable History record.
- Press Save soft key to save the configuration.



To check the call history via phone interface:

- Press the History soft key. The LCD screen displays All Calls list.
- Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
- Press to select the desired entry.
- Press the Option soft key, and then select Detail from the prompt list.
- The detailed information of the entry appears on the LCD screen.



To delete an entry from the call history list via phone interface:

- Press the History soft key.

2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press UP or DOWN key to select the desired entry.
4. Press the Delete soft key.

To delete all entries from the call history list via phone interface:

1. Press the History soft key.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press the Option soft key, and then select Delete All from the prompt list.
4. Press the OK soft key.
5. Press the OK soft key to confirm the deleting or the Cancel soft key to cancel.

To check the call history via web interface:

1. Click Directory→ Call History
2. Click Dialed List, Missed List, Received List, Forwarded List then you can see the history list.

Index	Date	Time	Local Identity	Name	Tel Number
1	2014-06-16	04:06:51	800@192.168.0.9	810086	810086
2	2014-06-16	04:04:05	800@192.168.0.9	910086	910086
3	2014-06-16	03:41:35	800@192.168.0.9	910086	910086
4	2014-06-16	03:41:29	225@192.168.0.2	910086	910086
5	2014-06-16	03:40:22	225@192.168.0.2	910086	910086
6	2014-06-16	03:35:24	800@192.168.0.9	910086	910086
7	2014-06-16	03:27:44	800@192.168.0.9	910086	910086
8	2014-06-16	03:27:39	800@192.168.0.9	910086	910086
9	2014-06-16	03:20:03	800@192.168.0.9	910086	910086
10	2014-06-16	02:20:53	800@192.168.0.9	915205188613	915205188613
11	2014-06-16	01:37:39	800@192.168.0.9	803	803
12	2014-06-16	01:36:32	800@192.168.0.9	803	803
13	2014-06-16	01:25:51	800@192.168.0.9	915205188613	915205188613
14	2014-06-16	00:47:46	225@192.168.0.2	320	320
15	2014-06-16	00:45:43	225@192.168.0.2	320	320
16	2014-06-16	00:45:08	225@192.168.0.2	320	320
17	2014-06-16	00:42:00	225@192.168.0.2	71	71
18	2014-06-16	00:41:55	800@192.168.0.9	71	71
19	0000-00-00	00:03:20	225@192.168.0.2	320	320
20	0000-00-00	00:03:07	225@192.168.0.2	320	320

To dial a call from Call History via web interface:

1. Click Directory→Call History
2. Select the desired history item, and click Tel Number.
3. Then the call is dialed on phone.

Directory

Remote Phone Book

Call History

LDAP

BroadSoft

Calllog

Dialed List

Missed List





Received List

Forwarded List

Index	Date	Time	Local Identity	Name	Tel Number
1	2014-06-16	06:07:29	800@192.168.0.9	810086	810086
2	2014-06-16	04:06:51	800@192.168.0.9	810086	810086
3	2014-06-16	04:04:05	800@192.168.0.9	910086	910086
4	2014-06-16	03:41:35	800@192.168.0.9	910086	910086
5	2014-06-16	03:41:29	225@192.168.0.251	910086	910086
6	2014-06-16	03:40:22	225@192.168.0.251	910086	910086
7	2014-06-16	03:35:24	800@192.168.0.9	910086	910086
8	2014-06-16	03:27:44	800@192.168.0.9	910086	910086
9	2014-06-16	03:27:39	800@192.168.0.9	910086	910086
10	2014-06-16	03:20:03	800@192.168.0.9	910086	910086
11	2014-06-16	02:20:53	800@192.168.0.9	915205188613	915205188613

NOTE

To Dial a call from Call History via phone interface:




1. Press History soft key or press Menu → History → Local history
2. Press  and  to select the targeted one.
3. Press the Send soft key, or , or , or the corresponding line key.

Audio settings

Ring Tone


You can adjust the type and volume of the ring tone.


To adjust the Ring Tone Type via Phone interface

1. Press Menu → Setting → Basic Settings → Ring Tone.
2. Press  and  to select the aimed one.
3. Press  or Save soft key to save the configuration.





To adjust the Ring Tone Type via Web Interface

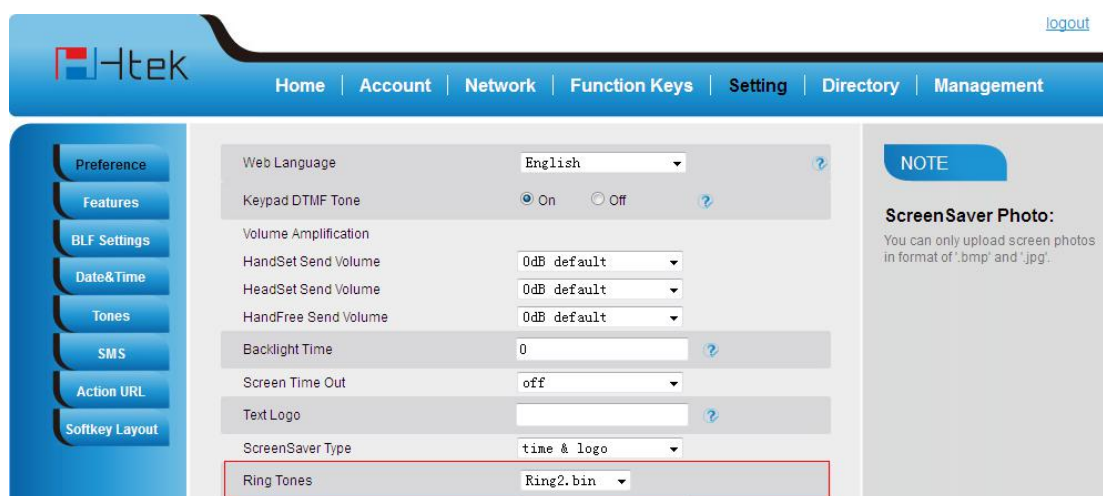

1. Setting → Preference → Ring Tone
2. Select the wanted one
3. Click  to save the configuration.



To configure Distinctive Ring Tone via Phone Interface


1. Press Directory
2. Select the target contact
3. Press Detail soft key to edit the contact.
4. Press  and  to select the wanted Ring Tone for the contact
5. Press Save soft key to save the contact.


Volume

You can adjust the volume for the phone by the volume keys:  and .



To adjust the Ring tone volume

- Option 1: To press  and  on the idle page





- Option 2: To press  and  during the call is ringing.

To adjust the handset volume

To press  and  during a call in handset mode.





To adjust the headset volume

To press  and  during a call in headset mode.



To adjust the speaker Volume

To press  and  during a call in speaker mode.




Voice Mail Tone

This option can set whether to play the beep for phone's voice mail


- Click the Setting → Preference
- Select On or Off for Voice Mail Tone.


- Click  for the setting.



Play Hold Tone


When you hold the phone, Whether to play hold tone


1. Click the Setting → Preference
2. Set On or Off for Play Hold Tone.
3. Click  for the setting.



Play Hold Tone Delay

When you hold the phone. How many seconds to play beep?

1. Click the Setting → Preference
2. Set Enable or Disable for Play Hold Tone Delay.
3. Click  for the setting.



System Settings

Dial Plan

Dial plan is a string of characters that governs the way this phone processes the inputs received from your phone keypad. This phone supports dial plan with following accept digits:


1,2,3,4,5,6,7,8,9,0,*,#

Grammer	Description
x	any digit from 0-9;
xx+	at least 2 digit number;

^	exclude;
,	hear dial tone;
[3-5]	any digit of 3, 4, or 5;
[147]	any digit 1, 4, or 7;
<2=011>	replace digit 2 with 011 when dialing.

To configure dial plan via web interface:

1. Click Account—Advanced—Dial Plan.
2. Filled the value in dial plan field.
3. Click **SaveSet** to save the configuration.

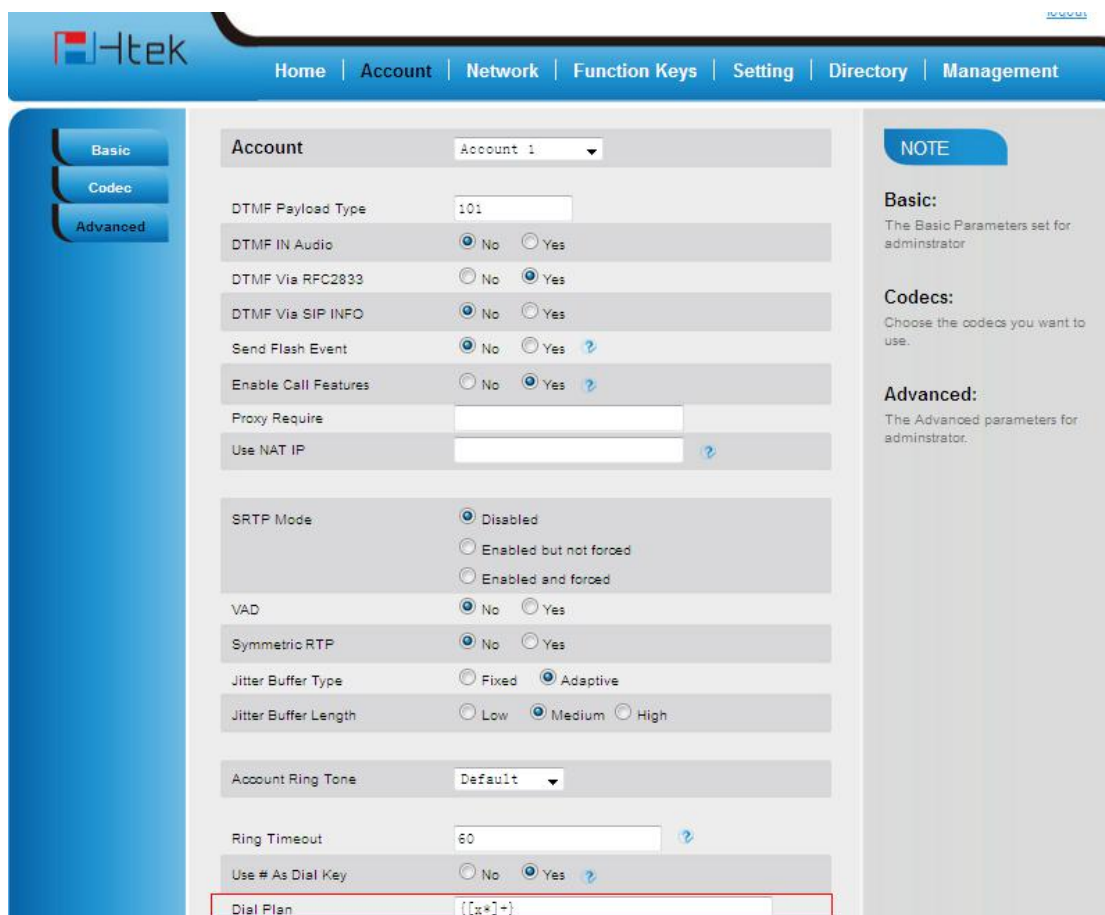


Note:

Illegal input will fall back to default: {[x*]+}. For More, please refer to [dial plan](#) on www.htek.com

Dial-Now Timeout

Dial-Now Timeout means that when you entry the number which matching with dial plan, it will dial out automatically after some time when you stop enter the number.


To configure Dial-Now Timeout via web interface:

1. Click Webpage Setting → Preference
2. Fill the blank of Dial-Now Timeout: for example 5(seconds).(0 means dial out immediately).
3. Click the  button to save the configuration


No Key Entry Timeout

No Key Entry Timeout means that when you entry the number, it will dial out automatically after some time when you stop enter the number.

To configure No Key Entry Timeout

1. Click Webpage Setting → Preference
2. Fill the blank of No Key Entry Timeout: for example 5(seconds).(0 means never timeout, you should press the send key the dial out the number.
3. Click the  button to save the configuration.

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Preference

Features

BLF Settings

Date&Time

Tones

SMS

Action URL

Softkey Layout

TR069

SIP

Web Language	English	?
Keypad DTMF Tone	<input checked="" type="radio"/> On <input type="radio"/> Off	?
Handfree AGC	<input type="radio"/> Disable <input checked="" type="radio"/> Enable	
Volume Amplification		
HandSet Send Volume	0dB default	v
HeadSet Send Volume	0dB default	v
HandFree Send Volume	0dB default	v
Screen Time Out	off	v
Text Logo		?
ScreenSaver Type	time & logo	v
Ring Tones	Ring2.bin	v
NO Key Entry Timeout(seconds)	0	?
Dial-now Time-out (seconds)	0	?
LED Status Setting:		
Power Status	<input checked="" type="radio"/> Yes <input type="radio"/> No	
Ringing Status	<input checked="" type="radio"/> Yes <input type="radio"/> No	
MissCalls Status	<input type="radio"/> Yes <input checked="" type="radio"/> No	
Voice Message Status	<input type="radio"/> Yes <input checked="" type="radio"/> No	

NOTE

ScreenSaver Photo:
You can only upload screen photos in format of '.bmp' and '.jpg'.


Emergency Call

Public telephone networks in countries around the world have a single emergency telephone number (emergency services number), that allows a caller to contact local emergency services for assistance when required. The emergency telephone number may differ from country to country. It is typically a three-digit number so that it can be easily remembered and dialed quickly. Some countries have a different emergency number for each of the different emergency services.

You can specify the emergency telephone numbers on the IP phone for contacting the emergency services in an emergency situation.

To configure emergency call via web interface:

1. Click Setting→Features→Phone Lock
2. Enter the emergency services number in the Emergency field
3. Click **SaveSet** to save the configuration.

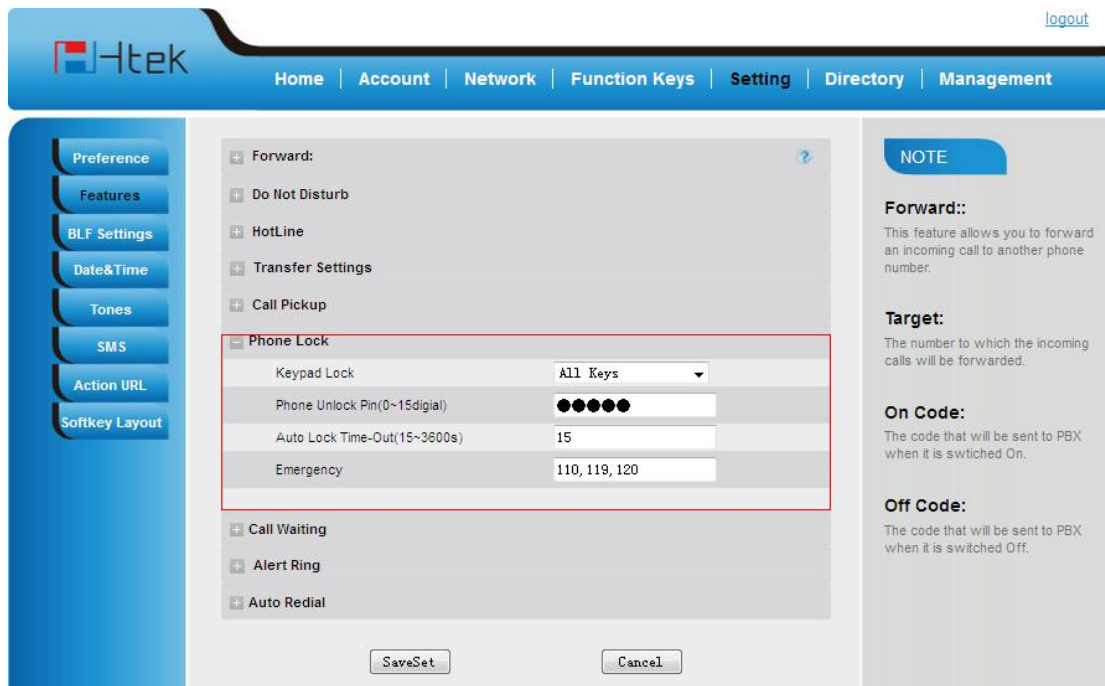

Preference
Features
BLF Settings
Date&Time
Tones
SMS
Action URL
Softkey Layout

Home | Account | Network | Function Keys | **Setting** | Directory | Management

logout

NOTE

Forward::
This feature allows you to forward an incoming call to another phone number.

Target:
The number to which the incoming calls will be forwarded.

On Code:
The code that will be sent to PBX when it is switched On.

Off Code:
The code that will be sent to PBX when it is switched Off.

Forward:
Do Not Disturb
HotLine
Transfer Settings
Call Pickup

Phone Lock

Keypad Lock: All Keys

Phone Unlock Pin(0~15digital):

Auto Lock Time-Out(15~3600s): 15

Emergency: 110, 119, 120


Call Waiting
Alert Ring
Auto Redial


SaveSet Cancel

Label Scroll

When setting function keys, you need to set the label of the function keys. If the words are too long to show on the label, you can use this function to make labels scroll. Another approach is to set the labels to long label mode.

To configure Label Scroll via web interface:

1. Click the Setting → Preference
2. Select Enable or Disable for Label Scroll.
3. Click  for the setting.

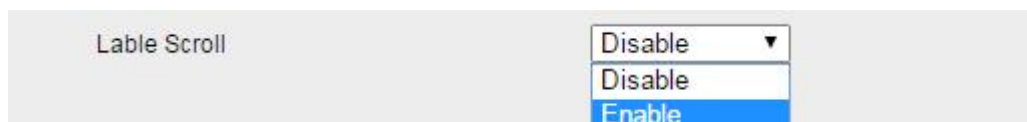

Label Scroll

Disable
Disable
Enable

Show Missed Calls


Whether to show missed call notification on LCD

To configure Label Scroll via web interface:

1. Click the Setting → Preference

2. Select Yes or No for Show Missed Calls.

3. Click  for the setting.




Auto Logout Time

Set the Web login timeout

1. Click the Setting → Preference
2. Set number 1~5000 min for Auto Logout Time.

3. Click  for the setting.




Reboot in Talking

This function is to allow reboot during the calls or not

1. Click the Setting → Preference
2. Set Enable or Disable for Reboot in Talking.

3. Click  for the setting.



Detect IP Conflict

LCD can display message when IP conflict

1. Click the Setting → Preference
2. Set Enable or Disable for Detect IP Conflict.

3. Click  for the setting.

Detect IP Conflict	<input type="text" value="Enable"/>
--------------------	-------------------------------------

Redial Mode

Call redial has two ways:(1) To redial the last placed call from the IP Phone (2) To redial the call from all calls list

1. Click the Setting → Preference
2. Set Direct Mode or Select Mode for Redial Mode.

3. Click  for the setting.

Redial Mode	<input checked="" type="radio"/> Direct Mode
	<input type="radio"/> Select Mode

Keypad Lock

To enable Keypad Lock via Phone


1. Press Menu--Settings--Advanced Setting--Phone Setting--Lock
2. Press Info or Switch to change choose lock type: All Keys Menu Key Function Key Lock & Answer
3. Press Save or OK key to save the configuration.


To disable Keypad Lock via Phone

1. Press Menu--Settings--Advanced Setting--Phone Setting--Lock
2. Press Info or Switch to change to choose Off.
2. Press Save or OK key to save the configuration.


To enable Keypad Lock via Webpage

1. Click Webpage Setting → Features

2. To choose the Phone Lock.
3. To fill the unlock PIN and auto lock time
4. Fill the Emergence Number, when the phone is Lock, only Emergency Number can be sent.
5. To click  to save the configuration.

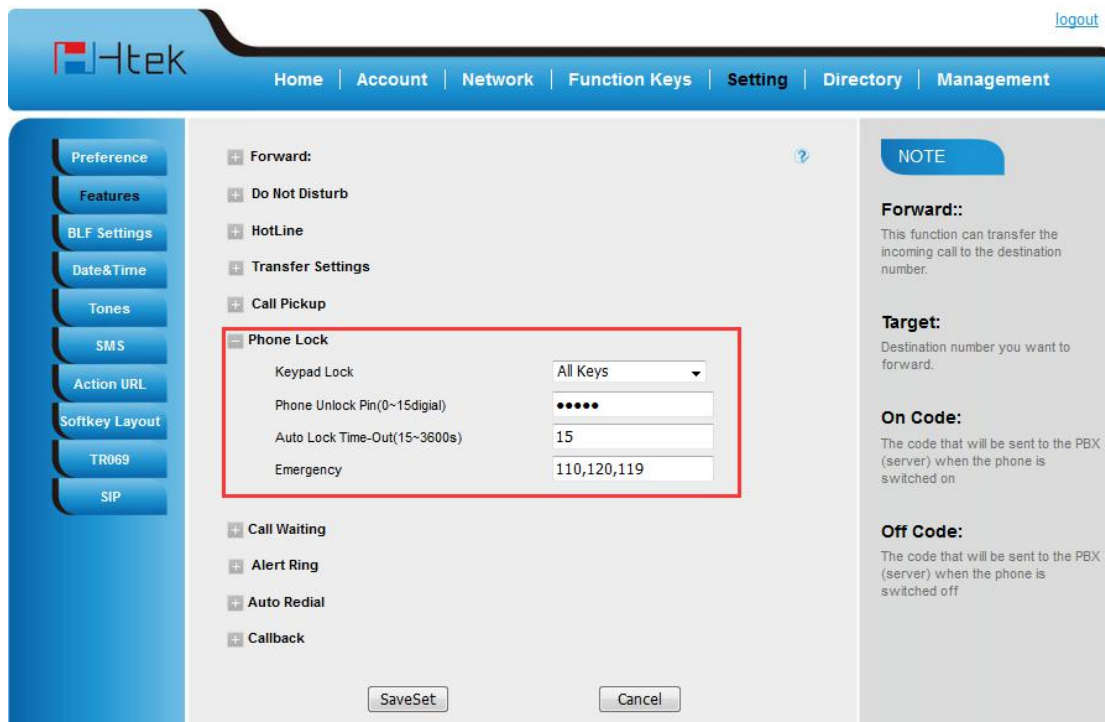

To Disable Keypad Lock via Webpage

1. Click Webpage Setting → Features
2. To choose Disable for the Phone Lock.
3. To click  to save the configuration.


Suppress DTMF Display

In order to ensure safety in Call process, you can choose whether to hide DTMF

1. Click the Setting → Preference

2. Select On or Off for Suppress DTMF Display.

3. Click  for the setting.




Suppress DTMF Display Delay

In order to ensure safety in Call process, you can choose whether to hide DTMF

1. Click the Setting → Preference
2. Select On or Off for Suppress DTMF Display Delay.

3. Click  for the setting.




Check-Syn With Authenticate

If this option is enabled, the server needs to be authenticated before the phone agrees to synchronize.

1. Click the Setting → Preference
2. Set Enable or Disable for Check-Syn With Authenticate.

3. Click  for the setting.



Other features settings


Action URL

To configure action url via web interface:

1. Click Setting→Action URL
2. Filled the needed value in the necessary blank.

3. Click  to save the setting.

Click [Action URL](#) for more how to use, or check on www.htek.com

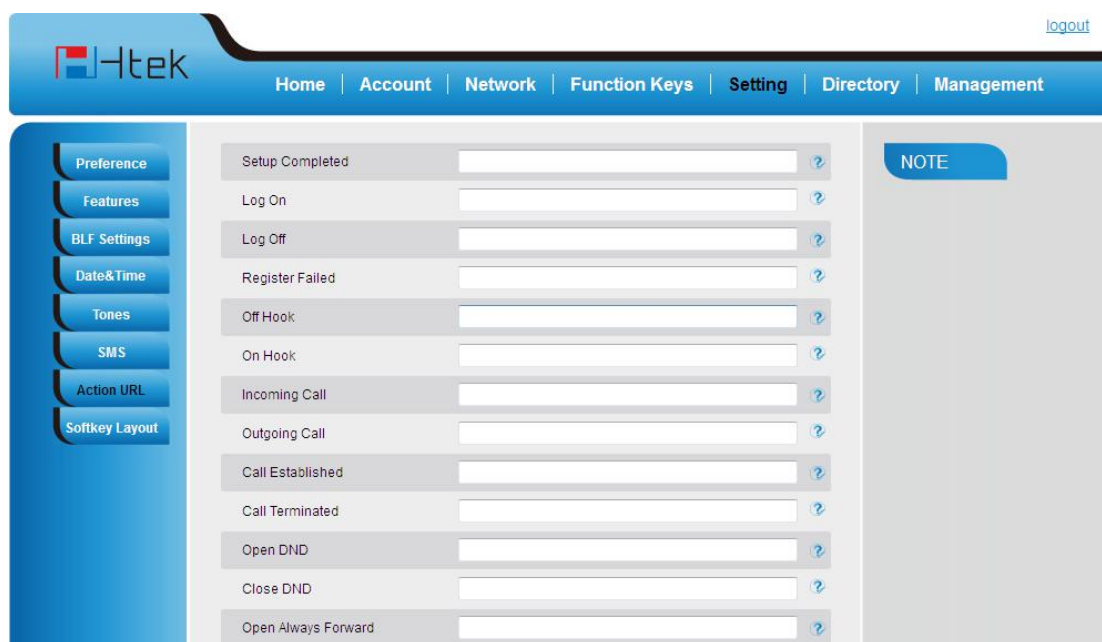


The screenshot shows the Htek web interface. At the top, there is a navigation bar with links: Home, Account, Network, Function Keys, Setting, Directory, and Management. The 'Setting' link is highlighted. On the left side, there is a sidebar menu with options: Preference, Features, BLF Settings, Date&Time, Tones, SMS, Action URL, and Softkey Layout. The 'Action URL' option is selected. The main content area displays a list of settings with input fields and help icons. The settings include: Setup Completed, Log On, Log Off, Register Failed, Off Hook, On Hook, Incoming Call, Outgoing Call, Call Established, Call Terminated, Open DND, Close DND, and Open Always Forward. A 'NOTE' section is visible on the right side of the settings list.

Softkey Layout

This feature mainly defines which shown on the soft key in some status. For example, what the soft key displays when dialing, or talking.

To configure Soft key via web interface:




1. Click Setting→Softkey Layout
2. Select Enable for Custom Softkey
3. Select call States.
4. Select the feature form the disable key to enable key field by 




Disable to Enable field.



Delete the Enable, and it will back to Disable field.

5. Click  or  to change to position or each feature.
6. Click  to save the configuration.

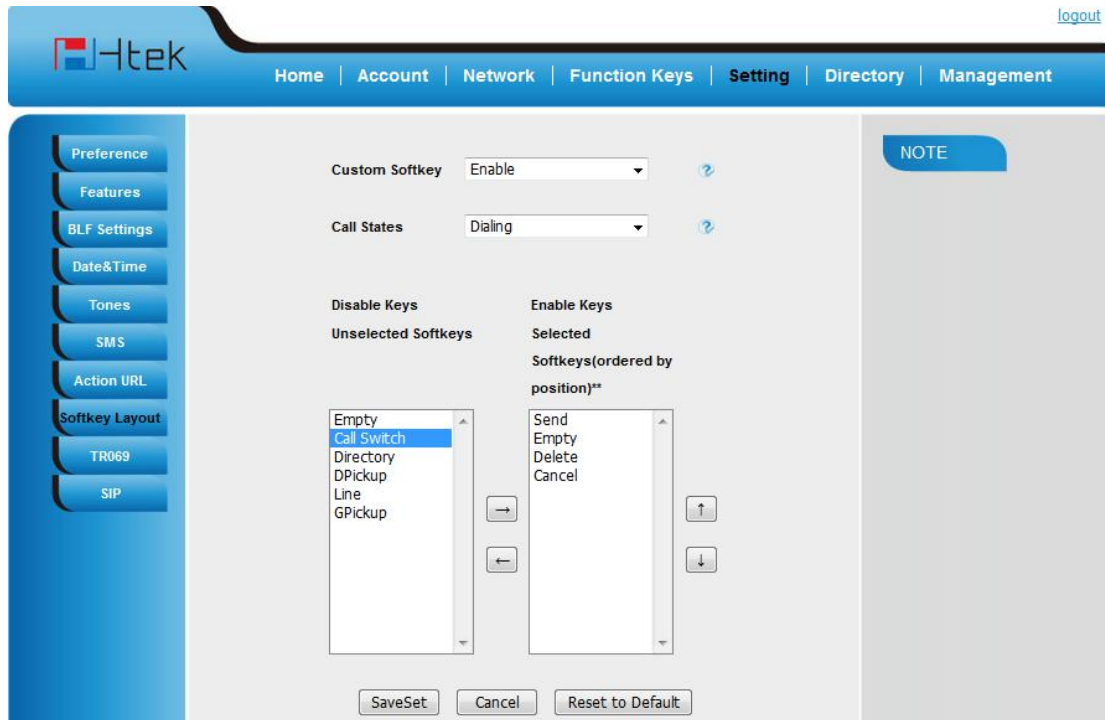


Note:


1. When there more than 5 items in the Enable field, the last softkey will display More, and last two item will show in the next page softkey, you can check by press more.


Programmable Key

For the default keys as Soft keys, Navigation keys and so on, you can define them as some specific feature, and it works only on the idle page.

To configure Programmable Key via web interface:

1. Click Function Keys→Programmable Keys
2. Select the desired Key to set.
3. Click  to save the setting.

4. By clicking , all setting of the keys will be back to default.

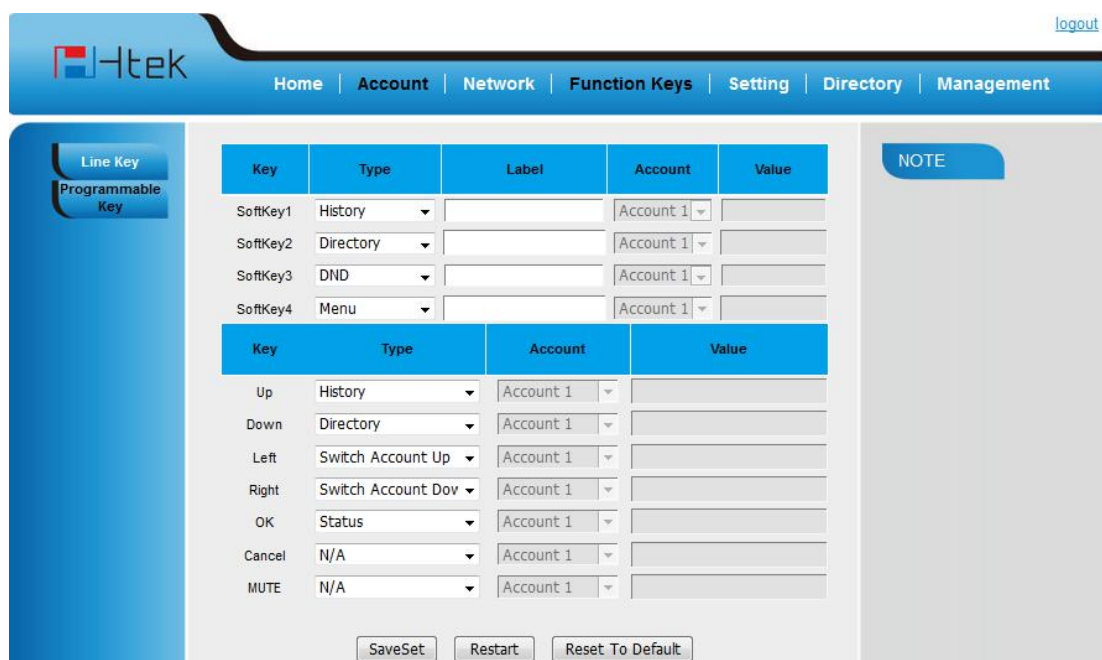

Key	Type	Label	Account	Value
SoftKey1	History		Account 1	
SoftKey2	Directory		Account 1	
SoftKey3	DND		Account 1	
SoftKey4	Menu		Account 1	

Key	Type	Account	Value
Up	History	Account 1	
Down	Directory	Account 1	
Left	Switch Account Up	Account 1	
Right	Switch Account Dov	Account 1	
OK	Status	Account 1	
Cancel	N/A	Account 1	
MUTE	N/A	Account 1	

SaveSet Restart Reset To Default


NOTE

Basic Call Features



Place a Call

There are three ways to dialing a call: Handset, Headset and Hands-free speakerphone.


To place a call by Handset



1. Pick up the handset, or press a line key and dial the necessary number.
2. Press  or press the send softkey, then the call is sending.

To place a call by Headset:



1. Press the  (light is Green)
2. Enter the desired number.
3. Press  or press the Send softkey, then the call is sending.

Using headset to place and answer calls for all time



1. Click webpage Setting → Preference
2. HeadSet Priority → Enable
3. Ring Device For HeadSet → User Headset
4. Press 

Refresh Caller Id Via Contact	Disable
HeadSet Priority	Enable
Ringer Device For HeadSet	Use Speaker
Redial Mode	<input checked="" type="radio"/> Direct Mode <input type="radio"/> Select Mode
Intercom Barge	<input type="radio"/> On <input checked="" type="radio"/> Off 
Show Missed Calls	<input checked="" type="radio"/> Yes <input type="radio"/> No 
Suppress DTMF Display	<input type="radio"/> Off <input checked="" type="radio"/> On
Suppress DTMF Display Delay	<input type="radio"/> Off <input checked="" type="radio"/> On
Voice Mail Tone	<input checked="" type="radio"/> On <input type="radio"/> Off
Busy Tone Timer (0~5s)	4
<div>SaveSet</div> <div>Cancel</div>	

Placing a call by hands-free speakerphone


1. Press the , or press the Line key, then you can hear the dial tone.
2. Press the number.
3. Press  or press the Send soft key, then the call is sending.

To place a call by call history or Directory


1. Press the History soft key (On the idle page) or Menu → History /Directory
2. Press  and  to select the targeted one.

3. Press Send soft key to make the call.

Note:

1. The  key is set to be a send key. For more information, refer to the Key as Send on page
2. During the call, you can also change among Headset, Handset or Free-speaker mode.

Making two calls with one line and one account

1. Press a line key and dial one phone number, then make a call.
2. Press the corresponding line key
3. Dial another phone number,
4. Press the Send soft key, or , then make the second call.



End a Call

Here shows to end a call during three modes:



To end a call by Handset

Press the Cancel soft key or hang up the handset, or press .

To end a call under Headset Mode

Press the Cancel soft key or press , or press .

To end a call under hands-free speakerphone Mode

Press the Cancel soft key or press , or press .

Note:

During the conference, to end the call is same as mentioned above.


Receive a Call

There are three ways to receive a call when the phone is ringing:


To receive a call by handset

Pick up the handset the conversation is built.


To receive a call by headset

Press  and now the conversation is built.

To receive a call by hands-free speaker

1. Option 1: Press  directly.
2. Option 2: Press Answer soft key.
3. Option 3: Press the Line key (flashes red).

Moreover, some other action can be done by soft key when the call is coming.


1. To press the Reject soft key to reject the call. Or press  to reject the current call.
2. To press Forward softkey to forward to another phone.
3. To press Silence soft key, and then the call will keep silent, no ring tone display.

Incoming Call Show Mode

There are two incoming call show modes for this phone:

1. name and number of the contacts
2. name and number of the incoming call and the account which is connecting

To set incoming call show mode via web interface:

1. Click setting → preference
2. Select the desire mode for the incoming call show mode
3. Click  to save the setting.

LED Status Setting:

Power Status

☒ Yes
☐ No

Ringing Status

☒ Yes
☐ No

MissCalls Status

☐ Yes
☒ No

Voice Message Status

☐ Yes
☒ No

Incoming Call Show Mode

☒ Peer Name & Peer Number
☐ Peer Name & Peer Number & Self Name

Auto Answer

Enable auto answer feature, you will answer all incoming call automatically.

To enable Auto Answer via Webpage

1. To Click Account → Advanced
2. To choose Yes for the Auto Answer.
3. To click Saveset to save the configuration.

Send Anonymous

☒ No
☐ Yes

Anonymous Call Rejection

☒ No
☐ Yes

Check SIP User ID

☒ No
☐ Yes

Auto Answer

☐ No
☒ Yes

Allow Auto Answer By Call-Info

☐ No
☒ Yes

Turn off Speaker on remote disconnect

☐ No
☒ Yes

To Disable Auto Answer via Webpage

1. To Click Account → Advanced
2. To choose No for the Auto Answer.
3. To click Saveset to save the configuration.

Call Hold

When use hold feature, the Hold icon will show on the display.

To make a call on hold during three modes:

To hold a call under handset mode:

1. Press Hold soft key to hold the current call.



2. Press Resume soft key to resume the call on hold.



To hold a call under headset mode:

1. Press Hold soft key to hold the current call.
2. Press Resume soft key to resume the call on hold.

To hold a call during the speaker mode:

1. Press Hold soft key to hold the current call.
2. Press Resume soft key to resume the call on hold.

Call Transfer

This phone supports blind, attended and Semi-Attended Transfer.


Blind Transfer

When you use this feature, you can transfer

1. Press Transfer soft key during the conversation, the call is on hold now.




2. Enter the number that transfers to.



3. Press Transfer soft key , and now the blind transfer completed.

Attended Transfer


When you use this feature, you can

1. Press transfer soft key during the conversation, the call is on hold now.
2. Enter the number that transfer to, and press the send soft key or .
3. Start the second conversation, press the transfer soft key, then, transfer completed.

NOTE:

To transfer calls across SIP domains, SIP service providers must support transfer across SIP domains. Blind transfer will usually use the primary account SIP profile.

Semi-Attended Transfer

1. Press the transfer soft key during the conversation, the call is on hold now.
2. Enter the number transfer to, and then press , then you can hear the ring tone.
3. Press the Transfer soft key, and now the Semi-attended transfer completed.

BLF Transfer

1. Set a Programmable Key or line key is set as BLF. For how to set BLF, please refer to [BLF](#)
2. Press the transfer soft key during the conversation, the call is on hold now.
3. Press BLF key then realize blind, attended and Semi-Attended Transfer.
(Webpage--Setting--Features)

Transfer Settings		
Blind Transfer On Hook	<input checked="" type="radio"/> On	<input type="radio"/> Off
Semi-Attended Transfer	<input checked="" type="radio"/> On	<input type="radio"/> Off
Attended Transfer On Hook	<input checked="" type="radio"/> On	<input type="radio"/> Off
Transfer Mode via DSSkey	<div> <div>Attended Transfer</div> <div> <div>Attended Transfer</div> <div>Blind Transfer</div> <div>New Call</div> </div> </div>	
Hold Transfer On Hook		
Call Pickup		

Hold transfer on hook:

Setting → Features → Transfer Setting: Hold Transfer On Hook: ON.

A place a call to B, B answer, A press the hold softkey and place a call to C, A cancel the call when C is ringing or answering, then C and B in the same call and the transfer is successful.



Do Not Disturb		
HotLine		
Transfer Settings		
Blind Transfer On Hook	<input checked="" type="radio"/> On	<input type="radio"/> Off
Semi-Attended Transfer	<input checked="" type="radio"/> On	<input type="radio"/> Off
Attended Transfer On Hook	<input checked="" type="radio"/> On	<input type="radio"/> Off
Transfer Mode via DSSkey	Attended Transfer	
Hold Transfer On Hook	<input checked="" type="radio"/> On	<input type="radio"/> Off
Call Pickup		

Transfer to New Call via web interface

1. Click Setting → Feature
2. Select Transfer Mode via DSS key → New Call
3. Select the desired Line or Line Key and select Transfer in the Type.
4. Enter the phone number in the Value field.

4. C answering the call.
5. A press conference soft key, then A, B and C are now in a conference.(and now this is **3-way conference**)



6. A press line key 3, the current 3-way conference is placed on hold.
7. A enter the number of D and then press send soft key or .
8. D answering the call.
9. A press the conference soft key, then A, B, C and D are now in a conference.(and now this is 4-way conference)
10. A press line key 4, the call is placed on hold.
11. A enter the number of E and then press send soft key or .
12. E answering the call.
13. A press the conference soft key, then A, B, C, D and E are now the **5-way conference** is built.
14. A end the call, the conference is finished.

Note:

1. If C does not answer the call, A can back to continue the conversation with B;
2. Once A hangs up the call, the conference is ended, while if B or C drops the call, A&C or A&B conversation continues.
3. The conference feature is not available on all servers. For more information, contact your system administrator.
4. To realize the 5 way conference, the line should be all available.



Call Forward

This phone supports static forward (always forward, busy forward and no answer forward) and dynamic forward


To configure static forward

To configure always forward

With this feature, all incoming calls will forward immediately to configured number.




1. Press Menu → Features → Call forward → Always Forward.
2. Press  and  or press info soft key to select the enable choice



3. Enter the forward to number and on code (optional), off code (optional).
4. Press  or Save soft key to save the configuration.




To configure busy forward

With this feature, the incoming calls are immediately forwarded if the phone is busy.

1. Press Menu → Features → Call forward → Busy forward.
2. Press  and  or press info soft key to select the enable choice.
3. Enter the forward to number and on code (optional), off code (optional).
4. Press  or Save soft key to save the configuration.


To configure no answer forward


No Answer Forward: Incoming calls are forwarded if not answered after some time.

1. Press Menu → Features → Call forward → No answer forward.
2. Press  and  or press info soft key to select the enable choice
3. Enter the forward to number and on code (optional), off code (optional).
4. Press  or Save soft key to save the configuration.




When the Forward feature is enabled, the Forward Icon will display on Top of the LCD.

To configure Forward via Web Interface

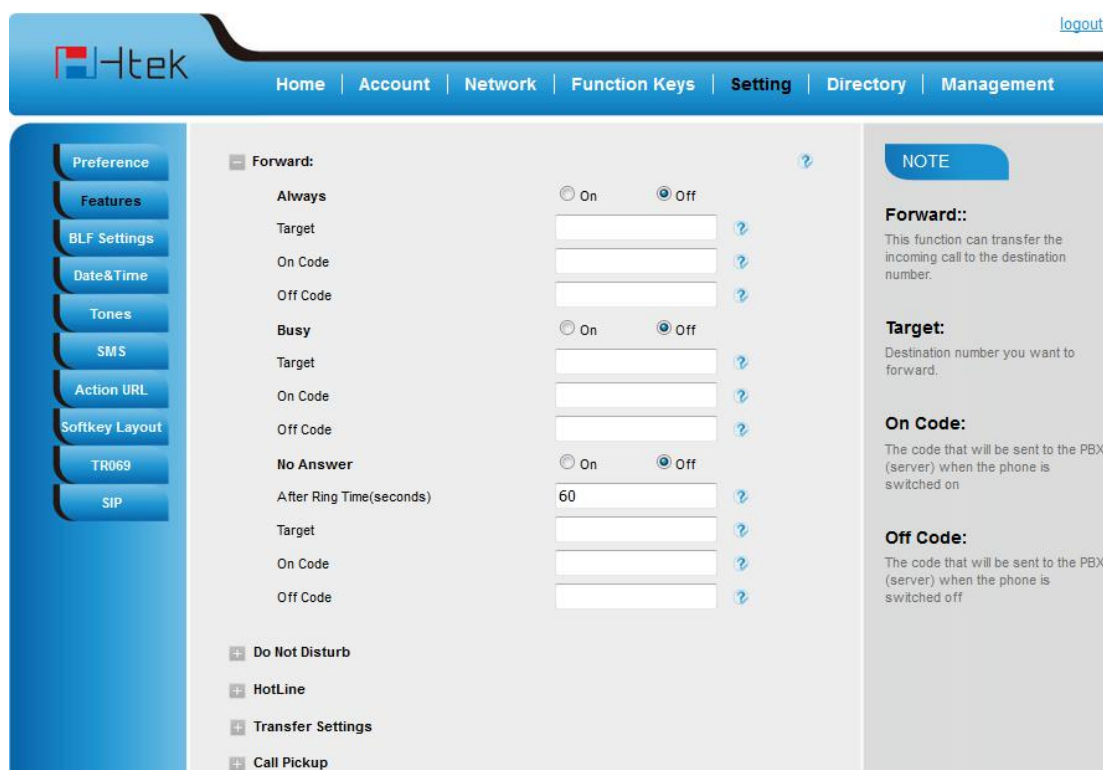
1. Setting → Features
2. Click On for the Always/Busy/No Answer
3. Fill the Forward to Number
4. (Optional) fill the on/off code
5. Click  to save the configuration



To cancel the forward feature via Phone Interface


1. Press Menu → Features → Call forward → Always/Busy/No answer Forward
2. Press  and  or press info soft key to select the disable choice
3. Press  or Save soft key to save the configuration.


To cancel the forward feature via Web Interface

1. Setting → Features
2. Click Off for the Always/Busy/No Answer
3. Click  to save the configuration

To configure dynamic forward

Forward an incoming call during the ringing.

1. When the phone is ringing, press Forward soft key.


The image shows a phone screen during a call. At the top, there are navigation arrows and a speaker icon. Below that, the text 'focus.542' is displayed. At the bottom, there are four soft keys: 'Answer', 'FWD', 'Silence', and 'Reject'.
2. Enter the forward number or select the desired number from Directory softkey (Precondition: local directory has a or more contacts).
3. Press  or press the send soft key, then the call is forwarded.

Note:





If the Programmable Key or line key is set as BLF, when an incoming call ringing, press this BLF key directly to realize the dynamic forward.

You can choose a desired forward number from the Directory when you press the Forward key.

Call Return


This feature allows you to dial the last phone call you received.

To configure the Call Return via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  or press info soft key to select the Key Event in the type field.
4. Press  and  or press info soft key to select the Call Return.

5. Press  or Save soft key to save the configuration

To configure the Call Return via Web interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Call Return in the Type.
3. Click the  button to save the configuration.


Call Back


When this option is set, if the phone you call is busy and does not set call waiting or voice mail, your LCD screen will prompt for call-back, as shown in figure



If you press the callback, the phone will dial the Callback phone number.

To configure the Call Back via Web interface

1. Click Setting → Features → Callback .
2. Fill the Callback phone number.
3. Click  to save the configuration.

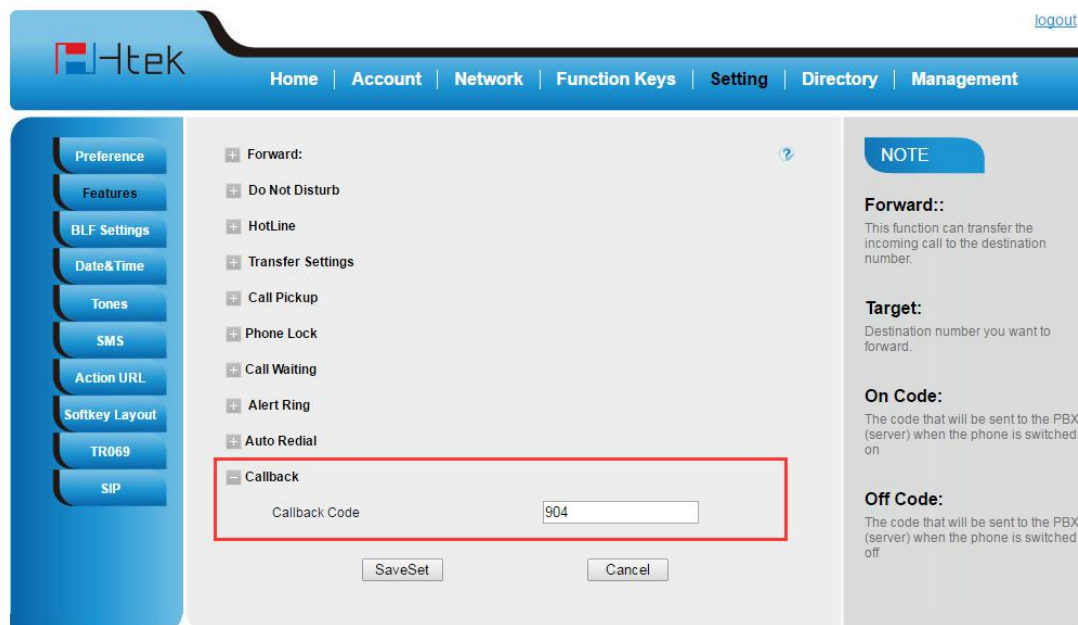

logout

Home | Account | Network | Function Keys | Setting | Directory | Management

Preference
Features
BLF Settings
Date&Time
Tones
SMS
Action URL
Softkey Layout
TR069
SIP

Forward:
Do Not Disturb
HotLine
Transfer Settings
Call Pickup
Phone Lock
Call Waiting
Alert Ring
Auto Redial
Callback

Callback Code: 904

SaveSet Cancel

NOTE

Forward::
This function can transfer the incoming call to the destination number.


Target:
Destination number you want to forward.

On Code:
The code that will be sent to the PBX (server) when the phone is switched on

Off Code:
The code that will be sent to the PBX (server) when the phone is switched off

Call Waiting Tone

1. Click Setting → Features
2. Select Call Waiting: On and Call Waiting Tone: On

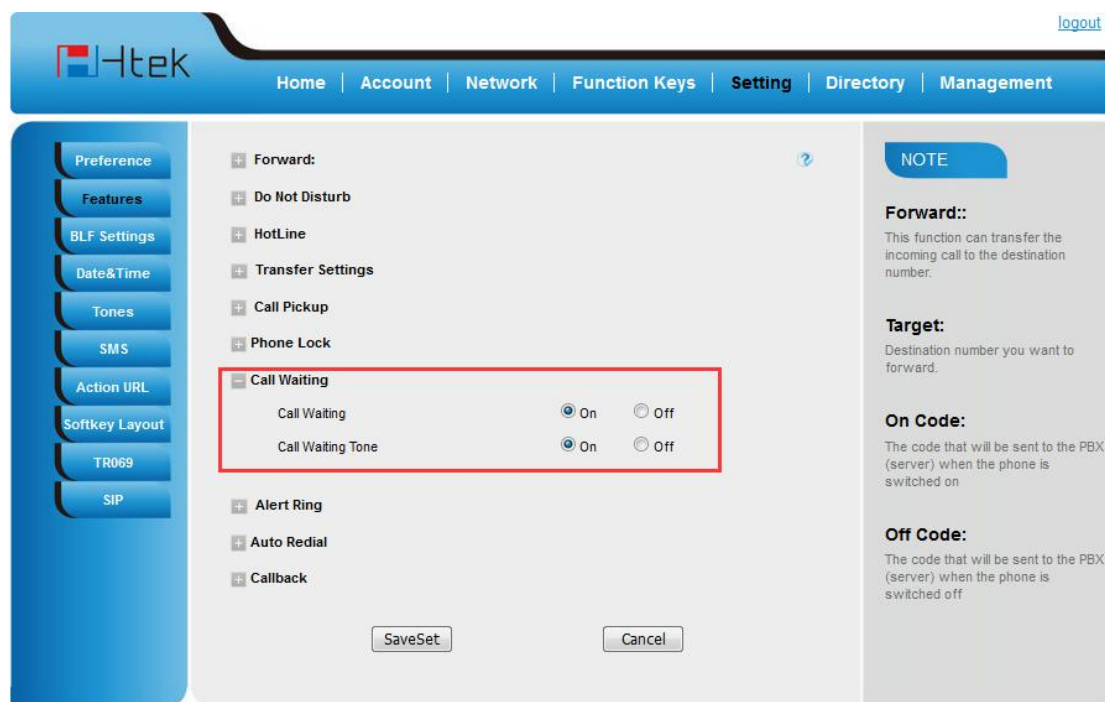

logout

Home | Account | Network | Function Keys | Setting | Directory | Management

Preference
Features
BLF Settings
Date&Time
Tones
SMS
Action URL
Softkey Layout
TR069
SIP

Forward:
Do Not Disturb
HotLine
Transfer Settings
Call Pickup
Phone Lock
Call Waiting
Alert Ring
Auto Redial
Callback

Call Waiting: On
Call Waiting Tone: On

SaveSet Cancel

NOTE

Forward::
This function can transfer the incoming call to the destination number.


Target:
Destination number you want to forward.

On Code:
The code that will be sent to the PBX (server) when the phone is switched on

Off Code:
The code that will be sent to the PBX (server) when the phone is switched off

To Change the Call Waiting Tone time via Web interface

1. Click Setting → Tones

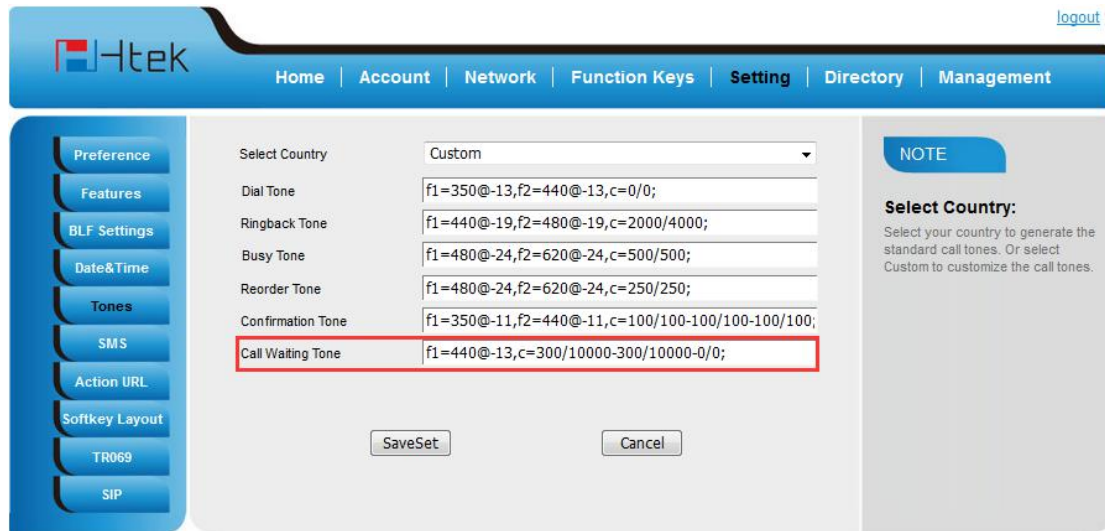

logout

Home | Account | Network | Function Keys | **Setting** | Directory | Management

Preference
Features
BLF Settings
Date&Time
Tones
SMS
Action URL
Softkey Layout
TR069
SIP

Select Country: Custom

Dial Tone: f1=350@-13,f2=440@-13,c=0/0;

Ringback Tone: f1=440@-19,f2=480@-19,c=2000/4000;

Busy Tone: f1=480@-24,f2=620@-24,c=500/500;

Reorder Tone: f1=480@-24,f2=620@-24,c=250/250;

Confirmation Tone: f1=350@-11,f2=440@-11,c=100/100-100/100-100/100;

Call Waiting Tone: f1=440@-13,c=300/10000-300/10000-0/0;

SaveSet Cancel

NOTE
Select Country:
Select your country to generate the standard call tones. Or select Custom to customize the call tones.

2. Change the Tone Time as you want (for example 3s)








Call Waiting Tone: f1=440@-13,c=300/3000-300/3000-0/0;




Hide Caller ID

Just enable the anonymous call feature, you can set your ID do not appear on the other phone that you called.

To configure anonymous call

1. Press Menu → Features → Anonymous Call
2. Press  and  or press info soft key to change the Line ID
3. Press  and  or press info soft key to select the enable choice in Anonymous Call filed.
4. Enter the call on code (optional), call off code (optional).
5. Press  or Save soft key to save the configuration.






To cancel anonymous call feature

1. Press Menu → Features → Anonymous Call
2. Press  and  or press info soft key to select the disable choice in Anonymous Call filed.
3. Press  or Save soft key to save the configuration.




Reject Anonymous

If you do not want to be disturb by anonymous calls, you can set the reject anonymous call features, so you will not hear the unknown calls

To configure rejecting anonymous call

1. Press Menu → Features → Anonymous Call
2. Press  and  or press info soft key to change the Line ID
3. Press  and  or press info soft key to select the enable choice in Rejection filed.
4. Press  or Save soft key to save the configuration

To cancel rejecting anonymous call


1. Press Menu → Features → Anonymous Call
2. Press  and  or press info soft key to select the disable choice in Rejection filed.
3. Press  or Save soft key to save the configuration.

Call Mute


When you use the Mute feature, the other parties will not hear your voice while you can hear their

voice. Call mute applies to all modes (handset, headset, and speakerphone).

To mute the call during a call (including a conference call)

1. Press the mute key , then the mute key glows green, and the LCD display Mute Icon.



2. To disable the mute function, press  again.

DND

When you use the DND feature, the phone is to reject all incoming calls automatically and you can see the DND icon shown on the Top of the LCD on idle page.

To enable DND feature

Press the DND soft key when the phone is idle, and then DND icon shown on the LCD.

To disable DND feature

Press the DND soft key again, and then there is no DND icon on the LCD.

Keypad Lock

To enable Keypad Lock via Phone


1. Press Menu--Settings--Advanced Setting--Phone Setting--Lock
2. Press Info or Switch to change choose lock type: All Keys Menu Key Function Key Lock & Answer
3. Press Save or OK key to save the configuration.

To enable Keypad Lock via Phone

1. Press Menu--Settings--Advanced Setting(Password: admin)--Phone Setting--Lock
2. Press Info or Switch to change choose Off.
3. Press Save or OK key to save the configuration.

To enable Keypad Lock via Webpage

1. Click Webpage Setting → Preference
2. To choose the Lock keys.
3. To fill the unlock PIN and auto lock time
4. Fill the Emergence Number, when the phone is Lock, only Emergency Number can be sent.
5. To click Saveset to save the configuration.

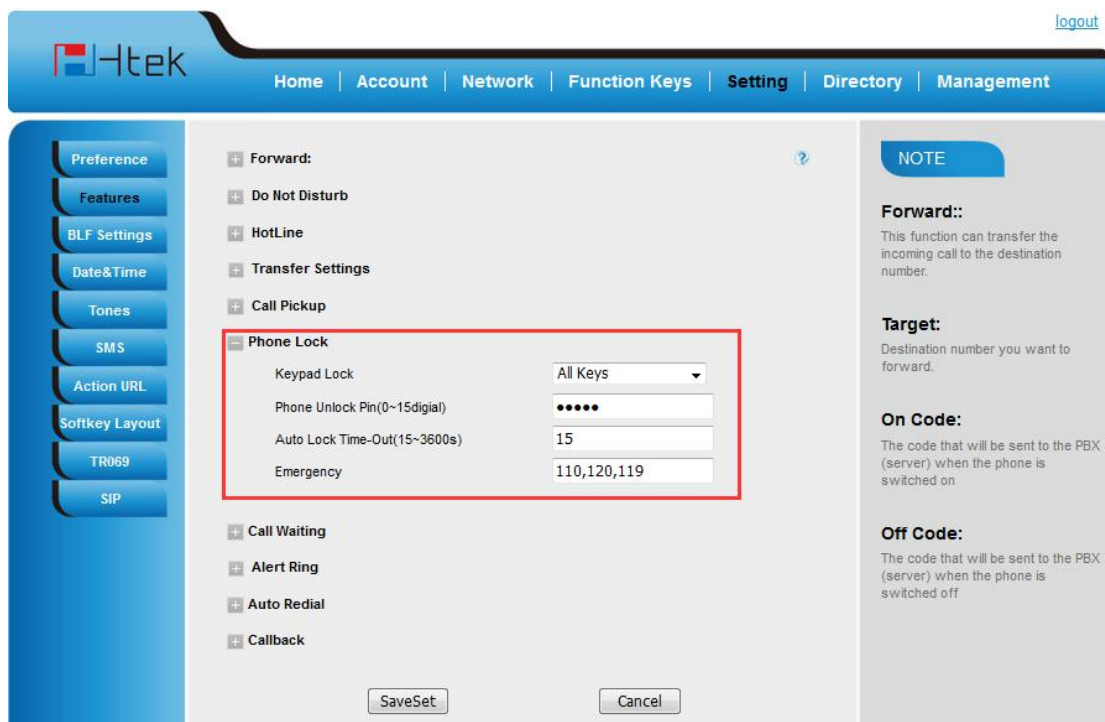

The screenshot shows the Htek web interface with the 'Setting' menu selected. The 'Preference' section is active, and the 'Phone Lock' settings are highlighted with a red box. The settings are as follows:

Setting	Value
Keypad Lock	All Keys
Phone Unlock Pin(0~15digital)	*****
Auto Lock Time-Out(15~3600s)	15
Emergency	110,120,119

Other settings visible include Forward, Do Not Disturb, HotLine, Transfer Settings, Call Pickup, Call Waiting, Alert Ring, Auto Redial, and Callback. A 'NOTE' section on the right explains the Forward function and provides information about On Code and Off Code.

To Disable Keypad Lock via Webpage

1. Click Webpage Setting → Preference
2. To choose Disable for the Phone Lock.
3. To click Saveset to save the configuration.


Hot Line


To configure Hot Line

1. Press Menu → Features → Hot Line
2. Enter the Number and delay time (as present, we support off hook auto dial).

3. Press  or Save soft key to save the configuration

To configure Hotline auto dial via Web Interface

1. Setting → Features.
2. Fill the number in the Hotline Number and Hotline Time-out.
3. Click  to save the configuration.

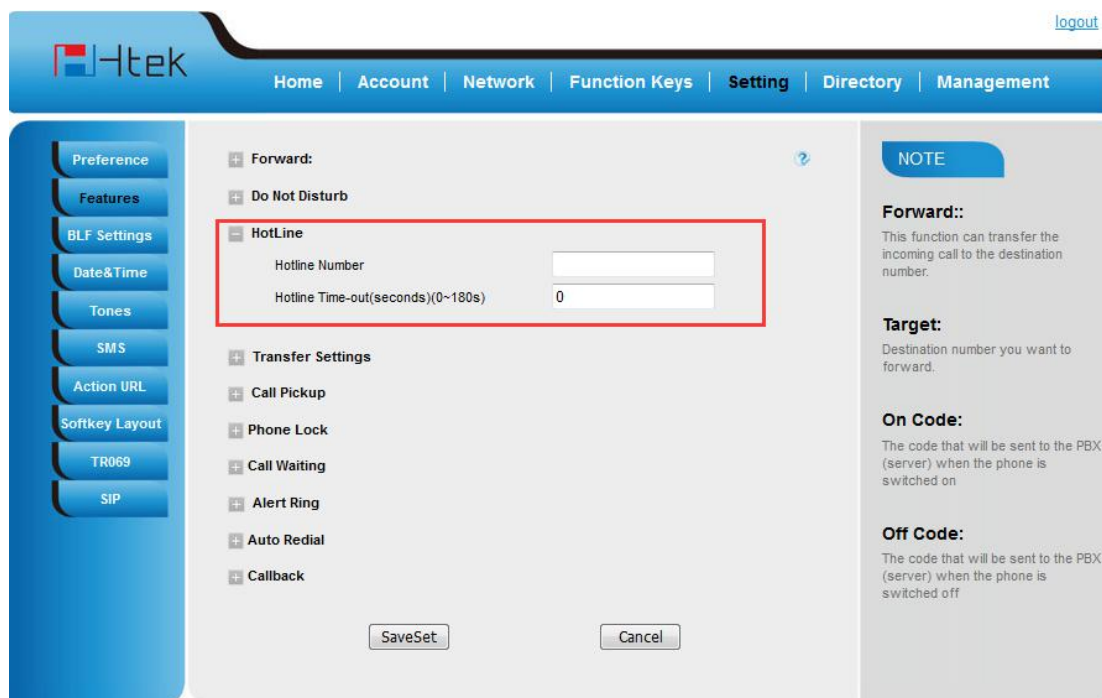

Delete the hotline number and save the configuration, and then now the Hotline auto dial is cancelled.

Auto Redial


When this option is set, if the phone you call is busy and does not set call waiting or voice mail, your LCD screen will prompt for Auto Redial, as shown in figure.




If you press OK, your LCD will prompt Auto Redial Interval and Auto Redial Times



To configure Auto Redial via Web Interface

1. Click Setting → Features → Auto Redial
2. Select On or Off for Auto Redial.
3. Fill the number 1~300 seconds for the Auto Redial Interval.
4. Fill the number 1~300 times for the Auto Redial Times.
5. Click  to save the configuration.

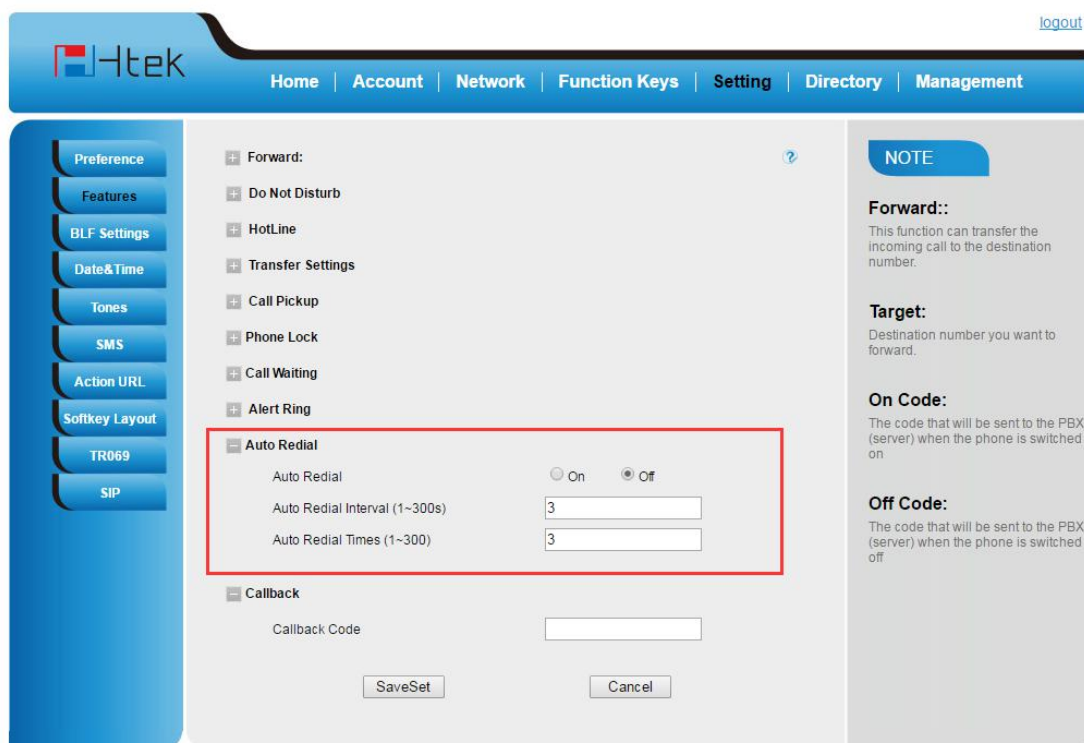


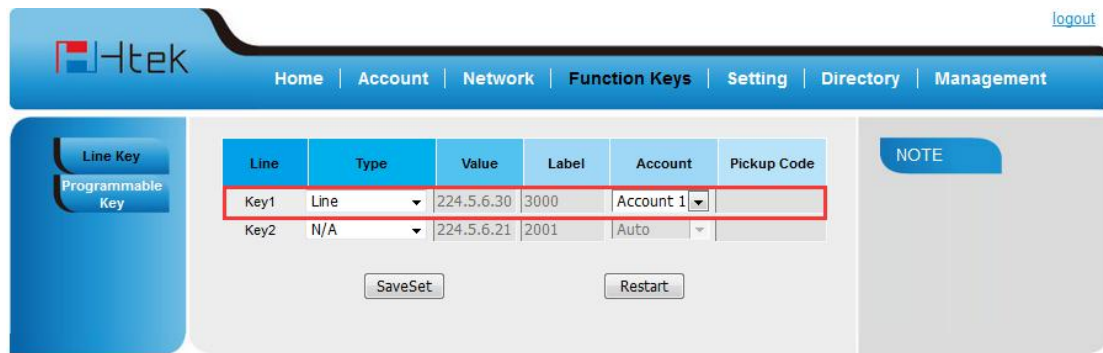
Function Key Features Settings

Line

It works same as Line keys.

To configure Line Feature via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the wanted Key and set as Line.
3. Select the Account.
4. Click the  button to save the configuration.



Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	N/A	224.5.6.21	2001	Auto	




SaveSet Restart

NOTE

Speed Dial


With this feature, you can dial one directory by press the definite key.

To configure Speed Dial feature via phone interface


1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Press  and  key to select the Speed Dial in the type field.
3. Enter the targeted Number.
4. Press  or Save soft key to save the configuration

Then the selected Line or Line Key will work as Speed Dial.

To configure Speed Dial feature via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the wanted Line or Line Key and set as Speed Dial.
3. Enter the desired phone number in the Value field.
4. Select the Account ID
5. Click the  to save the configuration.

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Line Key
Programmable
Key

Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	Speed Dial	516		Account 1	






NOTE

BLF

You can use the BLF (Busy Lamp Field) feature to monitor a specific one whether his phone is busy or free.


1. When the monitored line is idle, the light is steady green.
2. When the monitored line is ringing, the light is blinking red, press the BLF key to pick the phone up directly.
3. When the monitored line is calling or in a conversation, the light is steady red.

To configure a BLF key by phone

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example).
2. Select the targeted Line or Line Key.
3. Press  and  or press info soft key to select the BLF in the type field.
4. Enter the targeted Value Number.
5. Press  and  to select the Account ID.
6. Enter the Pickup Code.
7. Press  or Save soft key to save the configuration

To configure a BLF key by web

1. Click Function keys → Line or Line Key.

2. Select the desired Line or Line Key and select BLF in the Type.
3. Enter the monitored phone number in the Value field.
4. Select the Account ID
5. Filled the Pickup code.
6. Click the  to save the configuration and then restart.

Note:

This feature is not available on all servers. For more information, contact your system administrator.

After setting the BLF key, do not need to restart the phone.

BLF List

To configure BLF List via web interface:

1. Login and click Account

* Account Active	<input type="radio"/> No <input checked="" type="radio"/> Yes	
* Primary SIP Server	<input type="text" value="as.iop2.broadworks.net"/>	?
Fallover SIP Server	<input type="text"/>	?
Second Fallover SipServer	<input type="text"/>	?
Prefer Primary SIP Server	<input checked="" type="radio"/> No <input type="radio"/> Yes	?
Outbound Proxy	<input type="text"/>	?
* SIP Transport	<input checked="" type="radio"/> UDP <input type="radio"/> TCP <input type="radio"/> TLS	?
NAT Traversal	<input type="radio"/> No <input checked="" type="radio"/> No,but send keep alive <input type="radio"/> STUN	
Lable	<input type="text"/>	?
* SIP User ID	<input type="text" value="2404984031"/>	?
* Authenticate ID	<input type="text" value="2404984031"/>	?
* Authenticate Password	<input type="password" value="....."/>	?
Name	<input type="text" value="4031"/>	?
DNS Mode	<input checked="" type="radio"/> A Record <input type="radio"/> SRV <input type="radio"/> NAPTR/SRV	

- Click Advanced and then fill the Eventlist BLF URL.

UAC Specify Refresher	<input type="radio"/> UAC <input type="radio"/> UAS <input checked="" type="radio"/> Omit(Recommended)
UAS Specify Refresher	<input checked="" type="radio"/> UAC <input type="radio"/> UAS(When UAC did not specify refresher tag)
Force Invite	<input checked="" type="radio"/> No <input type="radio"/> Yes ?
Hook Flash Timing	minimum: <input type="text" value="30"/> maximum: <input type="text" value="100"/> ?
Special Feature	<input type="text" value="Standard"/>
Eventlist BLF URL	<input type="text" value="blf_sales"/>
Shared Line	<input type="text" value="Disable"/>
SIP Server Type	<input type="text" value="Default"/>

- To configure BLF List Keys

3.1 Click→Function Keys→Line Key

3.2 Select the BLF List in the Type Field.


3.3. Select Account

3.4 Click Saveset to save the configuration and then restart the Phone.

For more information, please check [BLF list Note](#) on www.htek.com web.

Voice Message

To configure the Voice mail feature

1. Press Menu→Messages→Voice Mail→Set Voice Mail.
2. Enter the Account1/2/3/4 NO.
3. Press  or Save soft key to save the configuration




Note:

This feature is not available on all servers. For more information, contact your system administrator.

Direct Pickup


With this feature, you can pick up the set line when it ringing.


To configure Direct Pickup feature via phone interface

1. Press Menu →Features →Function Keys→Line or Line Keys as Function Keys → Line Key1(for example)
2. Press  and  key to select the Speed Dial in the type field.
3. Enter the value.
4. Press  or Save soft key to save the configuration

Then the selected Line or Line Key will work as Direct Pickup.

To configure Direct Pickup feature via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the wanted Line or Line Key and set as Direct Pickup.
3. Enter the pickup code and followed the desired phone number in the Value field.
4. Select the Account ID
5. Click the  button to save the configuration.

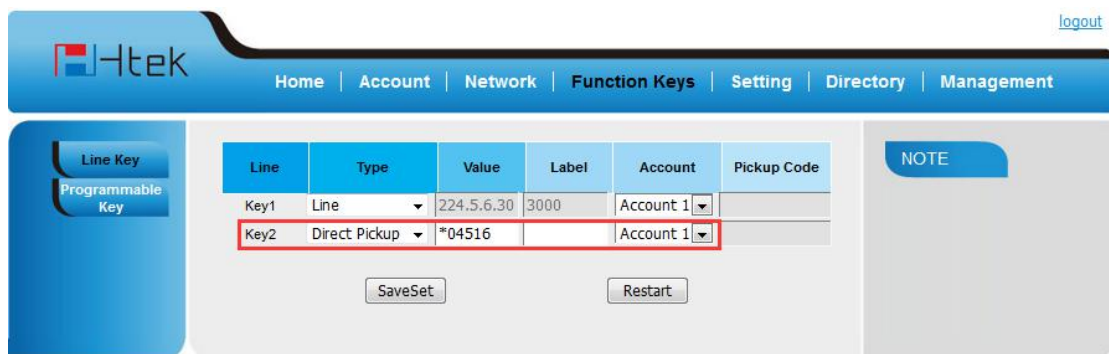




Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	Direct Pickup	*04516		Account 1	

SaveSet Restart


Group Pickup


With this feature, you can pick up the specified group that you want incoming calls.

To configure the Pick up via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  or press info soft key to select the Group Pickup in the type field.
4. Enter pickup code and followed the desired group number
5. Press  or Save soft key to save the configuration

To configure the Group Pick up via Web interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Group Pickup in the Type.
3. Enter the pickup code and followed the desired Group number in the Value field.
4. Click the  to save the configuration.

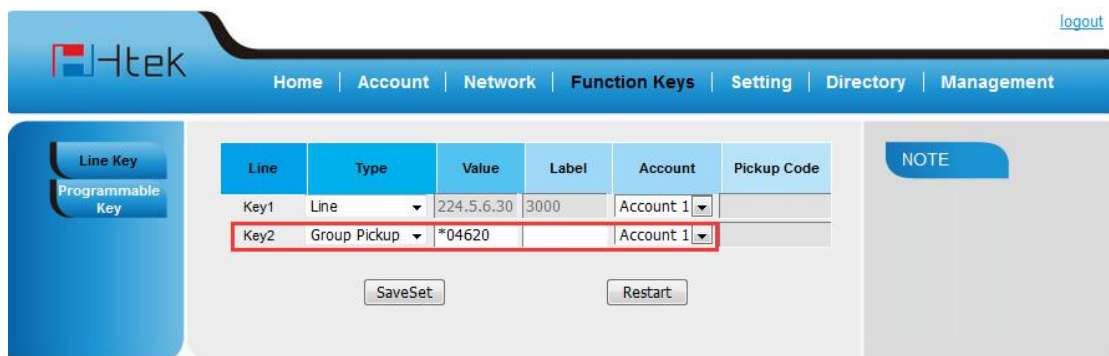




Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	Group Pickup	*04620		Account 1	

Call Park

With this feature, you can put a call on hold and continue the conversation from another phone.


To configure the Call Park via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Press  and  or press Switch soft key to select the Call Park type.
3. Press  or Save soft key to save the configuration

To configure the Call Park via Web interface

1. Click Function key → Line or Line Key.
2. Select the desired Line or Line Key and select Call park in the Type.
3. Enter the call park code in the value field.

- Click the  button to save the configuration.

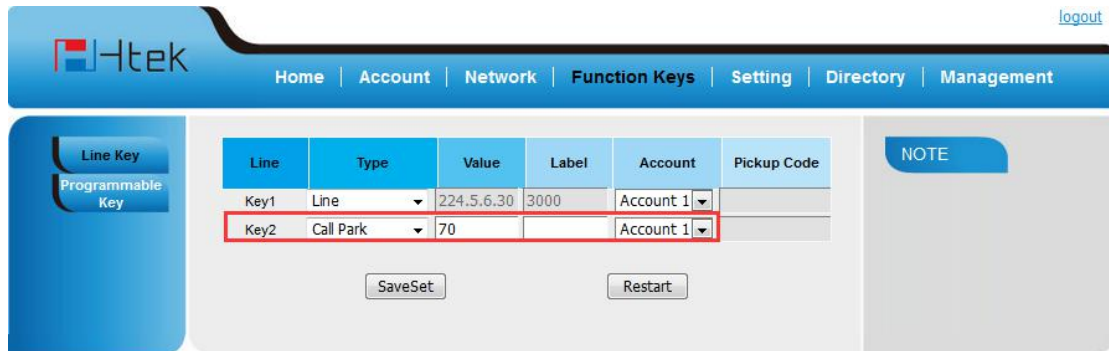




Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	Call Park	70		Account 1	

Intercom


When use the intercom feature, you can quickly get access connect to the configured one.


To configure intercom feature via phone interface

- Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
- Press  and  or press info soft key to select the intercom in the type field.
- Enter the targeted Number.
- Press  or Save soft key to save the configuration

Then the selected Line or Line Key will work as intercom.

To configure Intercom feature via Web Interface

- Click Function keys → Line or Line Key.
- Select the wanted Line or Line Key.
- Enter the desired phone number in the Value field.
- Select the Account ID
- Click the  button to save the configuration.

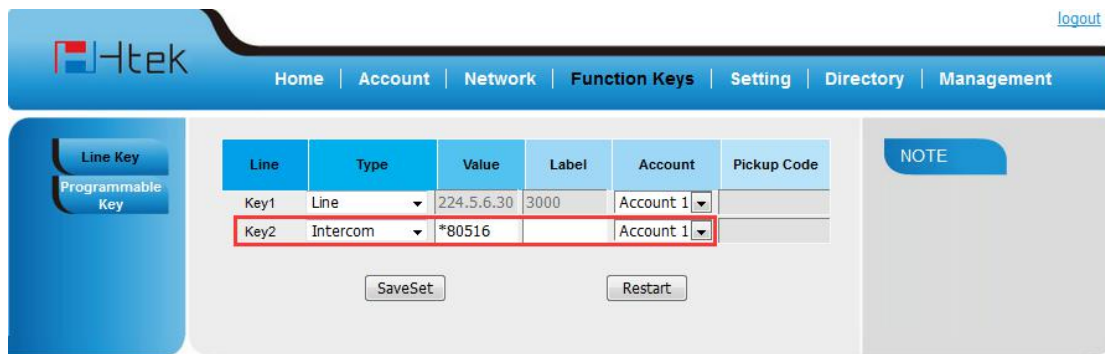



Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	Intercom	*80516		Account 1	

SaveSet Restart

NOTE

If you want to achieve the intercom feature, you must enable the “Allow Auto Answer By Call-Info”


1. Click the account
2. Select the desired account from the pull-down list of Account in the Account field.
3. Click the advanced
4. Enable the “Allow Auto Answer By Call-Info”
5. Click the  button to save the configuration.





Send Anonymous	<input checked="" type="radio"/> No	<input type="radio"/> Yes	
Anonymous Call Rejection	<input checked="" type="radio"/> No	<input type="radio"/> Yes	
Check SIP User ID	<input checked="" type="radio"/> No	<input type="radio"/> Yes	
Auto Answer	<input checked="" type="radio"/> No	<input type="radio"/> Yes	
Allow Auto Answer By Call-Info	<input type="radio"/> No	<input checked="" type="radio"/> Yes	

Intercom Barge

If this option is enabled, when there is an active call and an incoming intercom call arrives, the previous call will be put on hold and the intercom call will be answered

1. Click the Setting → Preference
2. Set On or Off for Intercom Barge.
3. Click  for the setting.



Intercom Barge	<input type="radio"/> On	<input checked="" type="radio"/> Off	
----------------	--------------------------	--------------------------------------	---

Note:


This feature is not available on all servers. For more information, contact your system administrator.

DTMF

When the key is configured as DTMF key, you are allowed to send out the desired DTMF number during the conversation.




To use this feature, you should sure that the DTMF Tone is on.

To configure the DTMF via Phone Interface

1. Click Setting→Preference
2. Select On for Keypad DTMF Tone.
3. Click the  button to save the configuration.




To configure the DTMF via Phone Interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the DTMF in the type field.
4. Enter the value with the Desired DTMF number
5. Press  or Save soft key to save the configuration

To configure the DTMF via Web interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select DTMF in the Type.
3. Fill the value with the Desired DTMF number.

- Click the  button to save the configuration.

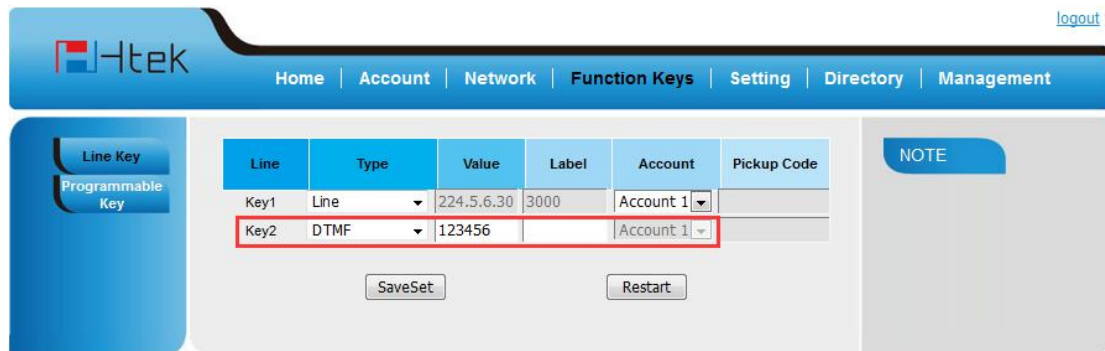




Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	DTMF	123456		Account 1	

Prefix

If the key is configured as Prefix key, you can set the number prefix (e.g. Before the number plus 9), then you don't input 9, press the key and 9 will display on the LCD interface.

To configure the Prefix via Phone Interface


- Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
- Select the wanted Line or Line Key.
- Press  and  key to select the Prefix in the type field.
- Enter the value with with number that you want to set as prefix
- Press  or Save soft key to save the configuration

To configure the Prefix via Web interface

- Click Function key → Line or Line Key.
- Select the desired Line or Line Key and select Prefix in the Type.
- Fill the value.

- Click the  button to save the configuration.

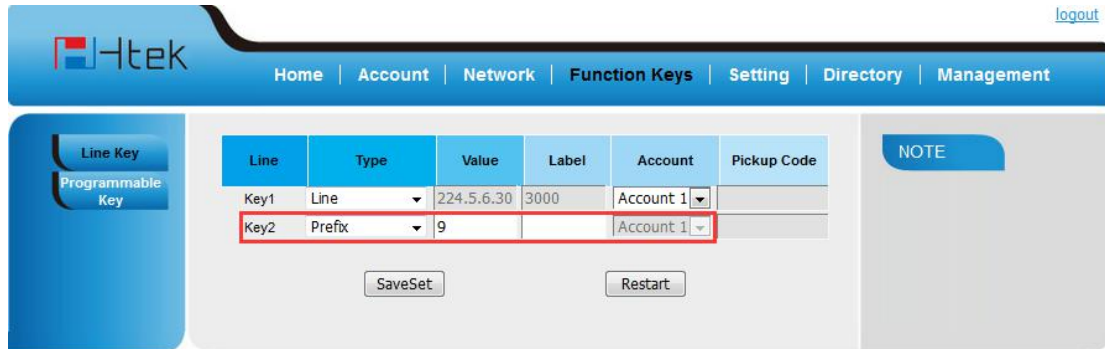


Then when you press this key, the set value is input directly.




Local Group

When use the Local Group feature, press the key and enter the local Contacts interface quickly.


To configure the Local group via Phone Interface

- Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1(for example)
- Select the wanted Line Key.
- Press  and  key to select the Local group in the type field.
- Press  or Save soft key to save the configuration

To configure the Local Group via Web interface

- Click Function key → Line Key.
- Select the desired Key and select Local group in the Type.
- Click the  button to save the configuration.

Then you can press the local group key to access the pre-defined contact group in the local directory quickly.

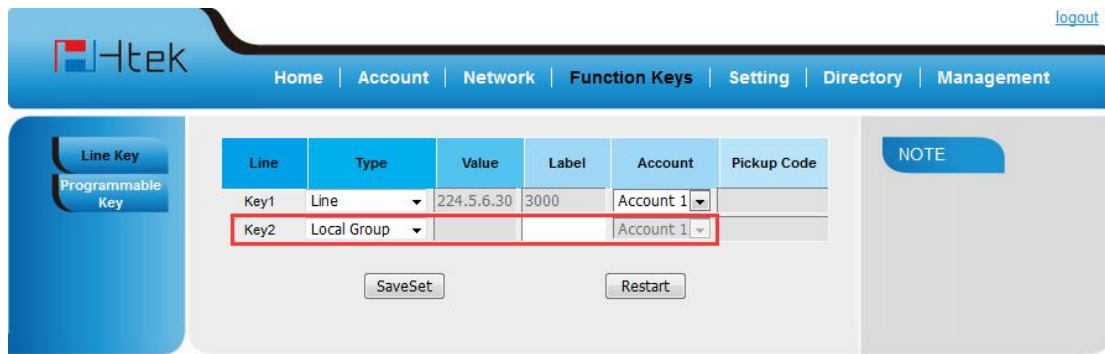

Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	Local Group			Account 1	




SaveSet Restart

NOTE


XML Group


When use the XML Group feature, press the key and enter the Remote Contacts interface quickly.

To configure the XML group via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the XML group in the type field.
4. Press  or Save soft key to save the configuration

To configure the XML Group via Web interface

1. Click Function key → Line Key.
2. Select the desired Key and select XML group in the Type.
3. Click the  button to save the configuration.

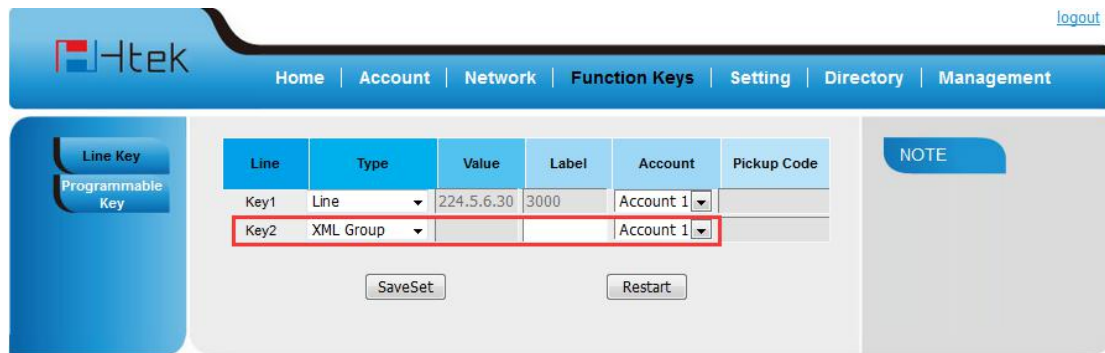

Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	XML Group			Account 1	




SaveSet Restart

NOTE


LDAP


When use the LDAP feature, you can get the LDAP Phonebook directly.

To configure the LDAP via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the LDAP in the type field.
4. Press  or Save soft key to save the configuration

To configure the LDAP via Web interface

1. Click Function key → Line Key.
2. Select the desired Key and select LDAP in the Type.
3. Click the  button to save the configuration.

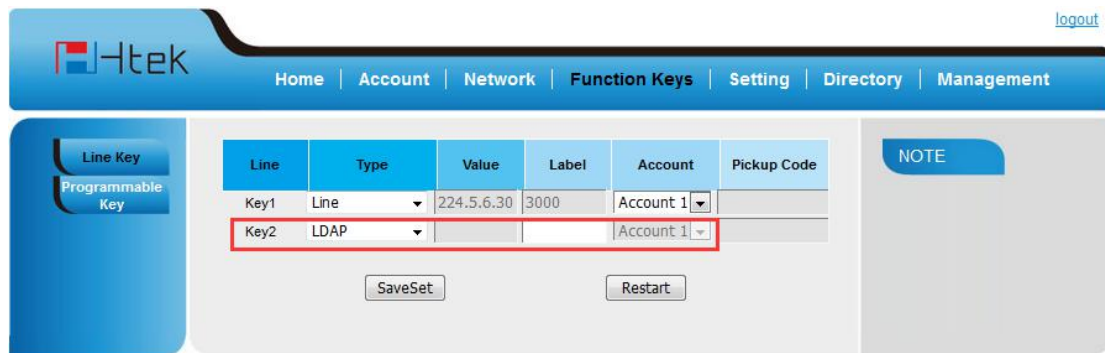

Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	LDAP			Account 1	




SaveSet Restart

NOTE


Broadsoft Group

When use the BroadSoft Group feature, press the key and enter the Remote Contacts interface quickly.

To configure the Broadsoft group via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Broadsoft group in the type field.
4. Press  or Save soft key to save the configuration

To configure the Broadsoft group via Web interface




1. Click Function key → Line Key.
2. Select the desired Key and select Broadsoft group in the Type.
3. Click the  button to save the configuration.

Conference


To configure the Conference via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1(for

example)

2. Select the wanted Line Key.
3. Press  and  key to select the Conference in the type field.
4. Press  or Save soft key to save the configuration




To configure Conference via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Key and select Conference in the Type.
3. Click the  button to save the configuration.

Forward


If the key is configured as Forward key, press this key under the idle status, the IP phone will turn to the Always Forward interface and you can set the Forward to number, then when there is any call to the number will be forwarded to the set number automatically.

To configure the Forward via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Forward in the type field.
4. Enter the Number that to forward.
5. Press  or Save soft key to save the configuration

To configure Forward via Web Interface




1. Click Function keys → Line Key.

2. Select the desired Key and select Forward in the Type.
3. Enter the Value with the number you want to forward
4. Click the  button to save the configuration.


Transfer

You are able to configure the key as a transfer key to perform the Blind/Attended Transfer.

To configure the Transfer via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Transfer in the type field.
4. Enter the Number that transfer to
5. Press  or Save soft key to save the configuration




To configure Transfer via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Key and select Transfer in the Type.
3. Enter the Value with the number that wanted transfer to
4. Click the  button to save the configuration.


Hold

The key can be configured as a hold key. You can use this key to hold and resume a call during the conversation.

To configure the Hold via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Hold in the type field.
4. Press  or Save soft key to save the configuration



To configure Hold via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Key and select Hold in the Type.
3. Click the  button to save the configuration.

Group Listening


With this feature, when you active a call, you can listen using Handset and Free-speaker, but only can use the handset to speak.

To configure the Group listening via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press  and  key to select the group listening in the type field.

4. Press  or Save soft key to save the configuration




To configure Group listening via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Key and select Group listening in the Type.
3. Click the  button to save the configuration.


DND

When you use the DND feature, the phone is to reject all incoming calls automatically and you can see the DND icon shown on the Top of the LCD on idle page.

To configure the DND via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press  and  key to select the DND in the type field.
4. Press  or Save soft key to save the configuration

To configure DND via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Key and select DND in the Type.
3. Click the  button to save the configuration.

To enable DND feature

Press the DND soft key when the phone is idle status, and then DND icon shown on the LCD.


To disable DND feature

Press the DND soft key again, and then there is no DND icon on the LCD.

Redial

If the key is configured as Redial key, you can redial the last placed call from the IP Phone.

To configure Redial via Web Interface


1. Click Function keys → Line key/Line Key
2. Select the desired Key and select redial in the Type.
3. Enter the Label displayed on LCD.
4. Click the  button to save the configuration.

SMS

Send SMS

To send SMS via web Interface

1. Click Setting→SMS
2. Select the account(from which account the SMS sent)
3. Enter the target number
4. Input the content of SMS, and click Send.

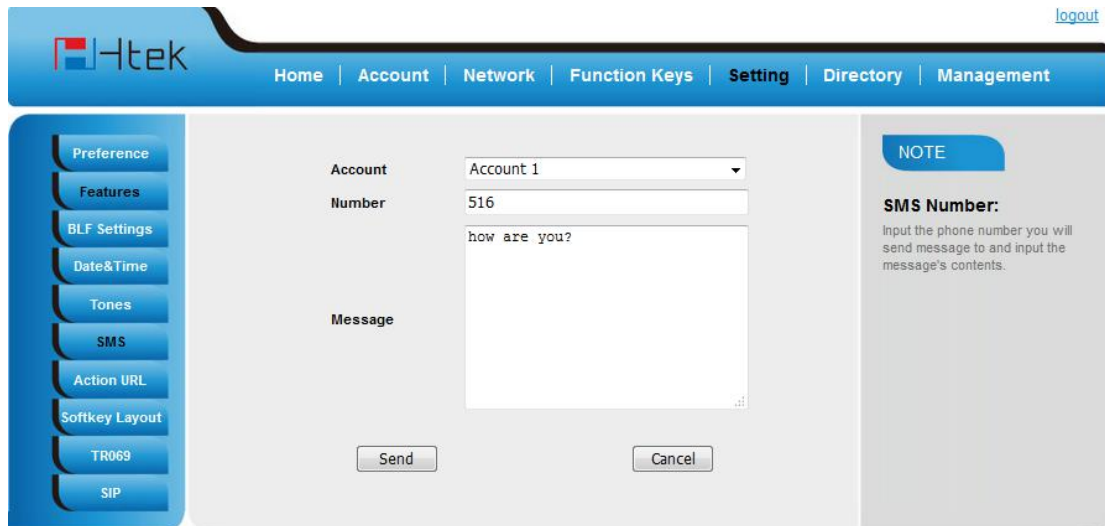




To send SMS via phone interface:


1. Click Menu→Message→Text Message→Set SMS
2. Enter the contents in the white field.
3. Press the save button
4. Select the account (from which account the SMS sent)
5. Enter the target number (to which account the number sent)
6. Press the Send button.

Set SMS Line Key

To configure the SMS via Phone Interface

1. Press Menu →Features →Function Keys→Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the SMS in the type field.
4. Press  or Save soft key to save the configuration






To configure SMS via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Key and select SMS in the Type.
3. Click the  button to save the configuration.


Record

With record feature, you can record calls by pressing a record key on the phone.

To configure the record via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  or press info soft key to select the Key Event in the type field.
4. Press  and  or press info soft key to select the Record.
5. Press  or Save soft key to save the configuration

To configure the record via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Record in the Type.
3. Click the  button to save the configuration.




Note:

Please contact the system administrator whether support this feature or not.


URL Record

The phone sends HTTP URL request to trigger a recording. Contact your system administrator for the predefined URL.

To configure the URL record via phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the URL Record.
4. Press  or Save soft key to save the configuration






To configure the record via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Line or Line Key and select URL Record in the Type.
3. Click the  button to save the configuration.

Paging

With this feature, you can call a paging group directly.

To configure the paging via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  or press info soft key to select the Key Event in the type field.
4. Press  and  or press info soft key to select the Paging.
5. Press  or Save soft key to save the configuration

To configure the Paging via Web interface






1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Paging in the Type.

- Click the  button to save the configuration.


Shared Line

This feature allows subscribers to share SIP lines. Moreover it also provides status monitoring of the shared line.

To configure the line key as shared line via phone interface

- Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
- Select the wanted Line or Line Key.
- Press  and  key to select the Shared Line in the type field.
- Press  and  key to select the Account ID.
- Enter the Label
- Enter the Value
- Press  or Save soft key to save the configuration

To configure the line key as shared line via Web Interface

- Click Function keys → Line or Line Key.
- Select the desired Line or Line Key and select Shared Line in the Type.
- Enter the Value.
- Enter the Label.
- Select the Account ID
- Click the  button to save the configuration and then restart.




Note:

This feature is not available on all servers. For more information, contact your system administrator.


Public Hold


The key can be configured as a public hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold or resume a call.

To configure the Public hold via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Public Hold.
4. Press  or Save soft key to save the configuration

To configure public hold via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Key and select public hold in the Type.
3. Click the  button to save the configuration.

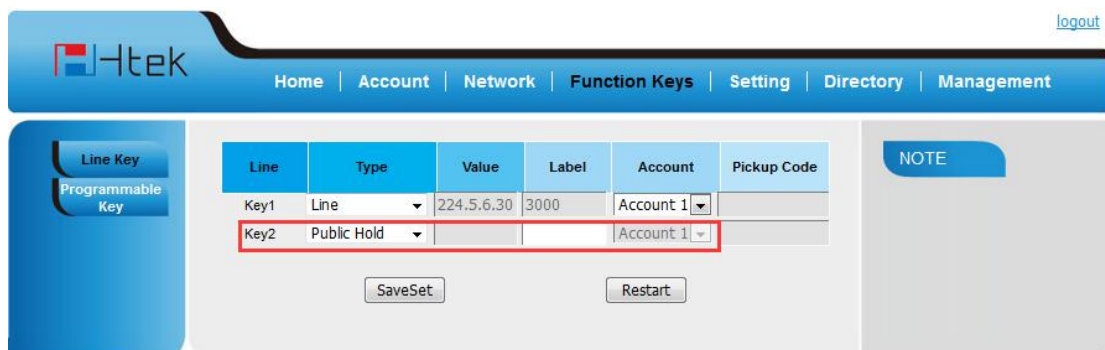

The screenshot shows the Htek web interface with the 'Function Keys' menu item selected. On the left, there is a sidebar with 'Line Key' and 'Programmable Key' options. The main content area displays a table for configuring function keys. The table has columns: Line, Type, Value, Label, Account, and Pickup Code. Two rows are shown: Key1 and Key2. Key2 is highlighted with a red border and is configured as a 'Public Hold' key. Below the table, there are 'SaveSet' and 'Restart' buttons. A 'NOTE' box is visible on the right side of the interface.




Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	Public Hold			Account 1	

Buttons:  


Private Hold


The key can be configured as a private hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold the call, but only the initiator can resume the call.

To configure the Private hold via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Private Hold.
4. Press  or Save soft key to save the configuration

To configure private hold via Web Interface

1. Click Function keys →Line Key.
2. Select the desired Key and select public hold in the Type.
3. Click the  button to save the configuration.

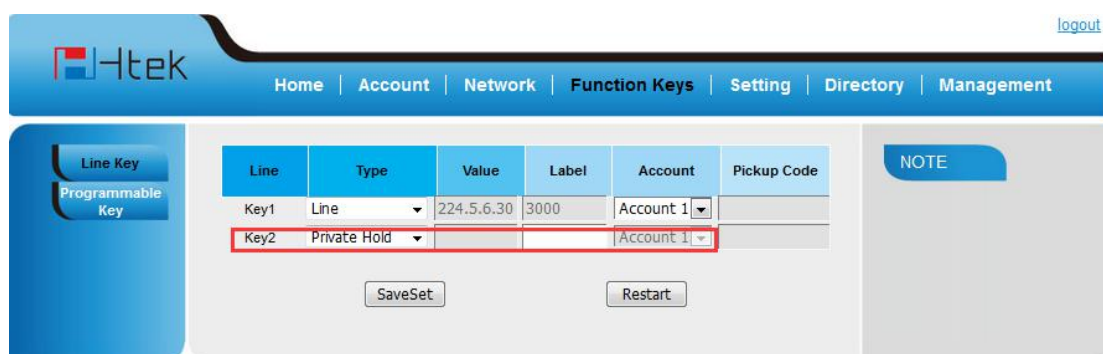

The screenshot shows the Htek web interface with the 'Function Keys' tab selected. On the left, there is a sidebar with 'Line Key' and 'Programmable Key' options. The main area displays a table with columns: Line, Type, Value, Label, Account, and Pickup Code. The table has two rows: 'Key1' with 'Line' type and 'Key2' with 'Private Hold' type. The 'Key2' row is highlighted with a red border. Below the table are 'SaveSet' and 'Restart' buttons. A 'NOTE' section is on the right.

Line	Type	Value	Label	Account	Pickup Code
Key1	Line	224.5.6.30	3000	Account 1	
Key2	Private Hold			Account 1	

Buttons: SaveSet, Restart

Share line

Htek IP Phone supports shared call appearance by Broadsoft and XCast standard. This feature allows members of the SCA group to shared SIP lines and provides status monitoring (idle, active, progressing, hold) of the shared line. When there is an incoming call designated for the SCA group,

all of the members of the group will be notified of an incoming call and will be able to answer the call from the phone with the SCA extension registered.







All the users that belong to the same SCA group will be notified by visual indicator when a user seizes the line and places an outgoing call, and all the users of this group will not be able to seize the line until the line goes back to an idle state or when the call is placed on hold (with the exception of when multiple call appearances are enabled on the server side).


In the middle of the conversation, there are two types of hold: Public Hold and Private Hold. When a member of the group places the call on public hold, the other users of the SCA group will be notified of this by the red-flashing button and they will be able to resume the call from their phone by pressing the line button. However, if this call is placed on private-hold, no other member of the SCA group will be able to resume that call.

To enable shared call appearance, the user would need to register the shared line account on the phone. In addition, they would need to navigate to “Account” -> “Advanced” on the webpage and set the line to “Shared Line” and “SIP Server Type”, and configure the line key or Line Key as “line” type with the desired account on webpage or LCD. If the user requires more shared call appearances, the user can configure multiple line keys (Function keys->Line key) to be “line” type associated with the account.


This feature is very useful in the boss and secretary scenario. For example, the secretary can share the boss' extension number on her phone. When there is an incoming call to the extension number of the boss, both the phones of the boss and the secretary will ring simultaneously. Either the boss or the secretary can answer the call. Calls on shared line can be placed on hold or barged in.

To configure the line key as line via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  or press  key to select the Line in the type field.
4. Press  and  or press  key to select the Account ID.
5. Enter the Label
6. Enter the Value

7. Press  or Save soft key to save the configuration

To configure the line key as line via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Line in the Type.
3. Enter the Value.
4. Enter the Label.
5. Select the Account ID
6. Click the  button to save the configuration and then restart.

Note:

This feature is not available on all servers. For more information, contact your system administrator.




Hot Desking


Hot Desking originates from the definition of being the temporary physical occupant of a work station or surface by a particular employee. A primary motivation for Hot Desking is cost reduction. This feature is regularly used in places where not all the employees are in the office at the same time, or not in the office for very long at all, which means actual personal offices would be often vacant, consuming valuable space and resources.

You can use Hot Desking on the IP phone to logout the existing accounts and then log in a new account, that is, many users can share the phone resource in different time. To use this feature, you need to configure a Hot Desking key in advance.


This feature is supported on the version 1.0.3.82 or later

To configure the hot desking via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  or press  key to select the hot desking.

4. Enter the display name in the value field.
5. Press  or Save soft key to save the configuration

To configure the hot desking via web interface:

1. Click Function keys → Line Key.
2. Select the desired Key and select hot desking in the Type.
3. Enter the number in the value field.
4. Select the desired account from the pull-down list of Account field.
5. Click the  button to save the configuration.

To use the Hot desking feature on the user interface:

1. Press the Hot desking key when the IP Phone is idle.
2. Enter the Extension number and password

1.User Name:532
2.Password:*****
Cancel abc Delete Save

3. Click Save softkey

You can see the account information which has changed.





Note:

This feature is not available on all servers. For more information, contact your system administrator.


ACD

ACD feature is often used in offices for customer service, such as call center. The ACD system handles large volumes of incoming calls from callers who have no need to talk to a specific person but who require assistance from any of multiple persons at the earliest opportunity. The ACD feature on the Htek IP Phone allows the ACD system to distribute calls from large volumes of incoming calls to the registered IP phone users. To use this feature, you should configure an ACD key in advance.

To configure the ACD via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  or press  key to select the ACD.
4. Enter the label in the label field.
5. Select the desired account in the Account field.
6. Press  or Save soft key to save the configuration

To configure the ACD via web interface:

1. Click Function keys → Line Key.
2. Select the desired Key and select ACD in the Type.
3. Enter the label in the label field.
4. Select the desired account from the pull-down list of Account field.
5. Click the  button to save the configuration.

Note:

This feature is not available on all servers. For more information, contact your system administrator.





Zero Touch

You can use this key feature to configure auto provision and network parameters quickly.


This feature is supported on the version 1.0.3.82 or later

To configure the zero touch via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)

2. Select the wanted Line or Line Key.
3. Press  and  or press  key to select the zero touch
4. Press  or Save soft key to save the configuration

To configure the zero touch via web interface:

1. Click Function keys → Line Key.
2. Select the desired Key and select zero touch in the Type.
3. Click the  button to save the configuration.

To use the zero touch feature on the user interface:

1. Press the zero touch key when the IP Phone is idle.
2. The IP Phone will enter the WAN Port interface, you can change the WAN Type by pressing the Navigation keys.
3. Press the Next softkey to enter Network interface, then you can configure some information.
4. Press the Next softkey again, you can configure auto provision information.
5. When you finish the setting, you can press the OK to accept the changes.

Note:




This feature is not available on all servers. For more information, contact your system administrator.

Multicast Paging


You can use multicast paging to quickly and easily forward out time sensitive announcements to people within the multicast group. You can configure a multicast paging key or a paging list key on the phone, which allows you to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address(es) without involving SIP signaling. You can configure the phone to receive an RTP stream from pre-configured multicast listening address(es) without involving SIP signaling. You can specify up to 10 multicast listening addresses.

Sending RTP Stream

To configure a multicast paging key via phone interface

1. Press Menu→Feature →line or Line Key→Line Key1 (e.g.)
2. Press  and  or switch key to select the multicast paging in the type field.
3. Enter the multicast IP address and port number (e.g., 224.5.6.20:2000) in the Value field.
4. The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.
5. Press  or Save soft key to save the configuration

To configure a multicast paging key via web interface

1. Function keys->line key:
2. Select the desired Key and select multicast paging in the Type.
3. Enter the multicast IP address and port number (e.g., 224.5.6.20:2000) in the Value field.
The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.
4. Click the  button to save the configuration.

Sending RTP Stream:

Press the multicast paging key when the phone is idle.

The phone sends RTP to a preconfigured multicast address (IP: Port). Any phone in the local network then listens to the RTP on the preconfigured multicast address (IP:Port). For both sending and receiving of the multicast RTP, there is no SIP signaling involved.

The multicast paging key LED illuminates solid green.

Receiving RTP Stream

You can configure the phone to receive a Real Time Transport Protocol (RTP) stream from the pre-configured multicast address(es) without involving SIP signaling. You can specify up to 10 multicast addresses that the phone listens to on the network.

How the phone handles incoming multicast paging calls depends on Paging Barge and Paging Priority Active parameters configured via web user interface.

Paging Barge

The paging barge parameter defines the priority of the voice call in progress. If the priority of an incoming multicast paging call is lower than that of the active call, it will be ignored automatically. If Disabled is selected from the pull-down list of Paging Barge, the voice call in progress will take

precedence over all incoming multicast paging calls.

Valid values in the Paging Barge field:

- 1 to 10: Define the priority of the active call, 1 with the highest priority, 10 with the lowest.
- Disabled: The voice call in progress will take precedence over all incoming paging calls.


Paging Priority Active

The paging priority active parameter decides how the phone handles incoming multicast paging calls when there is already a multicast paging call on the phone. If enabled, the phone will ignore incoming multicast paging calls with lower priorities, otherwise, the phone will answer incoming multicast paging calls automatically and place the previous multicast paging call on hold. If disabled, the phone will automatically ignore all incoming multicast paging calls.


Multicast Codec:

You can only configure the codec by web interface.


To configure multicast codec key via web interface

1. Click Directory ->Multicast Paging:
2. Select the desired codec from the pull-down list of Multicast Codec
3. Click the  button to save the configuration.

To configure multicast listening addresses via web interface:

1. Click Directory->Multicast paging.
2. Select the desired value from the pull-down list of Paging Barge.
3. Select the desired value from the pull-down list of Paging Priority Active.
4. Enter the multicast IP address(es) and port number (e.g., 224.5.6.20:2000) which the phone listens to for incoming RTP multicast in the Listening Address field.
5. Enter the label in the Label field.
6. Click  button to save the configuration.

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Directory

Remote Phone Book

Call History

LDAP

Network Directory

MultiCast Paging

Paging Barge

10

Paging Priority Active

Enable

Multicast Codec

PCMU

Index	Listening Address	Label	Multi Priority
IP Address 1	224.5.6.20:2000	2000	1
IP Address 2			2
IP Address 3			3
IP Address 4			4
IP Address 5			5
IP Address 6			6
IP Address 7			7
IP Address 8			8
IP Address 9			9
IP Address 10			10

SaveSet

Cancel

NOTE

Note:

The priorities of listening addresses are predefined: 1 with the highest priority, 10 with the lowest. Both the multicast paging sender and receiver's phones play a warning tone when establishing a multicast paging call. Multicast listening addresses are configurable via web interface only.

Upgrade

Factory Reset

To set Factory Reset by phone interface

1. Press Menu → Setting → Advanced Setting(default password: admin) → Phone Setting → Factory Reset
2. Press OK soft key in the warning page.

To Reset to Factory via web interface

1. Click Management → Upgrade


- Click **Reset To Factory** and then confirm the setting.



Pcap Feature


To use pcap via web interface:


- Click Management→Tools
- Click Start and then operation the phone
- When finish the operation, click stop and then click Export.
- Then you'll get the Pacp captures.

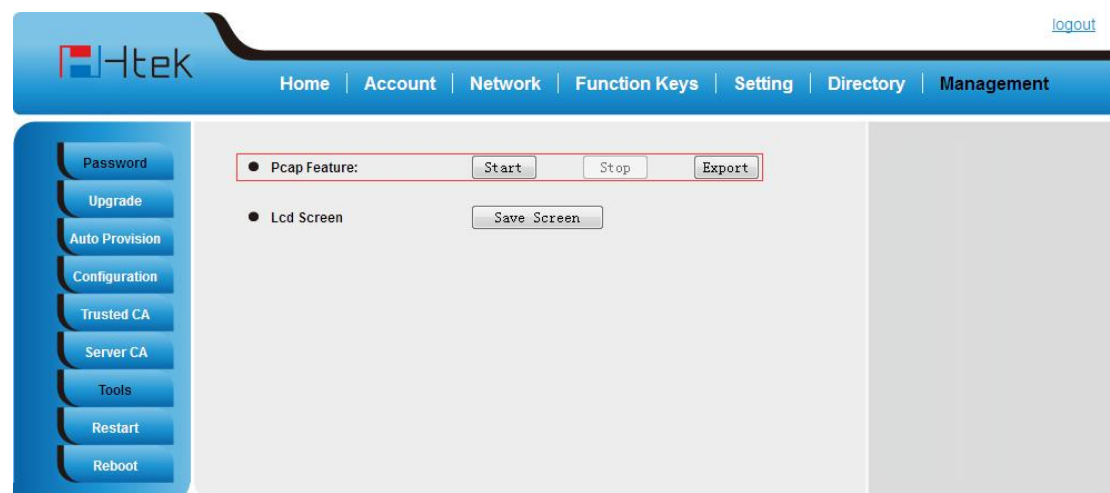

System Log

To download system log via web interface:

1. Click Management→Configuration
2. Click  of the system Log
3. Then you'll get a txt file: syslog.txt.



Upgrade

To upgrade via HTTP, the “Management”->“auto provision”->” Firmware Upgrade”-> “Upgrade Mode” field needs to be set to HTTP, respectively. “Firmware Server Path” needs to be set to a valid URL of a HTTP server, server name can be in either FQDN or IP address format. Here are examples of some valid URL.

e.g. firmware.mycompany.com:5688/Htek


e.g. www.mycompany.com:5688/fm/Htek

e.g. 218.2.83.110


Instructions for firmware upgrade via HTTP:

- (1) End users can choose to download the free HTTP server from <http://httpd.apache.org/> or use Microsoft IIS web server. Then setup HTTP server.
- (2) Unzip the firmware file and put all of them under the *root/fm* directory of the HTTP server.
- (3) Visiting “HTTP:\\192.168.0.254\\fm\\fw902.rom on localhost by browser” to verify the HTTP Server. If visiting “HTTP: \\192.168.0.254\\fm\\fw902.rom on other computer is no prompt to download fw902.rom file, please check the firewall (Suggest close the firewall).

To configure the server path via web interface:

1. Click Management→Auto provision:
2. Select the upgrade mode in the upgrade mode field
3. Enter the Firmware server path and config server path (192.168.0.254 is HTTP server).
4. Enter the HTTP server’s username and password (optional).
5. Click the  button to save the configuration.

6. Restart the UC902, IP Phone will restart and auto-get firmware files from HTTP server.

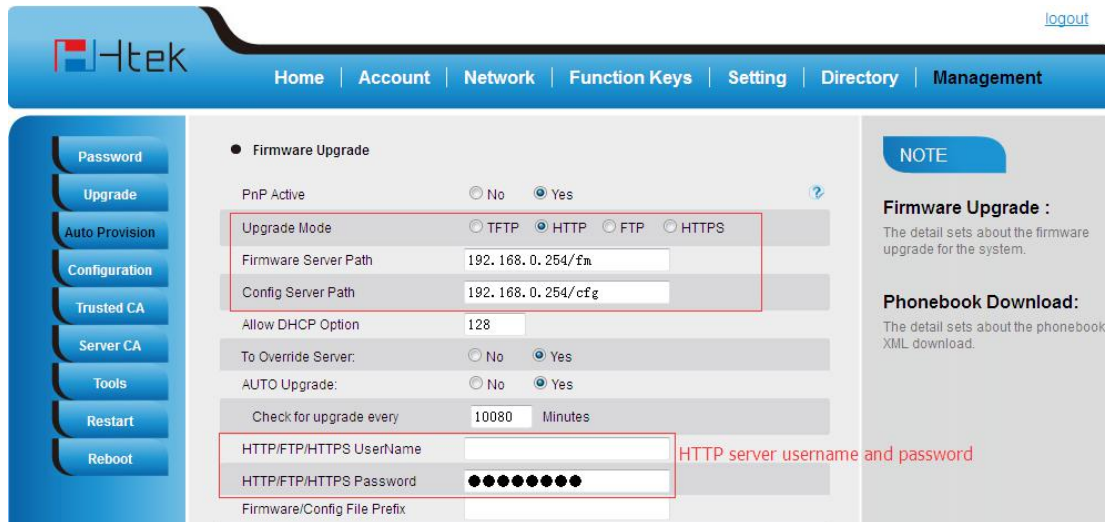

NOTES:

- Htek recommends end-user use the Htek HTTP server. For large companies, we recommend to maintain their own TFTP/HTTP/FTP/HTTPS server for upgrade and provisioning procedures.
- Once a “Firmware Server Path” is set, user needs to update the settings and restart the IP Phone. If the configured firmware server is found and a new code image is available, the UC902 will attempt to retrieve the new image files by downloading them into the UC902’s SDRAM. During this stage, the UC902’s LEDs will blink fastly until the checking/downloading process is completed. Upon verification of checksum, the new code image will then be saved into the Flash. If TFTP/HTTP/FTP/HTTPS fails for any reason (e.g. TFTP/HTTP/FTP/HTTPS server is not responding, there are no code image files available for upgrade, or checksum test fails, etc), the UC902 will stop the TFTP/HTTP/FTP/HTTPS process and simply boot using the existing code image in the flash.
- Firmware upgrade may take as long as 3 to 8 minutes over Internet, or just 1 minutes if it is performed on a LAN. It is recommended to conduct firmware upgrade in a controlled LAN environment if possible. For users who do not have a local firmware upgrade server.
- Htek’s latest firmware is available at <http://www.htek.com> → Support → Firmware Download.
- Oversea users are strongly recommended to download the binary files and upgrade firmware locally in a controlled LAN environment.

To upgrade manually via the Web configuration interface

1. Click Management → Upgrade
2. Click Brower or the blank.

3. Select the firmware (fw902.rom)and then click [Upgrade](#) .

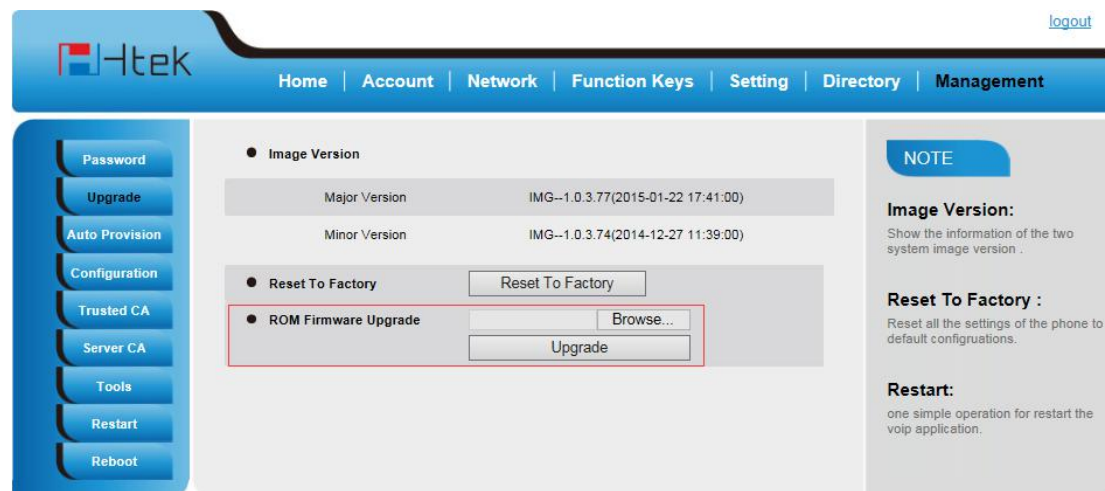


Image Version

Major Version	IMG--1.0.3.77(2015-01-22 17:41:00)
Minor Version	IMG--1.0.3.74(2014-12-27 11:39:00)

Reset To Factory [Reset To Factory](#)

ROM Firmware Upgrade [Browse...](#) [Upgrade](#)

NOTE

Image Version:
Show the information of the two system image version .


Reset To Factory :
Reset all the settings of the phone to default configurations.

Restart:
one simple operation for restart the voip application.

Configuration File

To download configuration file:

1. Click Management → Configuration →Download Device Configuration
2. Then you can get a file: cfg.bin or cfg.xml

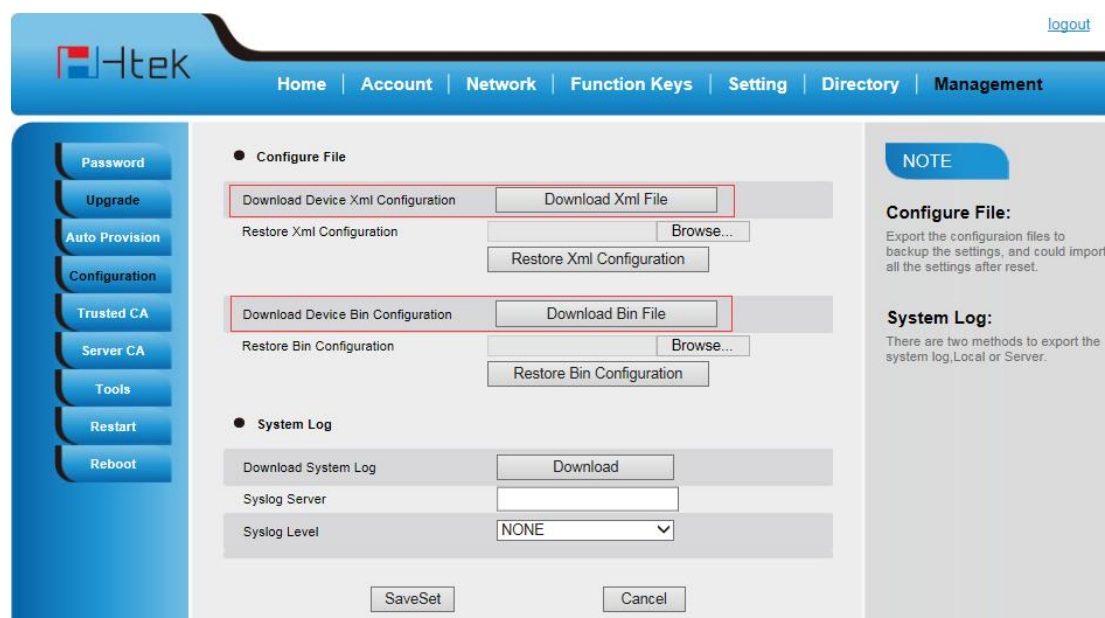

Configure File

[Download Device Xml Configuration](#) [Download Xml File](#)

[Restore Xml Configuration](#) [Browse...](#) [Restore Xml Configuration](#)

[Download Device Bin Configuration](#) [Download Bin File](#)

[Restore Bin Configuration](#) [Browse...](#) [Restore Bin Configuration](#)

System Log

[Download System Log](#) [Download](#)

Syslog Server

Syslog Level

[SaveSet](#) [Cancel](#)

NOTE


Configure File:
Export the configuraion files to backup the settings, and could import all the settings after reset.

System Log:
There are two methods to export the system log,Local or Server.

To Restore a configuration file:

1. Click Management → Configuration → Restore configuration

- Select the xxx.bin or xxx.xml file, and then Click the **Restore Bin Configuration**, then IP Phone will reboot.

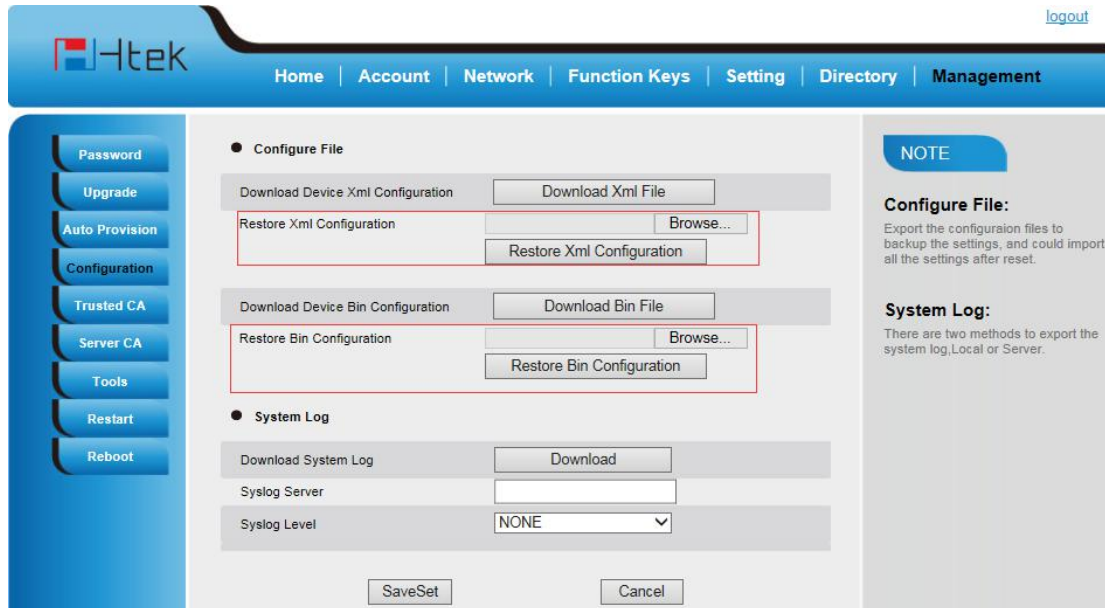

Troubleshooting

Why is the phone LCD screen blank?

- Ensure your phone is properly plugged into a functional AC outlet.
- Ensure that the phone isn't plugged into a plug controlled by a switch that is off.
- If the phone is plugged into a power strip, try plugging it directly into a wall outlet instead.
- If your phone is powered from PoE, ensure you use a PoE compliant switch or hub, or contact your system administrator for more information.
- Check that the power LED is on to ensure the phone is powered on.

Why does the phone display "Network Unavailable"?

- Ensure that the Ethernet cable is plugged into the Internet port on the phone and the Ethernet cable is not loose.
- Ensure that the switch or hub in your network is operational.
- Contact your system administrator for more information.

Why can't I get a dial tone?

- Check for any loose connections and that the phone has been installed properly. For the


Installation instructions, refer to [Phone Installation](#).

- Check whether dial tone is present on one of the audio modes.
- Switch between the Handset, Headset (if present) or Hands-Free Speakerphone to check whether dial tone is present for one of the audio modes.
- If the dial tone exists on another audio mode, connect a different handset or headset to isolate the problem.

Where to set the tone?

You can set the tone on web interface:

- Click Setting→Tones
- Define the dial tone, ringing, busy tone...
- For the tones, you can check with your system administrator.
- More Click [Tone Notes](#).

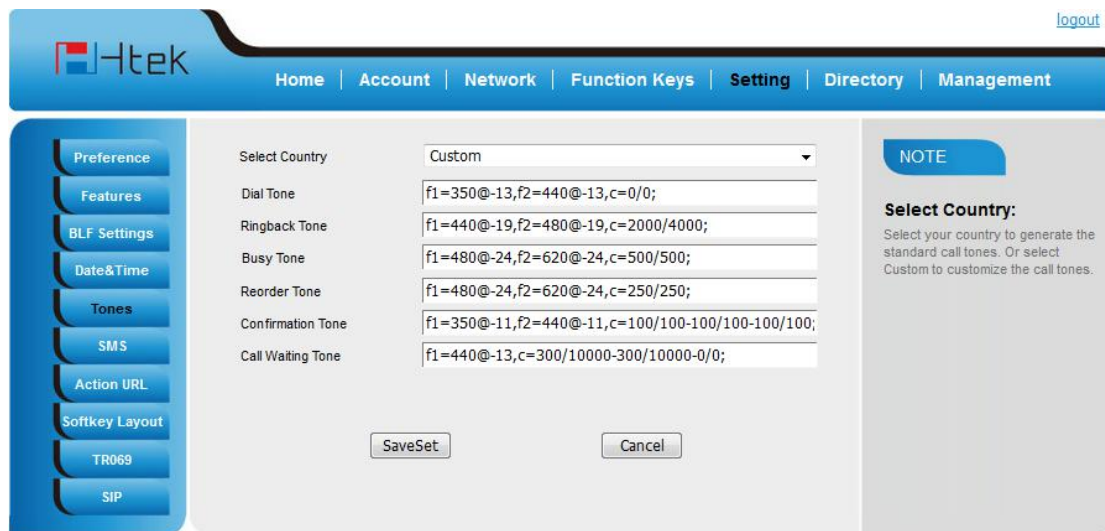


How to download XML Configuration?

- Click Management→Configuration→ [Download Xml File](#)

How to Import Trusted CA certificate?

- Click Management→Trusted CA

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Password

Upgrade

Auto Provision

Configuration

Trusted CA

Server CA

Tools

Restart

Reboot

Index	Issued TO	Issued By	Expiration
1			<input type="checkbox"/>
2			<input type="checkbox"/>
3			<input type="checkbox"/>
4			<input type="checkbox"/>
5			<input type="checkbox"/>
6			<input type="checkbox"/>
7			<input type="checkbox"/>
8			<input type="checkbox"/>
9			<input type="checkbox"/>
10			<input type="checkbox"/>

[Delete](#)

Import Trusted Certificate Files [Browse...](#)

Trusted Certificates

☒ Default Certificates
☐ Custom Certificates
☐ All Certificates

NOTE


Password:
If you login as an administrator, you can modify admin's password here.

Trusted CA:
you can import TLS certificate file here.

How to Import Server CA certificate?

- Click Management→Server CA

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Password

Upgrade

Auto Provision

Configuration

Trusted CA

Server CA

Tools

Restart

Reboot

Issued TO	Issued By	Expiration

[Delete](#)

Import Server Certificate Files [Browse...](#)

Device Certificates

☒ Default Certificates
☐ Custom Certificates

NOTE

Password:
If you login as an administrator, you can modify admin's password here.

Trusted CA:
you can import TLS certificate file here.

How to use Vlan?

- For Vlan information, please click [VLAN Note](#)

How to use LLDP?

- For LLDP information, please click [VLAN Note](#)
- VLAN Notes including:
 1. Voice VLAN
 2. Major Benefits of Using VLANs
 3. VLAN discovery method on Htek ip phones
 4. LLDP Feature on Htek IP Phones
 5. Supported TLVS of IP Phones
 6. Configuring LLDP Feature
 7. DHCP VLAN
 8. Open the DHCP VLAN on the Htek IP Phones
 9. VLAN under Bridge Mode
 10. VLAN under NAT Mode

How to Set LCD and Web GUI?

- Click [LCD and Web GUI custom Guide](#)

How to Upgrade via FTP?

- Click [How to Upgrade Note](#)

How to make Ringtone?

- Click [How to Make Ringtone](#)

How to use Open VPN?

- Click [Open VPN note](#)

Provisioning Guide on Free PBX

- Click [Set Auto Provision on FreePBX](#)

Redundancy Server

- Click [Redundancy Server](#)

How to Use Auto Provision Phonebook?

- Click [About AP Phonebook](#)

All Documents

- Click [Documents Guide](#), you can get all tech files.